



Instruction Manual

Thank you for purchasing this product.
Before using this product please read the instructions carefully.
After reading the instruction sheet, please keep it with you for reference.

 
Although the instruction manual states that the products is for the PlayStation®4 system,
it is also compatible with the PlayStation®3 system.
Please also refer to our website (<http://www.hori.jp/support/>) for additional information.

Caution



- Keep this product out of the reach of children under 3.
- Keep this product away from small children. Seek medical advice immediately if it is swallowed.
- Keep the controller away from dusty or humid areas.
- Do not apply strong impact or weight on the product.
- Do not pull roughly or bend the cable of the controller.
- Do not pull out the buttons of this product.
- Never disassemble, repair or modify this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzine or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.
- Since it may cause failure, do not touch the stereo headphone/microphone/USB mouse terminals directly.
- Please do not look directly into the red optical sensor. There is the possibility for eye damage.

Includes



Keyboard Controller...X1
Mouse...X1

Compatible models

PlayStation®4 / PlayStation®3 / PC

Important

Before using this product with PlayStation®4 and PlayStation®3,
be sure to check the instruction manual of each hardware console.

 
Depending on the console software version, not all functions may be available.
In that case, please upgrade to the latest system software before use.
(PlayStation®4 Ver.4.73 or later recommended, PlayStation®3 Ver.2.80 or later recommended) Please refer to your console's user manual for system software version check and update instructions.

This product does not feature light bar, motion sensors. In addition, this product does not support features other than those described. Please note this product may not support some PlayStation®4 and PlayStation®3 standard software. For details, please visit our website (<http://www.hori.jp/>) or contact us.

*This product will not work on the PlayStation®2, PlayStation®1, or PS one.

*This product is not a wireless controller or wireless mouse.

Part names

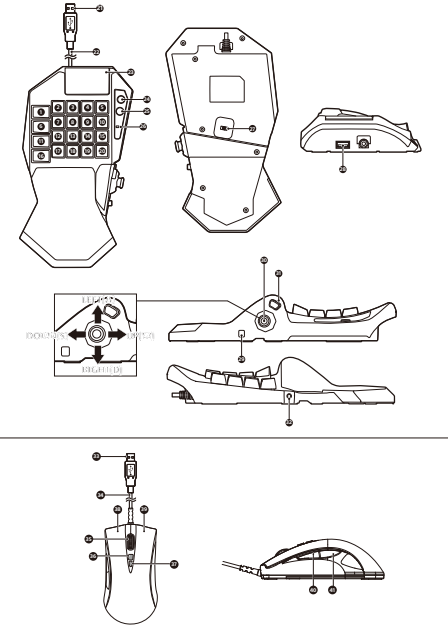


How to connect

- Insert the USB connector of the mouse into the USB port of the keyboard controller.
In addition to the included mouse, other USB compliant mice may be used.
*Not compatible with all mice. *Compatibility with mice not endorsed by Sony Interactive Entertainment Europe.
- Please insert the USB connector of the controller into the USB port of the PlayStation®4.
*Please set the PS4™/PS3™ System Toggle Switch to the desired console before connecting the product.
- Once the system is turned on, press and hold the PS button on the HORI controller.
- Select a User Profile with the HORI controller to activate the controller as Player 1 or Player 2.
*Select "Guest" or a different User Profile with the HORI controller to activate the controller as Player 2.

If your controller is not being recognized by your PlayStation®4, please try the following steps

 - Check to see if your console has the latest updates on your firmware and software.
- Restart your console.
- Unplug and re-plug your HORI controller into your PlayStation®4.
- Follow steps 1-3 of "How to Connect"



PlayStation®4 / PlayStation®3 / PC System Toggle Switch

 
The Platform Toggle Switch toggles between PlayStation®4 and PlayStation®3 compatibility.
Switch the toggle switch to the desired platform before connecting.



USB port


This product has one USB port specifically for connecting a mouse.

- * Please do not plug in anything besides a mouse.
- * There is no guarantee that anything besides a mouse will function.
- * Because there is protection against excess electrical current use, do not plug in any type of USB memory or USB charger.
- * Please note that we cannot be held responsible for any type of data loss due to user misuse.
- * This product uses up to 300mA.
- * If a connected product is not functioning properly, it may be due to protection against excess electrical current. Please try unplugging the mouse from the keyboard and the keyboard from the PlayStation®4 console and reconnecting everything again. If it still does not function, please use another device.




Snipe Button

 Hold the Snipe Button to temporarily reduce mouse sensitivity for increased accuracy.
Sensitivity can be adjusted using the TAC software.



Touchpad Functionality

 This product features DUALSHOCK™4 Touchpad functionality.
The area of the touch pad is as shown below.




Defaults (button assign, sensitivity settings)

How to reset to default settings (all profiles)

Resets each button and each sensitivity setting to its default state in all profiles.


<How to switch>

 - Press and hold down the FN button and PS button simultaneously for 3~5 seconds.
- Reset is complete once the profile LED flashes.



Palm Rest Adjustment

 While pressing down on the Palm Rest Adjustment Button and sliding the Palm Rest, you can adjust the position of the Palm Rest to fit your hand size.

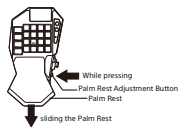

About the Mouse

The included mouse uses an infrared sensor.
*The infrared sensor may not function properly on top of the following materials.
*Transparent material such as glass
*Reflective material such as a mirror
*Red color material
*Mesh or any similarly patterned material

- ☒ Please do not look directly into the red optical sensor. There is the possibility for eye damage.

Expansion port (PlayStation®4 only)

Connect the headset into the Expansion port.

Before placing a headset onto your ears, make sure to lower the volume completely.

- ☒ Headset usage at high volumes for extended periods of time may result in permanent hearing damage.

- ☒ If the volume is raised too high, there may be sudden loud noises that may damage your ears.



Assign Mode (Button Assignment) Function

Each button function can be changed using the TAC Software.

Buttons marked with * in "Part names" can be assigned

Button functions that can be assigned

PlayStation®4	PlayStation®3	PC(Gamepad mode)
Options Button L2 Button R2 Button R1 Button X Button Triangle Button Left analog stick (T) L1 Button L2 Button Square Button L3 Button Left analog stick (+) Left analog stick (L) Left analog stick (R) R3 Button Circle Button	START Button L1 Button L2 Button R1 Button R2 Button X Button Triangle Button Left analog stick (T) L1 Button L2 Button Square Button L3 Button Left analog stick (+) Left analog stick (L) Left analog stick (R) R3 Button Circle Button	START Button L1 Button L2 Button R1 Button R2 Button X Button Triangle Button Left analog stick (T) L1 Button L2 Button Square Button L3 Button Left analog stick (+) Left analog stick (L) Left analog stick (R) R3 Button Circle Button

PC(Keyboard mode)

Alphabet	Number	Function	Special key	Other	Numeric keypad	Original	Mouse function
A-Z	0-9	F1-F12	Esc, Tab, Caps Lock, Shift, Ctrl, Alt, Space, Enter, Back Space, Delete	Print Screen, Scroll Lock, Pause/Break, Insert, Home, Delete, End, Page Up, Page Down	Num Lock, Num/, Num*, Num+, Num-, Num Enter, Num, Num0, Num1	MC (My function), FN	Right Mouse Button, Left Mouse Button, Scroll Wheel, Forward, Back, Scroll up, Scroll down

Profile Change Function

Button layouts for the PlayStation®4, PlayStation®3 and PC (Gamepad mode, Keyboard mode) can be saved to 8 different profiles. Profiles can easily be switched.

<How to switch>

- While holding down on the FN button, press the corresponding button as shown in the chart.
- Profile will be switched.

- ☒ The FN button function will also work even if it is assigned to another button.

Profile	How to set	Profile LED
1	FN Button + 1	Lights off
2	FN Button + 2	Green
3	FN Button + 3	Yellow
4	FN Button + 4	Red
5	FN Button + 5	Purple
6	FN Button + 6	Blue
7	FN Button + 7	Light blue
8	FN Button + 8	White

	PlayStation®4	PlayStation®3	PC(Gamepad mode)	PlayStation®4 / PC(Keyboard mode)
●	OPTIONS Button*	START Button *		ESC Key *
●	L2 Button *	L1 Button *	LT Button *	1 Key *
●	R2 Button *	R1 Button *	RT Button *	2 Key *
●	R1 Button *	R2 Button *	RB Button *	3 Key *
●	X Button *	A Button *	A Button *	4 Key *
●	△ Button *	Y Button *	O Button *	TAB Key *
●	Left analog stick [T] *			W Key *
●	L1 Button *	L2 Button *	LB Button *	E Key *
●	□ Button *	X Button *	X Button *	R Key *
●	L3 Button *	LSB Button *		LEFT SHIFT Key *
●	Left analog stick [+] *			A Key *
●	Left analog stick [L] *			S Key *
●	Left analog stick [R] *			D Key *
●	R3 Button *	RSB Button *	F Key *	F Key *
●	○ Button *	B Button *		LEFT CTRL Key *
●	FN Button *			
●	Snipe Button *			X Key *
●	○ Button *	B Button *		C Key *
●	Walk Button *			V Key *
●		Connector		
●		Connector cable (1.0m / 3.3ft)		
●	Touch pad functionality *	X Button *	A Button *	M Key *
●	PS Button *	GUIDE Button *		Windows Key *
●	SHARE Button *	SELECT Button *	BACK Button *	Enter Key *
●		Profile LED		
●		PS4™ / PS3™ / PC System Toggle Switch		
●		USB port		
●		Palm Rest Adjustment Button		
●	Directional Pad			Back/ESC Key
●	With analog touch, No function *			Windows: open Start menu
●	X Button *	A Button *		Space Key *
●	Extension port *			
●		Connector		
●		Mouse Cable (1.0m / 3.3ft)		
●	Left analog touch, No function *	Left analog touch, No function *	Left analog touch, No function *	Left analog touch, No function *
●		Sensitivity Up		
●		Sensitivity Down		
●	R2 Button *	R1 Button *	R1 Button *	Left click *
●	L1 Button *	L2 Button *	LT Button *	Right click *
●	L3 Button *	L2 Button *	LB Button *	Forward *
●	R1 Button *	R2 Button *	RB Button *	Back *

* Other buttons may be assigned. (To assign button function, please refer to the Assign Mode instructions.)


* The FN button will not work for the PlayStation®3 or PlayStation®3 system. * Lights on.

Mouse Sensitivity Adjustment

Mouse sensitivity can be adjusted with 4 increments.


<How to set>
Press the (+) button to increase or (-) button to decrease dpi.

dpi	1600	2000	2800	3200
-----	------	------	------	------

 

FN button

 The function of the Analog Stick and Direction Keys are switched as below while the FN key is held down.



Quick Button

Pressing the quick button maximizes mouse output value.
Movement of the mouse translates to maximum lateral movement of the first person view.
Select from 4 settings within the TAC software to adjust maximum movement speed.



Walk Button

Pressing the left analog stick keys while holding the Walk button is similar to slightly tilting the left analog stick of a conventional controller.

Sensitivity can be adjusted using the TAC software.



THE FCC WANTS YOU TO KNOW
These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Plug the equipment into a different outlet.
• Consult the equipment manufacturer or a qualified technician for assistance.

For iOS
The normal function of the product may be disturbed by strong electro-magnetic interference.
If so, simply reset the product to restore normal operation by following the instruction manual (How to connect).
In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product.
The wires are not to be inserted into socket outlets.
Retain the packaging and manual for future reference.

PRODUCT DISPOSAL INFORMATION
Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe.
To ensure the correct waste treatment of the product and battery please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries.
In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste. Applicable to EU countries only.

Warranty
For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other reasons pertaining to our products, please address directly to HORI at info@hori.jp.

Please retain contact information for future reference.
The image on the packaging may differ from the actual product.
The manufacturer reserves the right to change the product design or specifications without notice.
HORI and HORI logo are registered trademarks of HORI.

*"PS", "PlayStation", "DUALSHOCK", "PS4" and "XBOX" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved.
Licensed for sale in Europe, Africa, Middle East, Russia, India and Oceania. For use exclusively with PlayStation®4.

Designed by HORI in Japan



Manuel d'instruction

Merci d'avoir acheté ce produit.
Merci de lire attentivement les instructions avant d'utiliser ce produit.
Après avoir lu le feuillet d'instructions, conservez-le pour une future utilisation.

Bien que le manuel d'instruction mentionne PlayStation®4,
ce produit est aussi compatible avec la PlayStation®3.
Merci de consulter notre site internet (<http://www.hori.jp/support/>) pour tout autre information.

Attention



Attention

- Conserver ce produit hors de portée d'enfants de moins de 3 ans.
- Conserver ce produit à l'écart d'enfants en bas âge. Consulter immédiatement un médecin en cas d'ingestion.
- Ne pas conserver ce produit dans un milieu poussiéreux ou humide.
- Ne pas exercer de forte pression ou de choc sur le produit.
- Ne pas tirer ou plier le câble de connexion fortement.
- Merci de ne pas tirer sur les boutons de ce produit.
- Ne jamais désassembler, réparer ou modifier ce produit.
- Pour nettoyer le produit, merci d'utiliser un chiffon sec et souple. Ne jamais utiliser de produits chimiques tels que le benzène ou du diluant.
- Ne pas utiliser le produit à d'autres fins que celui initialement énoncé. Nous ne sommes pas responsable pour tout accident ou dommage arising avec un usage autre que celui prévu par le produit.
- Merci de ne pas toucher les sorties stereo/ micro/ USB puisqu'il peut causer un dysfonctionnement.
- Merci de ne pas regarder directement le détecteur optique infrarouge. Il peut y avoir un risque de lésions oculaires.

Inclus



Clavier...X1
Souris...X1

Modèles compatible

PlayStation®4 / PlayStation®3 / PC

Important

Avant d'utiliser ce produit avec votre PlayStation4 ou PlayStation3, assurez-vous de lire attentivement le manuel d'instruction de chaque console.

 
Selon la version logicielle de votre console, toutes les fonctions ne sont pas forcément disponibles.
Dans ce cas, merci de mettre à jour votre système avec la dernière version du logiciel avant utilisation.
(Playstation®4 Ver 4.0 ou ultérieure recommandée / Playstation®3 Ver 2.80 ou ultérieure recommandée)
Merci de consulter le guide d'instruction de votre console pour la vérification de la version de votre logiciel.

La barre lumineuse ou le capteur de mouvement ne sont pas fournis dans le produit. De plus, ce produit n'est pas compatible avec des produits autres que ceux spécifiés précédemment.
Notes certifiées pour PS4, PS3 peuvent être incompatibles.
Pour plus d'informations merci de nous contacter ou visiter notre site web (<http://www.hori.jp>)

* Ce produit ne fonctionne pas pour une PlayStation2, Playstation ou PS one.

* Ce produit est flammé.


Nom des éléments

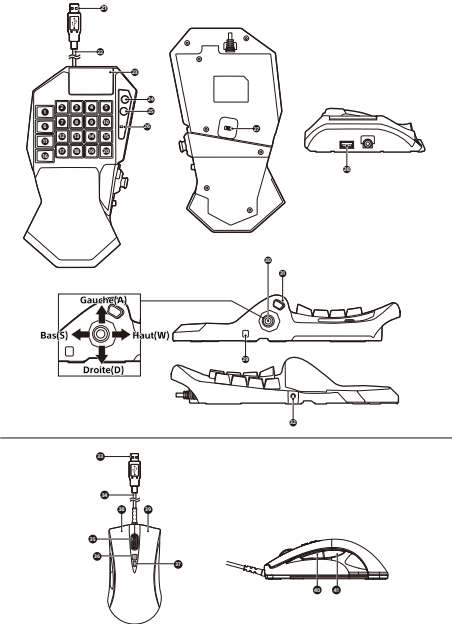

Comment se connecter

- Insérez le connecteur USB de la souris dans le port USB du clavier.
- En plus de la souris fournie, tout autre souris USB peut être utilisé. Non compatible avec toutes les souris.
*Compatibilité non testée par Sony Interactive Entertainment pour les souris.
- Merci de bien vouloir insérer la prise USB de l'accessoire dans le port USB de la PlayStation4.
Merci de régler le commutateur PS4/ PS3 sur la console souhaitée avant de brancher le produit.
- Une fois la console allumée, maintenez appuyé le bouton PS de la manette HORI.
- Sélectionnez un périphérique avec la manette HORI pour activer la manette tant que bouton 1 ou bouton 2.
Sélectionnez "Test" ou un profil différent avec la manette HORI pour éteindre la manette en tant que bouton 2.

 - ☒ Si la manette n'est pas reconnue par votre système PlayStation®4, merci de suivre les étapes suivantes
- Regardez si votre console possède la dernière mise à jour du logiciel et micrologiciel.
 - Redémarrez votre console.
 - Débranchez et rebranchez votre manette HORI de votre PlayStation4.
 - Suivez les étapes 1 à 3 de la partie "Connexion".



Vers le port USB de la manette-clavier
Vers le port USB de la PlayStation4/ Playstation3

Interrupteurs système PlayStation®4 / Playstation®3

L'interrupteur de Plateforme permet de basculer la compatibilité de la manette entre Playstation4 et Playstation3. Basculer l'interrupteur vers la plateforme désirée avant de vous connecter.

 


Connecté au système PlayStation4
Connecté au système PlayStation3 / PC
Utiliser en tant que clavier

Port USB

Ce produit à un port USB spécialement destiné à connecter la souris.


- *Merci de ne rien connecter à l'exception de votre souris.
- *Il n'y a aucune garantie qu'autre chose qu'une souris fonctionne sur ce produit.
- *Merci de ne pas connecter de clif USB ou de chargeur USB puisqu'il y a une protection contre l'utilisation excessive du courant électrique.
- *Merci de noter que nous ne nous tenons pas responsable pour toute perte de donnée liée à une mauvaise utilisation du produit.
- *Ce produit utilise jusqu'à 200mA.
- *Si un produit connecté ne fonctionne pas correctement, cela peut être dû à la protection contre une utilisation excessive du courant électrique. Essayez de déconnecter la souris du clavier et du système PlayStation4 et de les reconnecter. Si cela ne fonctionne toujours pas, merci d'utiliser un autre appareil.



port USB

Repose-poignet ajustable

 Tout en appuyant sur le bouton d'ajustement du repose-poignet et en glissant le repose-poignet, vous pouvez ajuster la position de celui-ci pour l'adapter à la taille de votre main.

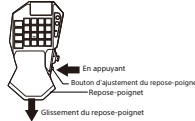

A propos de la souris

La souris fournie utilise un capteur infrarouge.

Le capteur infrarouge peut ne pas fonctionner correctement sur les surface suivantes:

- Surfaces transparentes comme le verre
- Surface réfléchissante comme un miroir
- Surface de couleur rouge
- Maille ou toute surface similaire

- ☒ Merci de ne pas regarder directement le capteur optique rouge.
Il peut y avoir un risque de lésions oculaires

 
Port d'extension (Seulement Playstation®4)

Connecter le casque dans le port d'extension.

Avant de positionner le casque sur vos oreilles, assurez-vous d'avoir complètement baissé le volume.

- ☒ L'écoute prolongée à un volume élevé peut endommager votre audition de manière permanente.

- ☒ Si le volume est augmenté trop haut, certains sons peuvent vous endommager l'audition.



Mode Assignment (assignement de touche)

Chaque bouton peut être changé en utilisant le logiciel TAC.

Les boutons notifiés d'une * dans "nom de la partie" peuvent être assignés

Boutons qui peuvent être assignés
PlayStation®4
1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000

