


ASRock Motherboard
Quick Installation Guide




The content of this documentation will be subject to change without notice. The illustrations in this documentation are provided for reference only and may slightly differ from actual product appearances. If you need to contact ASRock or want to know more about ASRock, you're welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.

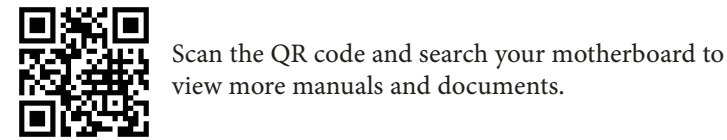


P/N: 15G062474002AK V1.1


AMD AM4 CPU

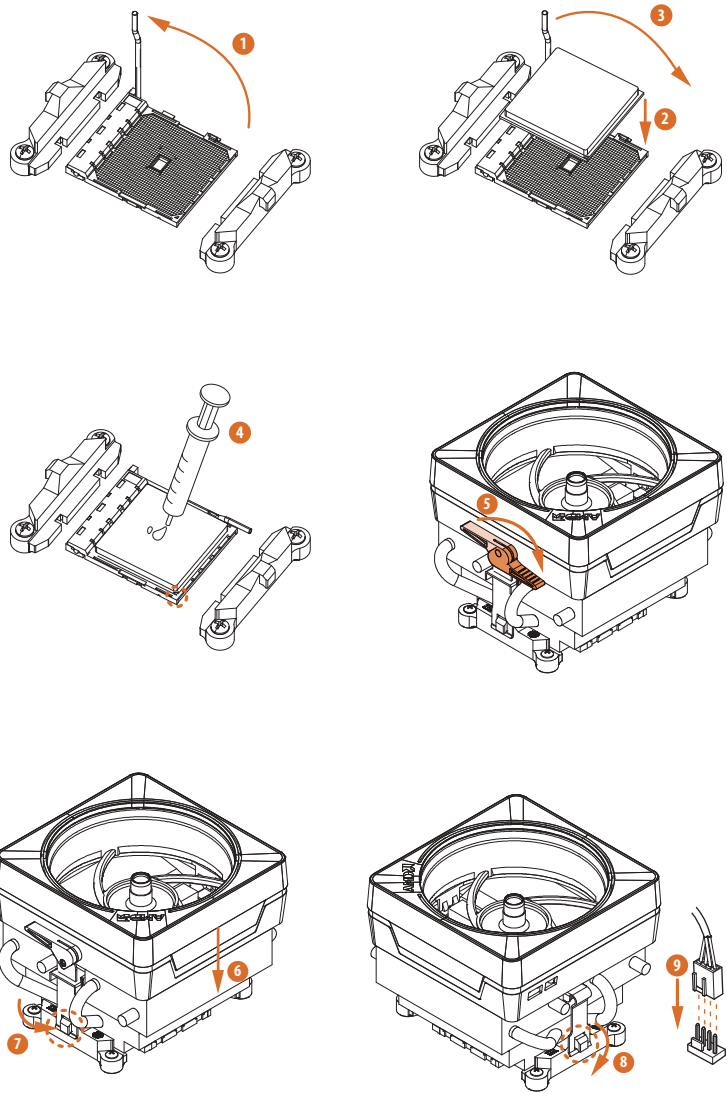


AMD AM5 CPU

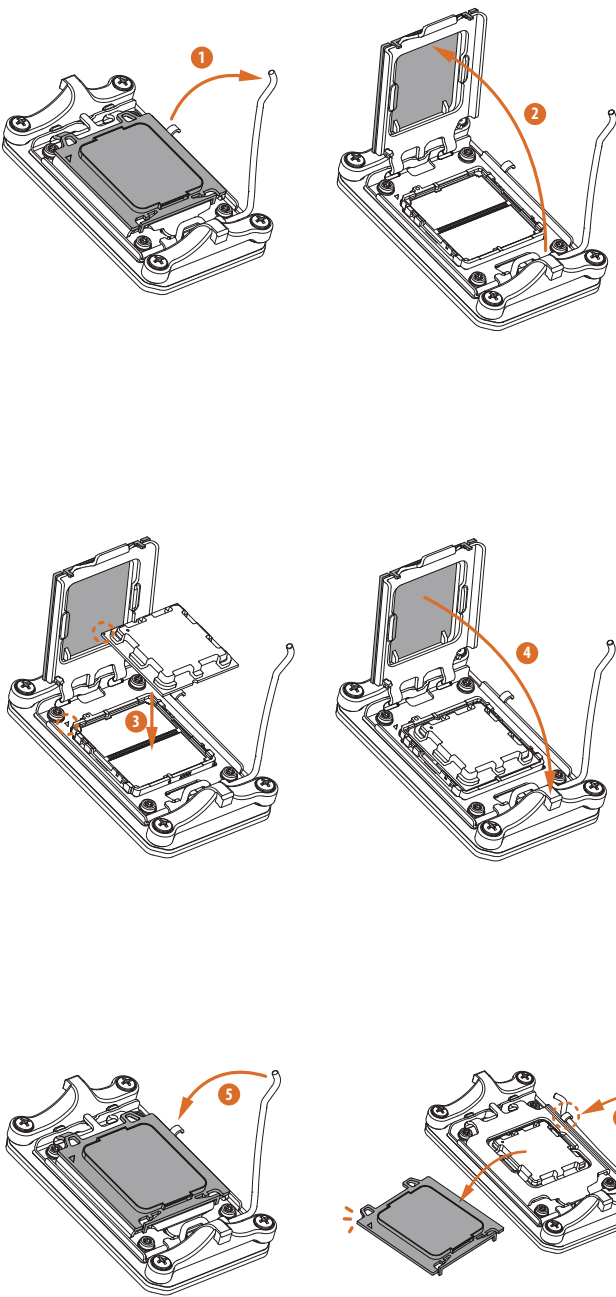


Intel 17XX / 18XX CPU

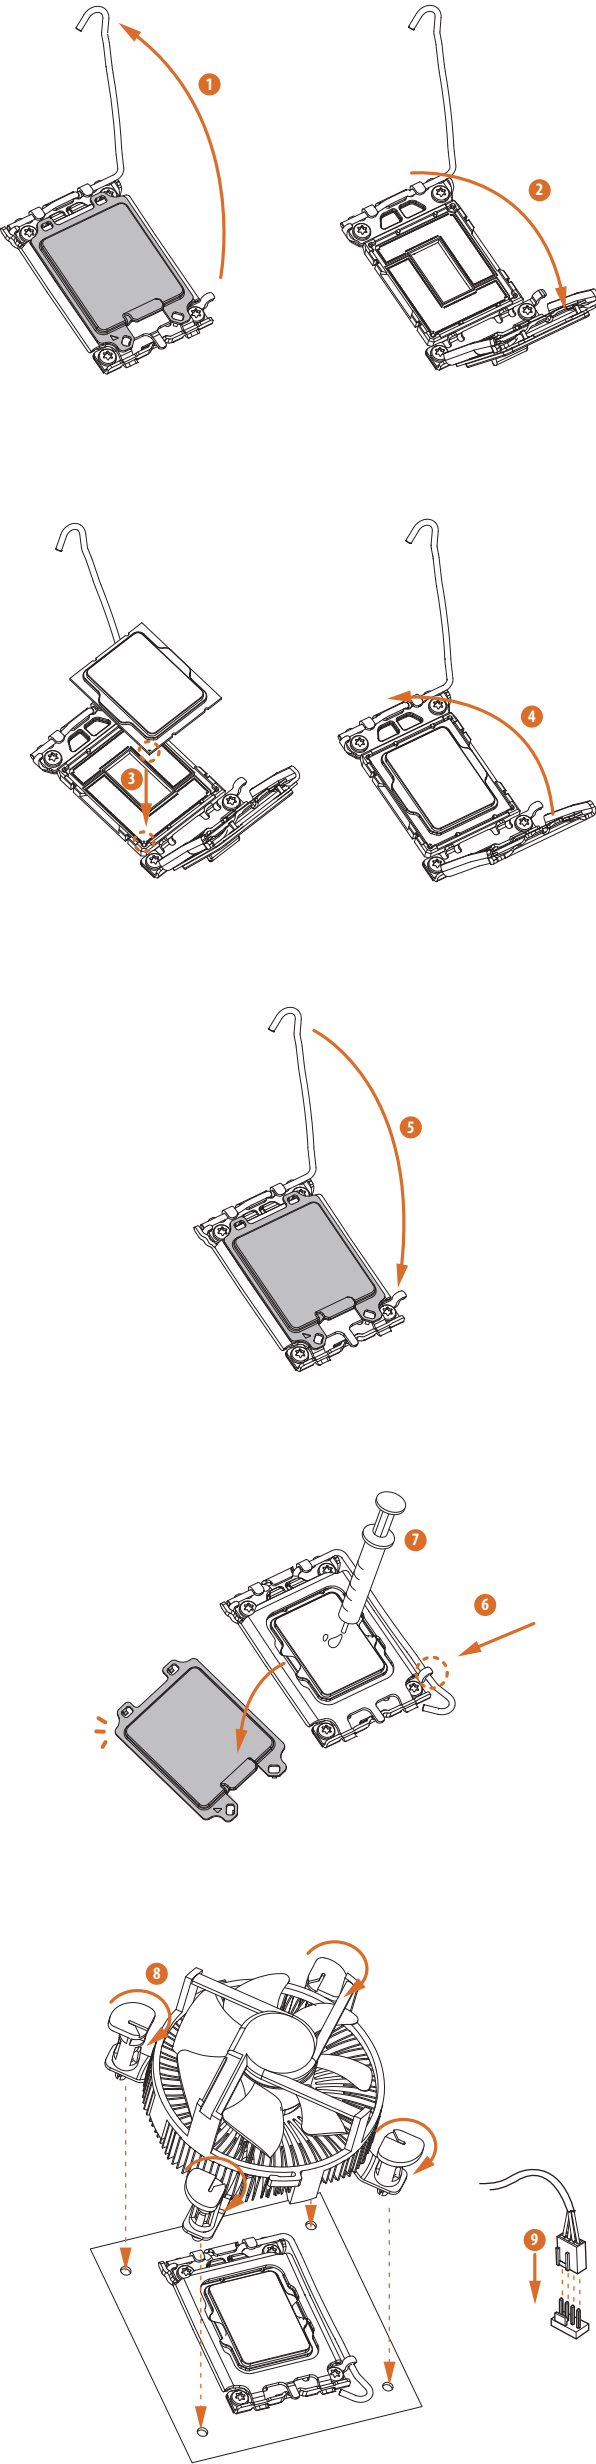

AMD TR4 / sWRX8 / sTRX4 / sTR5 CPU

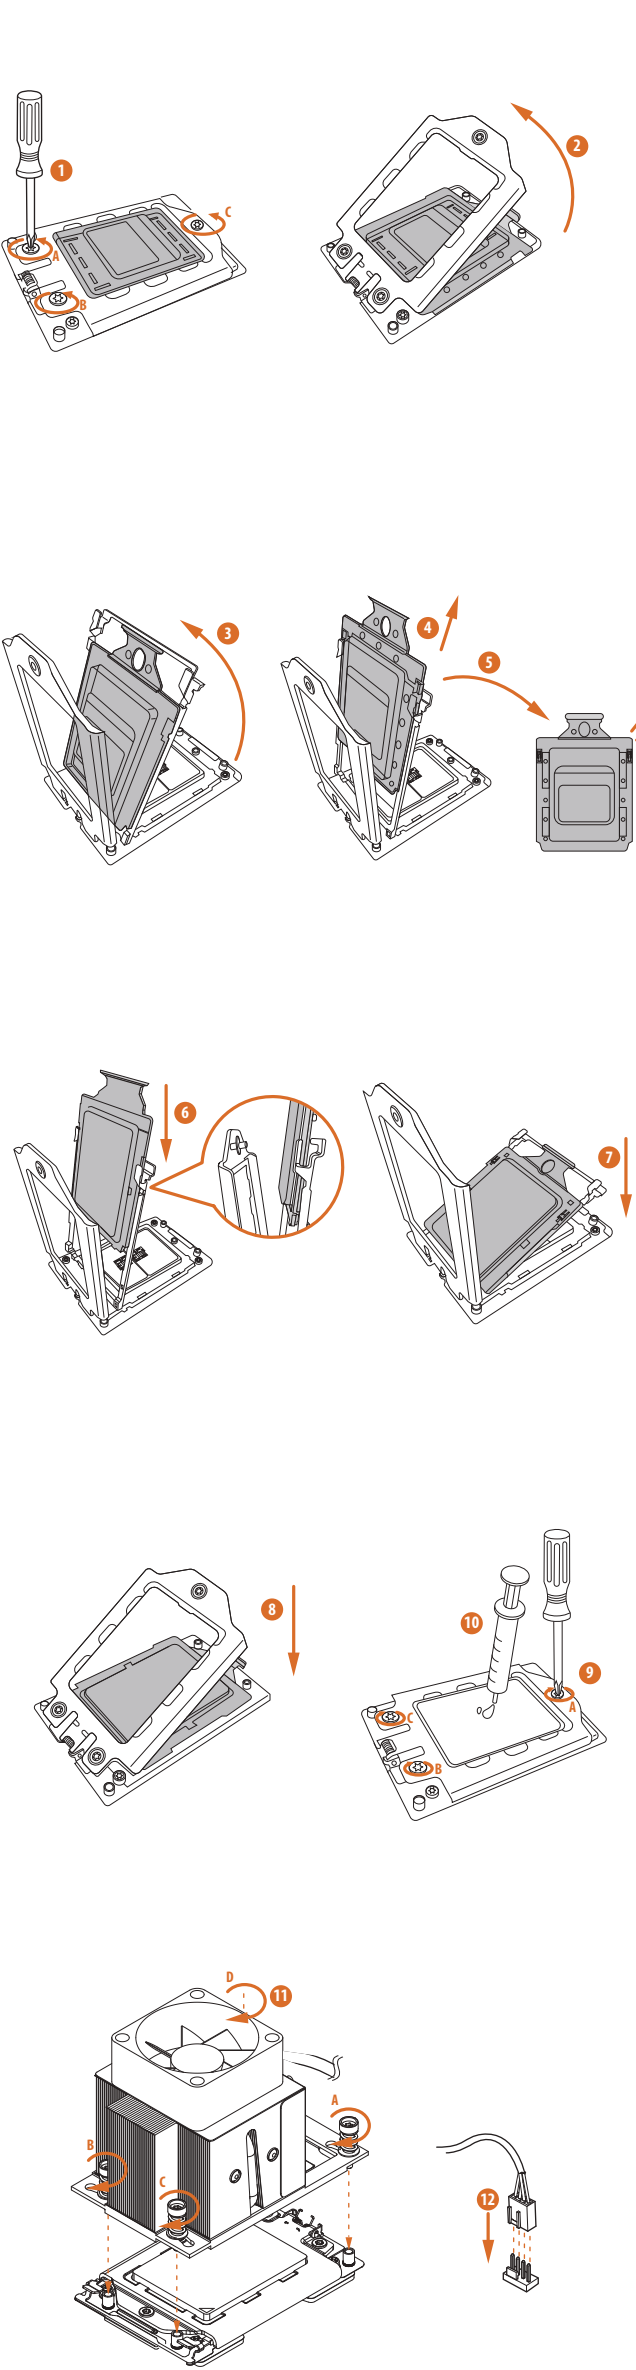


Intel 4677 CPU



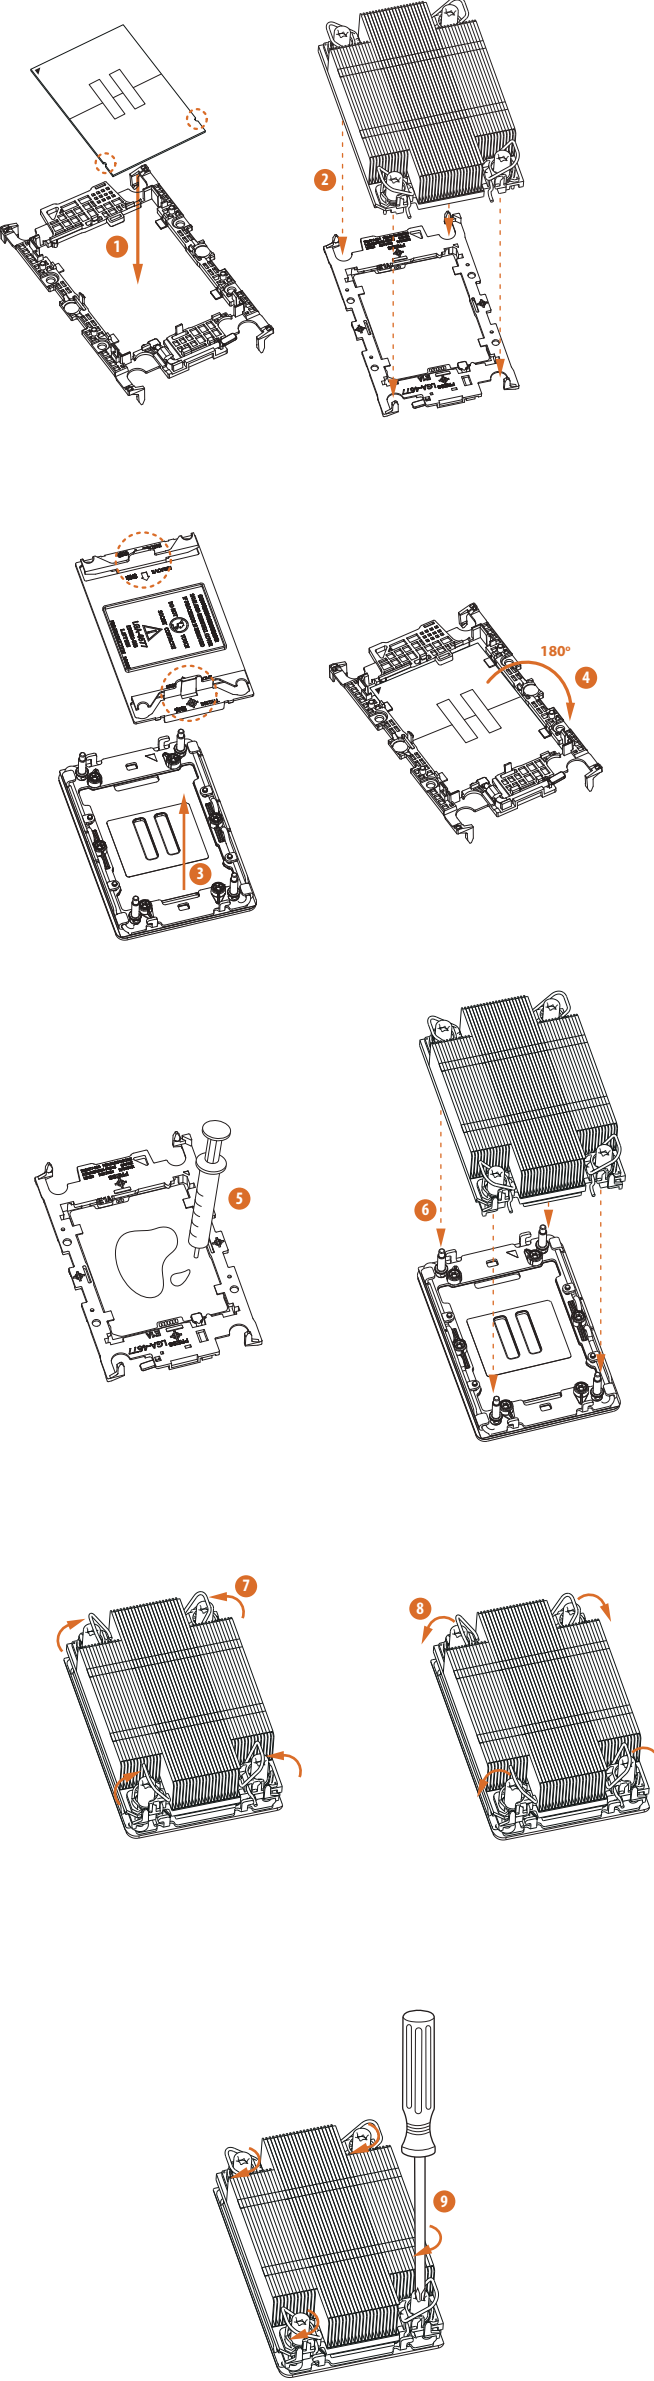


	A1	A2	B1	B2
1 DIMM		✓		
2 DIMMs		✓		✓
4 DIMMs	✓	✓	✓	✓


1

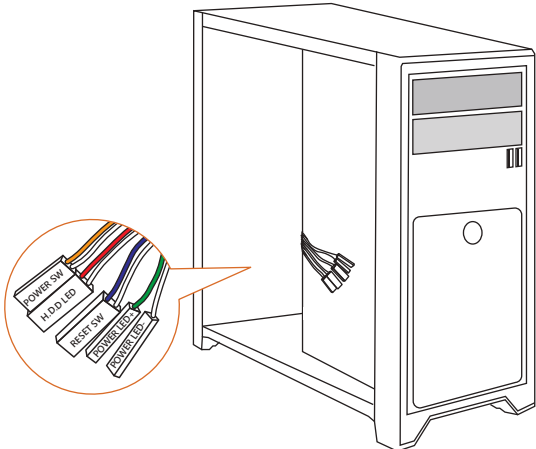


2

 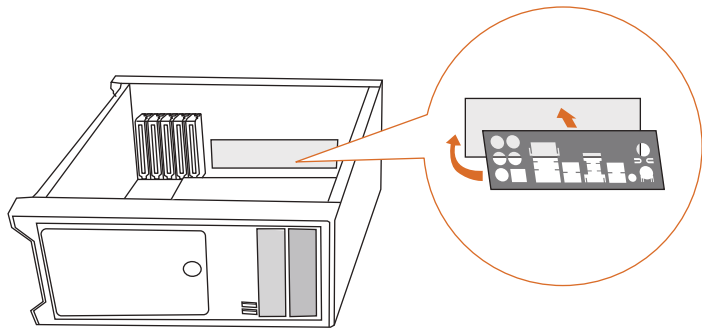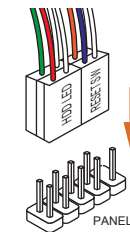


1

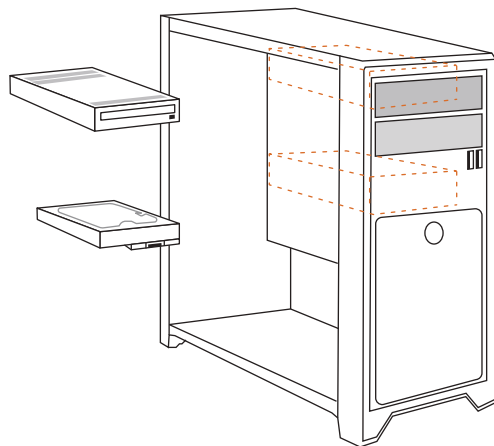


2

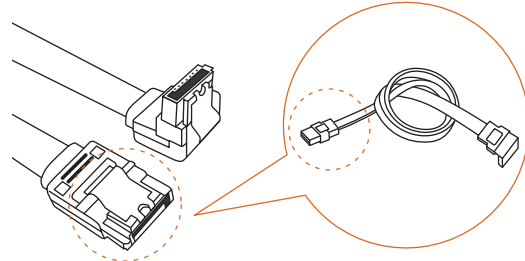


3

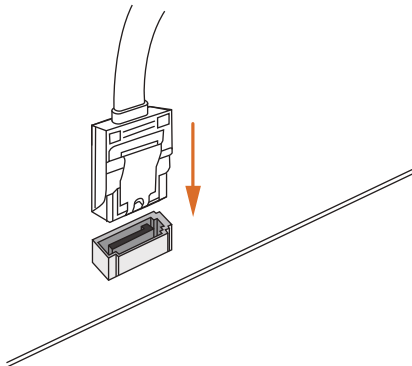

4

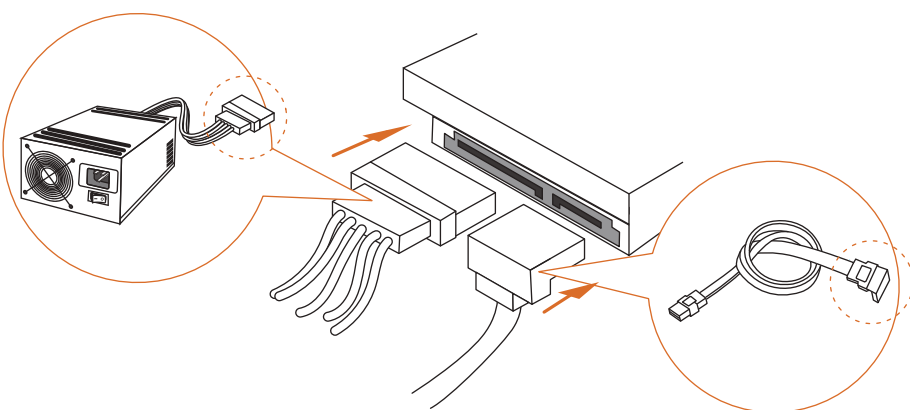




1

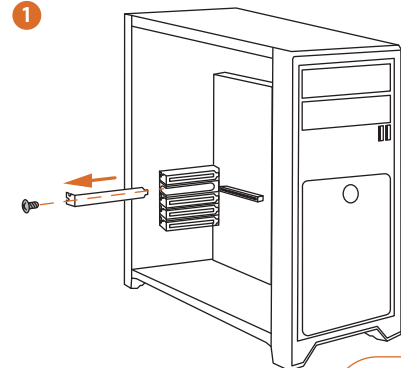

2

3

4

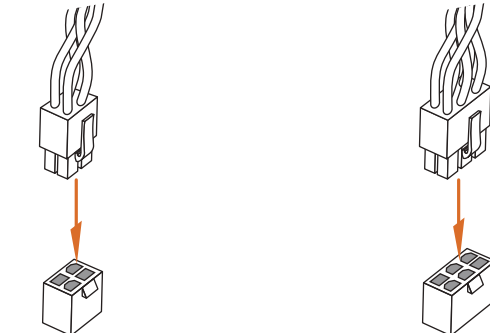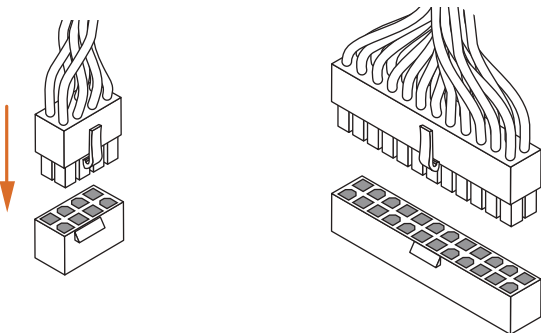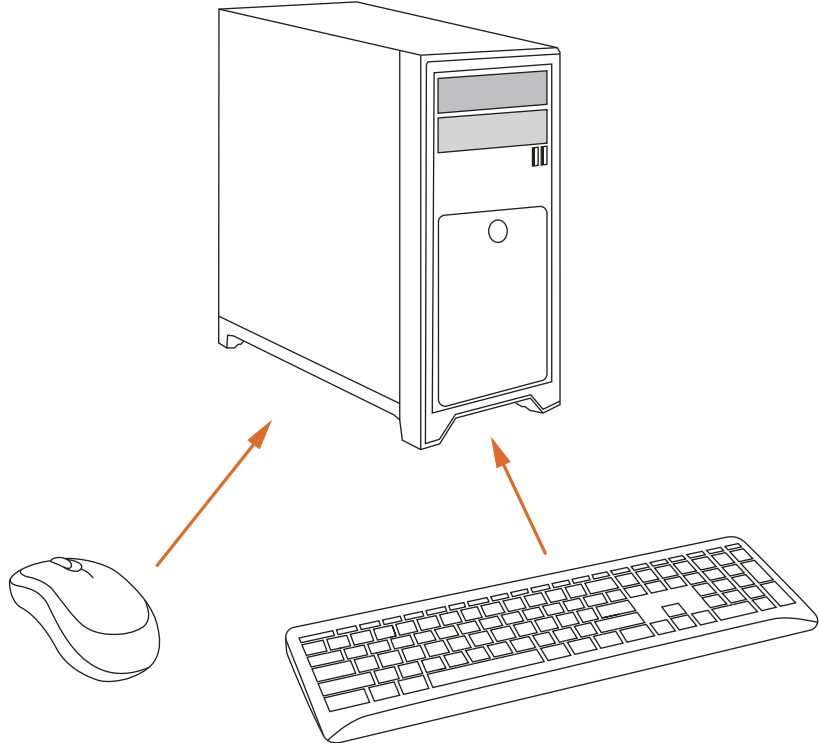

The diagram illustrates the connection of the power cord. On the left, a power outlet is shown with a red lightning bolt indicating it is powered. A power cord with a two-prong plug is shown being inserted into the outlet, labeled with a red '2'. On the right, the power cord is shown being inserted into the back of a device, labeled with a red '1'. A red lightning bolt indicates the device is powered.

●

3

4