

Instrukcje+ — Uprozczone instrukcje obsługi.

Energizer

Energizer BTS566
Bluetooth Party
Speaker



Energizer BTS566 Bluetooth Party Speaker Instrukcja obsługi

[Strona główna](#) » [Energizer](#) » Energizer BTS566 Bluetooth Party Speaker
Instrukcja obsługi 



zawartość

- 1 Energizer BTS566 Głośnik imprezowy Bluetooth**
- 2 Informacje o produkcie**
- 3 Zawartość opakowania**
- 4. Działanie połączenia Bluetooth**
- 5 Rozwiązywanie problemów**
- 6 Instrukcja ładowania**
- 7 INSTRUKCJA DOTYCZĄCA WYGLĄDU I KLUCZA**
- 8 Schematyczny schemat zdalnego sterowania i instrukcje obsługi**
- 9 Specjalnych Efektów Dźwiękowych**
- 10 Instrukcja bezpieczeństwa**
- 11 najczęściej zadawanych pytań (FAQ)**
- 12 Dokumenty/zasoby**
 - 12.1 Odniesienia**
- 13 Powiązane posty**



Energizer BTS566 Głośnik Bluetooth na imprezę

Informacje o produkcie

- Specyfikacja: Nazwa modelu: BTS566
- Jednostka głośnikowa: dwa pełnozakresowe głośniki 6,5 cala + 2-calowy głośnik wysokotonowy
- Moc RMS: 50 W
- PMPO: 900 W

- Wersja Bluetooth: 5.3
- Zasięg działania: 10M
- Typ EQ: Wewnętrzny/zewnętrzny
- Czas odtwarzania: około 2 godzin i 15 minut przy 100% głośności, około 6 godzin przy 50% głośności
- Czas ładowania: 5H
- Wsparcie: BT, karta TF, gitara, AUX, USB, TWS, MIC
- Pasma przenoszenia: 60Hz-12KHz
- Typ ogniwa: Akumulator litowo-jonowy
- Pojemność baterii: DC 7,4 V 6,6 Ah 48,84 Wh
- Napięcie wejściowe: DC 12V 1,5A
- Moc znamionowa: USB-A 5V 1A
- Wymiary: 600(dł.)*246(szer.)*268(wys.)mm
- Waga: 5,5 kg ± 10 g

*W zależności od aktywności użytkownika, korzystanie z efektów świetlnych LED i połączenia mikrofonowego lub innych funkcji wielofunkcyjnych może również wpływać na czas odtwarzania.

Zawartość opakowania

- Głośnik Bluetooth Energizer_BTS566
- Zasilacz DC 12V, 1,5A UK
- Zasilacz DC 12V, 1,5A UE
- Kabel AUX
-  • Zdalne sterowanie
- Instrukcja obsługi
- Mikrofon bezprzewodowy

Działanie połączenia Bluetooth

Włącz głośnik, aby przejść do trybu Bluetooth, a następnie włącz Bluetooth na swoim urządzeniu i wyszukaj nazwę Bluetooth głośnika: Energizer_BTS566 w celu sparowania. Jeśli pojawi się monit o hasło do sparowania, wpisz „0000” i kliknij potwierdź połączenie.

Obsługa wewnętrznego nagrywania Bluetooth

1. Włóż kartę TF lub dysk USB i przełącz na tryb Bluetooth.
2. Odtwarzaj muzykę na swoim urządzeniu.
3. Podłącz mikrofon przewodowy lub bezprzewodowy.
4. Naciśnij krótko przycisk nagrywania, aby rozpocząć wewnętrzne nagrywanie Bluetooth
5. Naciśnij krótko przycisk nagrywania, aby zakończyć wewnętrzne nagrywanie i odtworzyć wewnętrzny plik nagrania.

Działanie połączenia TWS

1. W trybie Bluetooth naciśnij krótko przycisk TWS na obu głośnikach, aby sparować. Dźwięk powiadomienia wskazuje, że TWS jest połączone. Naciśnij długo, aby rozłączyć TWS.
2. Optymalna odległość połączenia między dwoma głośnikami Bluetooth wynosi około 5 metrów.



Rozwiązywanie problemów

1. Automatyczne wyłączenie po włączeniu.

Bateria jest słaba. Przed użyciem należy ją całkowicie naładować.

2. The player automatically shuts down or restarts

The battery is low, please fully charge it before use.

3. The charging light is not on, not charging

Check if the adapter is plugged in correctly or damaged, please use 12V-1.5A adapter for recharging the speaker.

4. Bluetooth status is silent

Check if Bluetooth is paired correctly, and the connect device's volume is not at the minimum.

5. TF card/USB drive playback is silent

Check if the TF card is insert correctly, the USB drive is not insert in place or in good contact, the music format in the TF card or USB drive is correct, or



If the device volume is adjusted to the minimum (Note: The music in the TF card/USB drive mainly supports MP3 compressed audio files and WMA lossless audio files playback).

6. Recording doesn't work

Whether there is space in the TF card or USB drive, delete some files to reserve storage space.

Recording should be in TF card mode or USB drive mode, and a wired microphone should be inserted.

7. **The recording cannot be deleted**

Long press the record button when playing the recording file or connect to a computer to delete it.

8. **The recording sound is low or there is noise**

Use a wired microphone or wireless microphone when recording.

Charging Instruction

1. To protect the performance of the battery, avoid using the speaker while charging.
2. Please use 12V 1.5A adapter included in the package for recharging the battery.
3. The red light is on during charging, the red light will turn off and the green light will turn on when it is fully charged.

IC Caution:

Wireless microphone operation

1. Long press to power ON/OFF.
2. When the microphone is not connected to the device, the display will flicker slowly. When the microphone is successfully connected to the device, the display screen will stop flashing and display a steady state. The display blinks quickly when the battery is low.
3. When wireless microphone battery is dead, you can twist the microphone to the left and replace the No.5 AA battery. Please pay attention to the positive and negative poles when replacing the battery.
4. **Howling:** Please do not put the microphone close to the speaker device. Please try to put the microphone a little bit away from or the back of the speaker device, or try to turn down the volume of microphone.

5. Low microphone volume/No microphone volume: Please make sure the microphone volume is turned up to the maximum.

RSS-Gen Issue 5 “&” RSS-Gen numéro 5 – English

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation,

Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may  cause undesired operation of the device.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INSTRUCTION FOR APPEARANCE AND KEY

1.  : Short press to turn on the color light, long press to turn off the color light.
2.  : Short press switch to previous song when playing music.
3.  : Short press switch to the next song when playing music.
4.  : Power on/off.
5.  : Short press switch to Bluetooth, TF card, AUX, USB drive. Long press switch to TWS.
6. **【 EQ 】** : Short press switch two sound effect, EQ1 is indoor, EQ2 is outdoor.
7.  : Short press to play or pause. When in Bluetooth mode, long press play key to disconnect Bluetooth.
8.  : Short press to switch to repeat one song or repeat the playlist, long press to turn on or turn off the microphone priority function.
9. **【Microphone Knob】** : Turn to the left to decrease the microphone volume, and to the right to increase the microphone volume.
10. **【Reverb Slider】** : Slide up to increase the reverb volume, slide down to decrease the reverb volume.

11. **【Instrument Slider】** : Slide up to increase instrument volume, slide down to decrease instrument volume.
12. **【Treble Slider】** : Slide up to increase treble volume, slide down to decrease treble volume.
13. **【Bass Slider】** : Slide up to increase bass volume, slide down to decrease bass volume.
14. **【Volume knob】** : Slide up to increase bass volume, slide down to decrease bass volume.
15. **【GUITAR】** : Insert an instruments to play.
16. **【MIC】** : Insert a wired microphone to sing.
17. **【AUX】** : AUX audio input.
18. **【USB】** : Insert USB drive to play MP3 music (Max capacity for USB mode is 64 GB, above 64 GB will not work).
19. **【TF】** : Insert TF card to play MP3 music (Max capacity for TF card mode is 64 GB, above 64 GB will not work).
20. **【USB OUTPUT】** : connect other USB device using a compatible USB cable to begin charging.
21. **【DC IN】** : Recharge the battery with an adapter.
22. **【Charging indicator】** : The red light is on during charging, the red light will turn off and the green light will turn on when it is fully charged.

Remote Schematic Diagram and Operation Instructions

1. Under normal circumstances, the remote control should be used within the receiving range within 6 meters and 30 degrees from the device receiver.
2. When using the remote, please aim at the receiving window of the speaker. There should be no obstacles between the remote and the speaker.
3. If the receiving window of the speaker is placed under a strong sunlight, the operation panel of the remote may malfunction. In this case, please move the speaker away to avoid direct sunlight exposure.
4. When the remote is out of battery, please replace the battery .

Please check the remote batteries regularly to see if they need to be replaced.

Special Sound Effect

1. Screaming Sound Effect
2. Applauding Sound Effect
3. Whistling Sound Effect
4. Kissing Sound Effect
5. Hitting/Slapping Sound Effect
6. Gun firing Sound Effect
7. Booring Sound Effect





Safety Instruction

- Avoid water, heat, fire, penetration of the product, and severe drops at all times.

- Do not insert other objects into ports other than the original assigned connectors.
- Do not clean the product with water or other cleaning products, clean the exterior with a lightly wetted cloth or napkin.
- Any intentional and physical damage to the product will not be under the warranty conditions.
- Fully charge the battery before first use to maximize the battery life.

Please respect below points in order to increase the efficiency of the battery life:

- Turn off the speaker before charging.
- Connect the charger socket to the speaker first, then plug in the adapter plug.
- On the first usage of this device, the speaker may be turned off before the first discharging process and during music playing time. So, for two or more times, it is necessary to restart the speaker to play music until the battery is fully discharged. This means that the battery has been completely discharged the charging light turns red or the charging indicator is minimized (depending on the model).
- Then charge the battery for 7-8 hours until the charging light turns green.
- It is strongly recommended not to charge the battery for more than 8 hours.



PowerSafe Management

Guarantees against short circuit and over-charging for your power bank and devices.

Customer Service

For any question about the product, please contact us at service@energizerpowerpacks.com

©2024 Energizer. Energizer, Energizer Character and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by TennRich International Corp..

Frequently Asked Questions (FAQ)

Q: What should I do if the speaker automatically shuts down when turned on?

A: The battery is low, please fully charge it before use.



Q: Why is Bluetooth status silent?

A: Check if Bluetooth is paired correctly, and ensure the connected device's volume is not at the minimum.

Documents / Resources

	Energizer BTS566 Bluetooth Party Speaker [pdf] User Manual BTS566, BTS566 Bluetooth Party Speaker, BTS566, Bluetooth Party Speaker, Party Speaker, Speaker
--	---

References

- [User Manual](#)

Manuals+ , Polityka prywatności

Ta strona internetowa jest niezależną publikacją i nie jest ani powiązana, ani popierana przez żadnego z właścicieli znaków towarowych. Znak słowny „Bluetooth®” i logo są zarejestrowanymi znakami towarowymi należącymi do Bluetooth SIG, Inc. Znak słowny „Wi-Fi®” i logo są zarejestrowanymi znakami towarowymi należącymi do Wi-Fi Alliance. Jakiegokolwiek użycie tych znaków na tej stronie internetowej nie oznacza żadnego powiązania ani poparcia.

