

Strona główna » muse » Muse MT-120 MB Turntable Micro System Instrukcja obsługi



zawartość

- 1 MT-120 MB Gramofon Micro System**
- 2 MT-120 MB**
- 3 Instrukcje użytkowania produktu**
- 4- OBROTOWY MIKRO SYSTEM**
- 5 DANE TECHNICZNE**
- 6 KONSERWACJA**
- 7 INFORMACJE DOTYCZĄCE BEZPIECZEŃSTWA**
- 8 Dokumenty / Zasoby**
 - 8.1 Odniesienia**



MT-120 MB Gramofon Mikro System



MT-120 MB

MT-120 MB to gramofonowy mikrosystem, który umożliwia odtwarzanie płyt winylowych, płyt CD, USB i źródeł aux-in. Posiada również łączność Bluetooth i możliwość kodowania muzyki z różnych źródeł na USB. Urządzenie jest dostarczane z instrukcją użytkownika, która zawiera szczegółowe instrukcje dotyczące jego użytkowania.

Instrukcje użytkowania produktu

Podłączenie głośników

Najpierw podłącz przewody głośnikowe do zacisków głośnikowych z tyłu urządzenia. Upewnij się, że przewód lewego głośnika jest podłączony do lewego zacisku, a przewód prawego głośnika do prawego zacisku.

Włączanie/wyłączanie zasilania

Włącz urządzenie, naciskając przełącznik POWER ON/OFF (19).

Wybór funkcji

Wybierz żądaną funkcję, naciskając przycisk FUNCTION (5) wielokrotnie, aż żądana funkcja

zostanie wyświetlona na ekranie.

Dostępne funkcje to Vinyl, CD, USB, Aux-In i Bluetooth.

Odtwarzanie płyt winylowych

Aby odtworzyć płyty winylowe, wybierz funkcję Vinyl i umieść płytę na talerzu gramofonu (24). Wybierz żadaną prędkość za pomocą SELEKTORA PRĘDKOŚCI (25) i delikatnie przesun ramię gramofonu (26) do krawędzi płyty, aby rozpocząć odtwarzanie.

Odtwarzanie płyt CD

Aby odtwarzać płyty CD, wybierz funkcję CD i naciśnij przycisk OPEN/CLOSE (13), aby otworzyć tackę na płyty. Umieść płytę CD na tacy i naciśnij przycisk ponownie, aby ją zamknąć. Użyj przycisków /P- i /P+ (6 i 7), aby wybrać utwory, a następnie naciśnij przycisk PLAY/PAUSE (8), aby rozpocząć odtwarzanie.

Odtwarzanie USB

Aby odtwarzać muzykę z urządzenia USB, wybierz funkcję USB i podłącz urządzenie do portu USB (2). Użyj przycisków /P- i /P+ (6 i 7), aby wybrać utwory i naciśnij przycisk PLAY/PAUSE (8), aby rozpocząć odtwarzanie.

Odtwarzanie Aux-In

Aby odtwarzać muzykę z urządzenia zewnętrznego, takiego jak telefon lub odtwarzacz MP3, podłącz go do gniazda AUX IN (17) za pomocą kabla audio. Wybierz funkcję Aux-In i rozpocznij odtwarzanie muzyki na urządzeniu zewnętrznym.

Połączenie Bluetooth

Aby połączyć urządzenie Bluetooth, wybierz funkcję Bluetooth i włącz Bluetooth na swoim urządzeniu. Wyszukaj dostępne urządzenia i wybierz „MT-120 MB”, aby je sparować. Jeśli zostaniesz o to poproszony, wprowadź kod dostępu „0000”. Po połączeniu możesz odtwarzać muzykę ze swojego urządzenia Bluetooth.

Encoding Music

The device allows you to encode music from different sources to USB. To do this, connect the USB device to the USB port (2) and select the desired encoding source (Vinyl, CD, FM, or Bluetooth). Press the REC button (10) to start encoding. Use the / button (6) to select ONE or ALL track encoding mode.


Troubleshooting

If you experience any issues with the device, refer to the user manual for troubleshooting steps.


TURNTABLE MICRO SYSTEM

LOCATION OF CONTROLS

1. TUNING knob
2. USB port
3. STANDBY indicator
4. STANDBY button
5. FUNCTION button
6.  / P- : PREV button/ Preset stations-
7.  / P+ : NEXT button/ Preset stations+
8.  / ATS : PLAY/ PAUSE button; Auto scan and preset radio stations
9.  STOP button
10. REC (RECORD) button
11. BLUETOOTH indicator
12. REC (RECORD) indicator
13.  To open/ close disc tray
14. VOLUME control
15. FM wire antenna

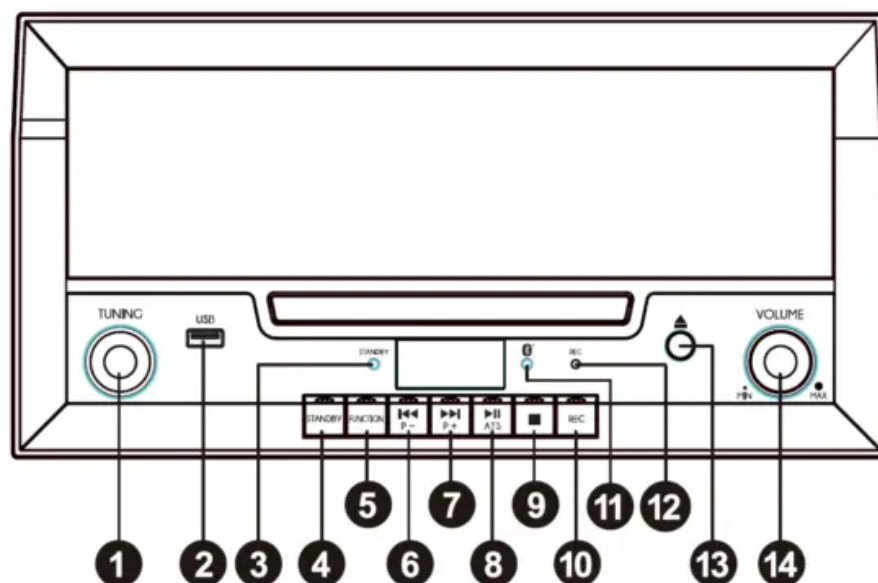


16. Phones jack
17. AUX IN jack
18. LINE OUT: External device output jack
19. POWER ON/OFF switch

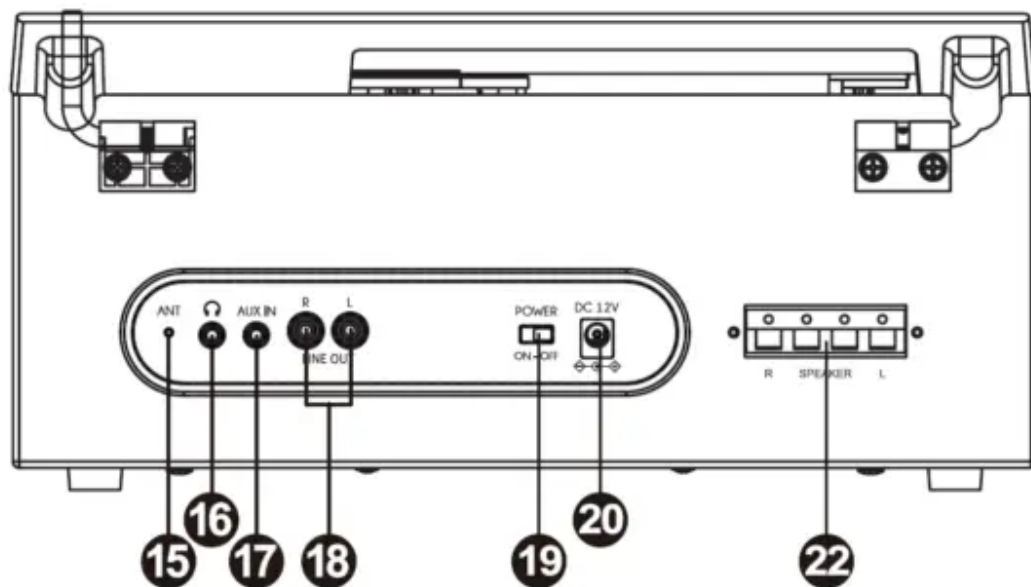

20. DC IN 12V jack

21. Speaker terminals

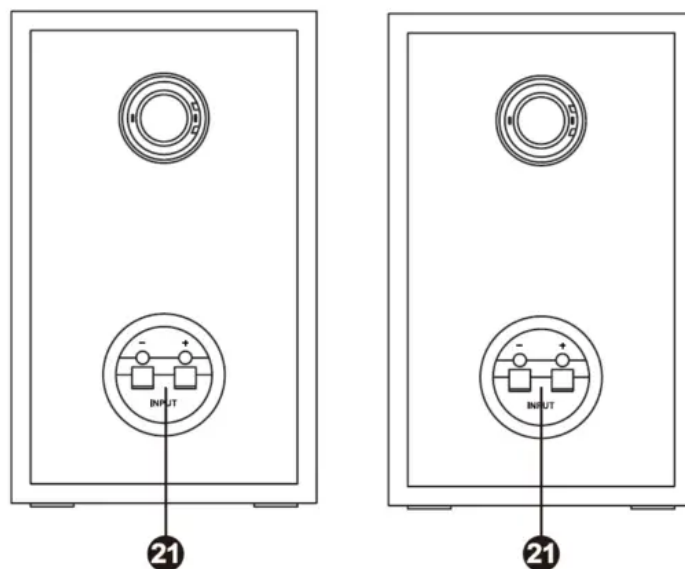

22. Speaker terminals

23. 45RPM adaptor

24. Platter

25. Speed selector (33/45/78)

26. Tone arm


27. AUTO STOP (ON/OFF) Switch

28. Tone arm rest

29. Cartridge with stylus


30. Spindle

31. Lift lever

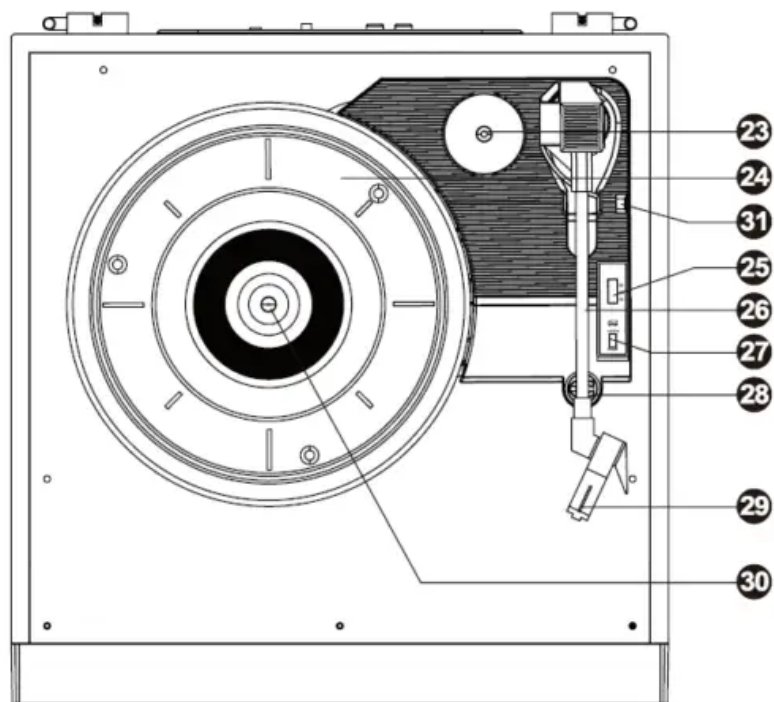


SPEAKER CONNECTION

1. Insert the speaker cables by pushing down the terminal lever of the Left Speaker Terminal and the Right Speaker Terminal.
2. Connect the speaker to Speaker Terminals, with BLACK wire to BLACK terminals and RED wire to RED terminals
 - Push Speaker terminal tab down to insert wire.

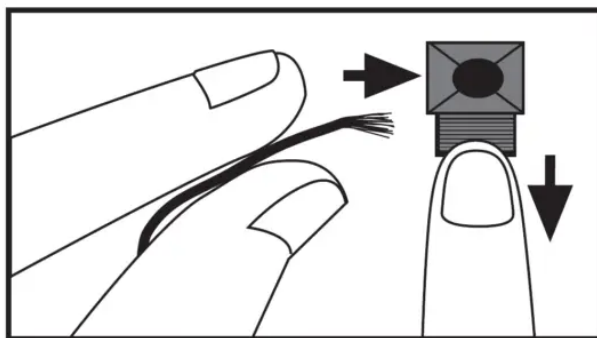

- Release tab to lock wire in the terminal.

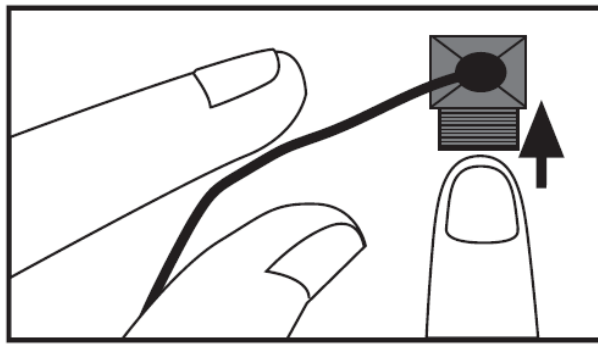


POWER SUPPLY

Using the AC adaptor

AC adaptor:

- Input: 100-240V ~50/60Hz 1.5A
- Output: 12.0V  3.0A

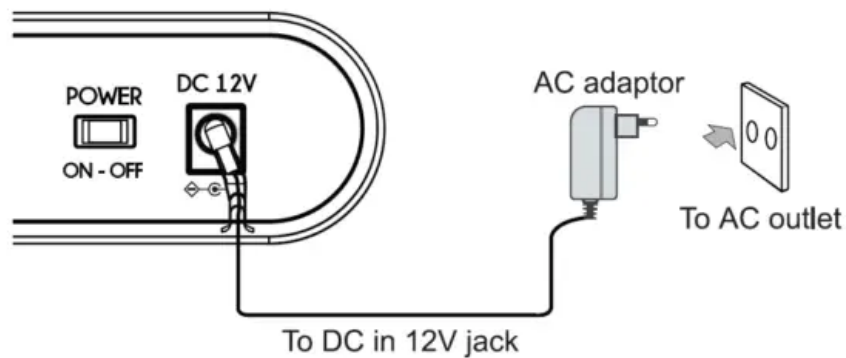

The supplied AC adaptor is suitable for use on AC main supplies of 100-240V~ and should only be connected to a mains supply within these parameters.

In a concern of saving energy, when playback has reached to the end or listening volume is set at a very low level and no control is operated on the device for a period of 10 minutes, the unit will automatically switch to Standby mode.

Cautions:

- * The AC adaptor included with this unit is for its use only. Do not use it with other equipment.
- * Turn off the unit before unplugging the AC adaptor from the unit so as to avoid the unit being damaged.
- * When the unit is not going to be used for long time, disconnect the AC adaptor from the AC outlet.

- * Be sure to use it near the wall outlet and easily accessible. If a malfunction occurs, disconnect the plug from the wall outlet at once.
- * AC adaptor is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the AC adaptor of the apparatus shall be disconnected from the mains socket outlet completely.
- * Never use an AC adaptor that is damaged, route power lead in a safe manner and make sure it is not subjected to trapping or pinching. If the power lead is damaged refer to a qualified service agent.

TURNING ON/OFF THE UNIT

1. To slide the POWER ON/OFF switch to “ON” position on back of unit to go to the standby mode, the STANDBY indicator turns RED, then press STANDBY button to turn the unit ON.
2. To power off the unit, press the STANDBY button, then slide the POWER ON/OFF switch to “OFF” position on back of unit.

SELECTING FUNCTION

The function (FM/ CD/ USB/ PHONO/ AUX/ BLUETOOTH) is selected by pressing FUNCTION button repeatedly.

LISTENING TO THE RADIO

1. When the unit is on, press FUNCTION button to select the FM mode until FM indicator appears on display
2. Fast rotate TUNING knob clockwise or anti-clockwise. The radio will automatically search a station upward or downward and stop at a strong station.
3. Adjust the volume to the desired level.

Automatic storage

Press and hold ATS for few seconds and the unit will automatically save the first 20 FM stations. When you store on a channel already been preset, the previous station will automatically be cleared and replaced by the new station.

Listen to the station presets

1. Press P- / P+ and repeat the operation as many times as necessary to select your station.

2. Adjust the VOLUME to the desired level.

LISTENING TO THE CD DISC/ MP3

1. When the unit is on, press FUNCTION button to select the CD mode until CD indicator appears on display.
2. Press  to open the disc tray. Display shows "OPEN", Insert a disc with label side facing up.
Press  again to close the disc tray. The display will show "--" for few seconds.
3. The total number of track will appear on display and playback starts automatically.
4. Press  to skip forward to the next track or press repeatedly to skip several tracks.
Press  return to the beginning of the track, or press repeatedly to skip backwards several tracks.
Press and hold  or  to search quickly within a track.
5. Press  to suspend momentarily the track playback. Press  again to resume playback.
6. Press  to stop the playback.

USB PLAYBACK

1. Connect a USB device containing MP3 files or MP3 player to the USB port.
2. When the unit is on, press FUNCTION button to select the USB mode until USB indicator appears on display.
3. Adjust the VOLUME to the desired level.
4. Press  to skip forward to the next track or press repeatedly to skip several tracks.
Press  return to the beginning of the track, or press repeatedly to skip backwards several tracks.
5. Press and hold  or  to search quickly within a track.
6. Press  to suspend momentarily the track playback.
Press  again to resume playback.
7. Press  to stop the USB playback.

Removing the USB device

Please be sure to stop playback and turn the unit OFF before removing the USB device to avoid damaging the USB and system.

Note:

- * There are many USB devices in the market. We cannot guarantee to support all different models. Please try another USB device if yours is not supported.
- * The unit might not support all the multimedia files stored in USB because it includes some special playback procedure which might not be compatible with the procedure of this unit.

LISTENING TO THE PHONO

1. When the unit is on, press FUNCTION button to select the phono mode until PHONO indicator appears on display.
2. Remove the stylus cover from the stylus and release the Tone arm rest.
3. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record.

NOTE: If you are playing 45RPM singles, place the 45 RPM adapter on the center spindle.

4. Push up the lift lever to raise the tone arm and gently move the tone arm to the desired position onto the record, push down the lift lever, move the tone arm slowly onto the record to start playing the record.
5. Adjust the VOLUME control to your desired level.
6. If the AUTO STOP ON/OFF Switch is turned ON, the record will stop automatically when playback ends. If Auto Stop switch is turned OFF, record will not stop automatically when playback ends.

Remark: Certain types of records may have an auto-stop area outside the preset limit, so the turntable may stop before the last track finishes. If this occurs, set the AUTO-STOP switch to the “OFF” position. This allows the record to play to the end, but please note that it will not stop automatically. You must manually raise the tone arm and place it back in the rest and then turn off the power to prevent the turntable from spinning

 **IMPORTANT:** Do not turn or stop the Turntable platter manually. Moving or jarring the Turntable platter without securing the Tone Arm Clamp could cause damage to the Tone Arm or Stylus.

CONNECTING AUXILIARY SOURCE

1. Connect your auxiliary source (e.g. mp3 player) to the AUX IN jack (3.5mm) on back of unit. (cable not included).

2. Press FUNCTION button repeatedly to select AUX mode until “**AU**” indicator appear on display.
3. Start playback from your auxiliary source.
4. Adjust the VOLUME to desired level.
5. To stop playback, disconnect your auxiliary source from the AUX IN jack.

BLUETOOTH FUNCTION

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by New One S.A.S is under license. Other trademarks and trade names are those of their respective owners.

Pairing a Bluetooth Device

1. When the unit is ON, press FUNCTION button repeatedly to select Bluetooth mode. The display will show “**bf**” for a few seconds. The Bluetooth indicator will start to blink rapidly
2. On the Bluetooth device, enable Bluetooth and select “MUSE MT-120 MB” from the Device List. (Refer to the user manual of the device to be connected for detailed operations.) You will hear an indication voice when pairing is successful.

Tip: If you want to connect your Bluetooth speaker to another Bluetooth audio device, you need to disconnect current device first and follow the steps above to make a new connection.

- On some devices such as computers, once paired you must select the unit from the Bluetooth menu and choose “Use as Audio Device (stereo)” or similar.
- Pairing remains intact when the unit and/or your Bluetooth device is taken out of communication range. An active connection will be re-established when your Bluetooth device returns within range.
- When the unit is turned on again, it will automatically try to reconnect with the most recently paired Bluetooth device.

Using a Bluetooth Device

1. With a unit paired (see previous section), operate your Bluetooth device and its sound will be heard through the MT-120 MB’s speakers.
2. Press  the button to pause playback. Press again to resume playback.
3. Select desired track with   /  .

4. Adjust the volume using the VOLUME buttons. You can also adjust the volume on the device to which you are paired.

RECORDING THE PHONO

1. Connect the USB device to the USB port (Make sure the USB device have enough space to save the encoding).
2. Follow procedures 1 to 6 in LISTENING TO THE PHONO section. Press the REC button, the REC indicator lights up and "USB" icon flashes, then recording will start.
3. Press  to stop encoding, REC indicator lights off.
4. To listen the recording, repeatedly press FUNCTION button to select the USB mode until USB indicator appear on display, and press   to find the last file in the USB, then the playback starts automatically.

RECORDING THE RADIO

1. Connect the USB device to the USB port (Make sure the USB device have enough space to save the encoding).
2. Follow procedures 1 to 3 in LISTENING TO THE RADIO section. Press the REC button, the REC indicator lights up and "USB" icon flashes, then recording will start.
3. Press  to stop encoding, REC indicator lights off.
4. To listen the recording, repeatedly press FUNCTION button to select the USB mode until USB indicator appear on display, and press   to find the last file in the USB, then the playback starts automatically.

RECORDING THE AUX IN

1. Connect the USB device to the USB port (Make sure the USB device have enough space to save the encoding).
2. Follow procedures 1 to 5 in CONNECTING AUXILIARY SOURCE section. Press the REC button, the REC indicator lights up and "USB" icon flashes, then recording will start.
3. Press  to stop encoding, REC indicator lights off.
4. To listen the recording, repeatedly press FUNCTION button to select the USB mode until USB indicator appear on display, and press   to find the last file in the USB, then the playback starts automatically.

RECORDING THE BLUETOOTH

1. Connect the USB device to the USB port (Make sure the USB device have enough space to save the encoding)
2. Follow procedures 1 to 4 in Using a Bluetooth Device section. Press the REC button, the REC indicator lights up and "USB" icon flashes, then recording will start.
3. Press ■ to stop encoding, REC indicator lights off.
4. To listen the recording, repeatedly press FUNCTION button to select the USB mode until USB indicator appear on display, and press |◀◀ / ▶▶| to find the last file in the USB, then the playback starts automatically.

RECORDING THE CD

1. Connect the USB device to the USB port (Make sure the USB device have enough space to save the encoding).
2. Follow procedures 1 to 6 in LISTENINGTOTHECD DISC/ MP3 section. Press the REC button, the REC icon lights up and "ONE" icon appears in display.
3. Press |◀◀ / ▶▶| to choose ONE (single CD song recording) or ALL (whole CD recording).

- **Single CD song recording:**

<A> Choose "ONE" icon appears on display, press the REC button to confirm the recording.

 The display will appear the "01", then press |◀◀ / ▶▶| to select the song to be recorded,

<C> Press the REC button to confirm the selection and the recording starts, the "USB" icon flashes.

<D> Press ■ to stop encoding or will stop automatically when the song finish.

- **Whole CD recording:**

<A> Choose "ALL" icon appears on display , press the REC button to confirm the recording.

 Then press the REC button again to start the recording, the "USB" icon flashes.

<C> Press ■ to stop encoding or will stop automatically when the CD song finish.

4. To listen the recording, repeatedly press FUNCTION button to select the USB mode until USB indicator appear on display, and press |◀◀ / ▶▶| to find the last file in the USB, then the playback starts automatically.

USING HEADPHONES / EARPHONES (not included)

- Maximum output voltage ≤ 150 mV

HEADPHONE VOLUME WARNING

Connect earphones with the volume set low and increase it if required. Prolonged listening through some earphones at high volume settings can result in hearing damage. When headphones/ earphones are connected, no sound will be emitted from the unit's speaker.

Caution: Avoid listening to sound at levels which may be harmful to your ears



To prevent possible hearing damage, do not listen at high volume levels for long periods.

USING THE RCA LINE OUT JACK

Connect one end of audio cable (cable not included) to the LINE OUT jack on the rear of unit and other end of cable connect to the RCA IN jack or AUX in jack of your other audio drive equipment.

1. Turn on your audio drive equipment.
2. Select one of your favorite mode (PHONO, USB, AUX IN) and start your mode playback.

HOW TO REPLACE THE TURNTABLE STYLUS (NEEDLE)

Removing the Stylus (needle) from the Cartridge

1. Raise the Tone Arm.

To remove the old stylus needle, Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".

2. Remove the stylus by pulling the stylus forward and pushing downward.





Installing the Stylus

1. Hold the tip of the stylus and insert the stylus by pressing as shown in direction “B”.
2. Push the stylus upward as in direction “C” until the stylus locks into the tip position.

TIPS FOR BETTER TURNTABLE PERFORMANCE

1. When opening or closing the turntable cover, handle it gently, gripping it either at the center or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a “back-to-front” motion only.
4. If you must use a needle cleaning fluid, use very sparingly.
5. Gently wipe the dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.

Hereby, NEW ONE S.A.S, declares that this MUSE MT-120 MB is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at www.muse-europe.com

TECHNICAL SPECIFICATIONS

POWER SUPPLY

AC ADAPTOR:

- Input: AC 100-240V~ 50/60Hz 1.5A
- Output: DC 12.0V  3.0A, 36.0W

RADIO

- FM radio: 87.5-108MHz

BLUETOOTH

- Bluetooth Version: V4.2
- Bluetooth: 2.402-2.48GHz
- RF Output Power: 4 dBm
- Working Distance: Up to 10 meters measured in open space (wall and structures may affect range of device)

Specifications and appearance are subject to change without notice.

MAINTENANCE

Cleaning

Be sure to turn the unit off and disconnect the AC adaptor before maintaining the unit.

- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.
- Using solvents, abrasive or alcohol-based products risks damaging the appliance.
- If an object or liquid enters inside the appliance, unplug it immediately and have it checked by  an authorized engineer.

Note on disc

- Do not use irregular shape CDs (example: heart-shaped, octagonal ones). It may result in malfunctions.
- Do not place more than one disc in the disc compartment.

- Do not try to open the disc compartment during playing.
- If there is a scratch, dirt or fingerprints on the disc, it may cause tracking error. Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. Don't store discs in places with high temperatures or high humidity, they can become warped. After playing, store the disc in its case.

Important Note

- Before transporting the unit, remove the disc from the disc compartment.

SAFETY INFORMATION

CAUTION: Risk of Electric shock
DO NOT OPEN

CAUTION: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside the unit. Refer all servicing to qualify personnel.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of “ dangerous voltage” inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam. Class 1 laser product.

WARNING!

- The use of apparatus in moderate climates.
- The Marking plate is located on the back of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Upewnij się, że otwory wentylacyjne nie są zasłonięte gazetami, obrusami, zasłonami itp.
- Nie należy umieszczać na urządzeniu źródeł otwartego ognia, np. zapalonych świec.
- Nie narażaj urządzenia na działanie kapiącą lub rozpryskującą się wodę.
- Nie należy stawiać na urządzeniu przedmiotów wypełnionych płynami, np. szkła czy wazonów.

- Wtyczka zasilania jest używana jako urządzenie odłączające i musi być łatwo dostępna. Aby całkowicie odłączyć od zasilania, wtyczka urządzenia powinna być całkowicie odłączona. Gniazdo nie może być zasłonięte i powinno być łatwo dostępne podczas zamierzonego użytkowania.
- Pod wpływem szybkich przebiegów przejściowych i/lub zjawisk elektrostatycznych produkt może działać nieprawidłowo. Użytkownik musi wówczas wyłączyć i wyłączyć urządzenie.
- Normalne działanie produktu może zostać zakłócone przez silne zakłócenia elektromagnetyczne. Jeśli tak się stanie, po prostu zresetuj produkt, aby wznowić normalne działanie, postępując zgodnie z instrukcją obsługi. Jeśli funkcja nie może zostać wznowiona, użyj produktu w innym miejscu.

Jeśli w przyszłości będziesz musiał pozbyć się tego produktu, pamiętaj, że zużytych produktów elektrycznych nie należy wyrzucać razem z odpadami domowymi. Istnieją zakłady recyklingu. Skontaktuj się z gminą lub poproś o poradę swojego dealera. (Dyrektywa w sprawie zużytego sprzętu elektrycznego i elektronicznego)

NEW ONE SAS
10, Rue de la Mission, 25480 Ecole Valentin, Francja

Dokumenty / Zasoby

	Muse MT-120 MB Turntable Micro System [pdf] Instrukcja obsługi MT-120 MB Turntable Micro System, MT-120 MB, Turntable Micro System, Gramofon
--	---

Odniesienia

- [Instrukcja obsługi](#)


[Manuals+](#) | [Prześlij](#) | [Głębokie wyszukiwanie](#) | [Polityka prywatności](#) | [@manuals.plus](#) | [YouTube](#)

Ta strona internetowa jest niezależną publikacją i nie jest ani powiązana, ani popierana przez żadnego z właścicieli znaków towarowych. Znak słowny „Bluetooth®” i logo są zarejestrowanymi znakami towarowymi należącymi do Bluetooth SIG, Inc. Znak słowny „Wi-Fi®” i logo są zarejestrowanymi znakami towarowymi należącymi do Wi-Fi Alliance. Jakiegokolwiek użycie tych znaków na tej stronie internetowej nie oznacza żadnego powiązania ani poparcia.