


POWERPLAY™ 2



Wireless Charging Mousepad

SETUP GUIDE

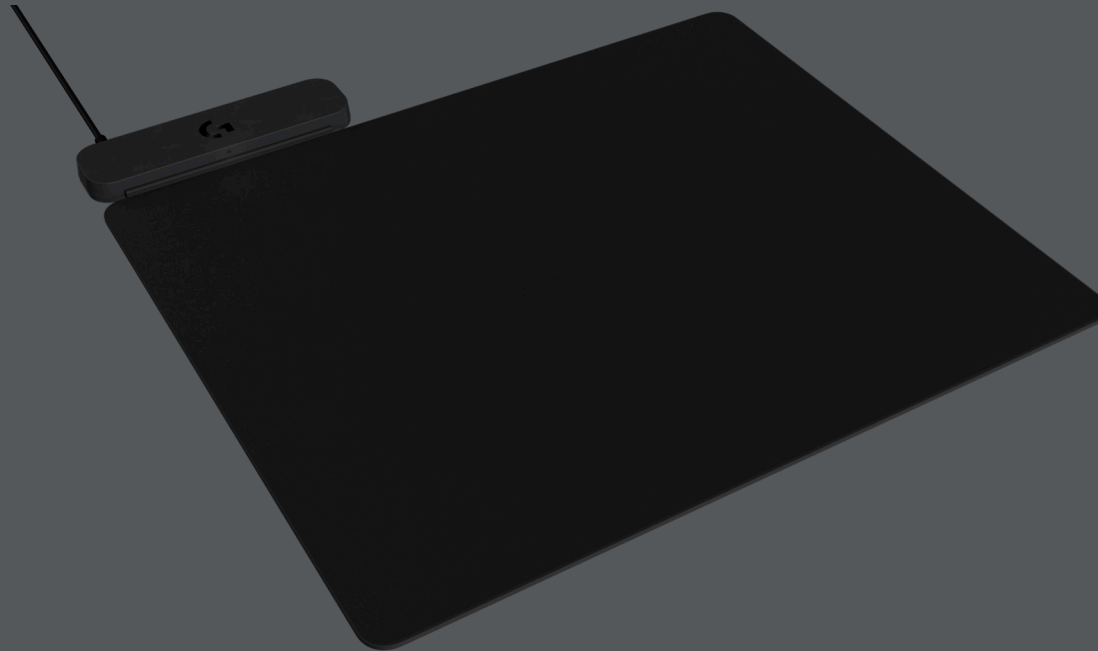

ANATOMIA PRODUKTU


- 1 Kabel
- 2 Górna część obudowy
- 3 Funkcjonalna dioda LED
- 4 Podkładka pod mysz POWERPLAY™ 2
- 5 Podstawa POWERPLAY™ 2

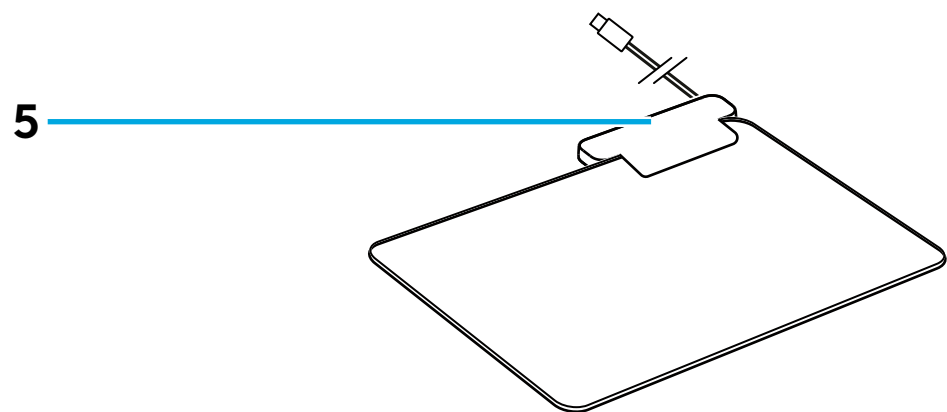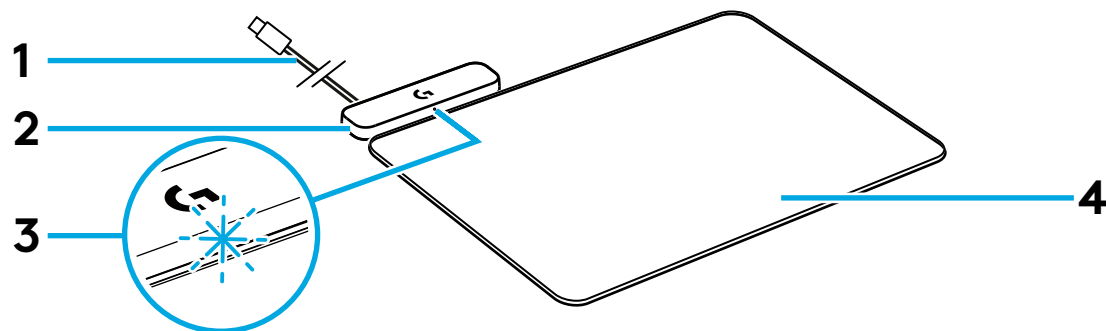


INSTRUKCJE

- 1** Podłącz POWERPLAY™ 2 do portu USB A 2.0 w komputerze.
- 2** Zdejmij zamknięcie i zastąp je monetą ładującą POWERPLAY™ 2.

1

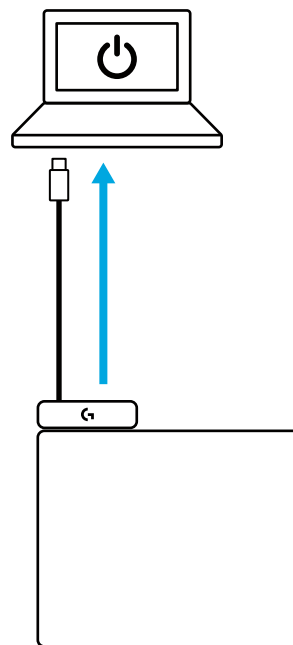


2

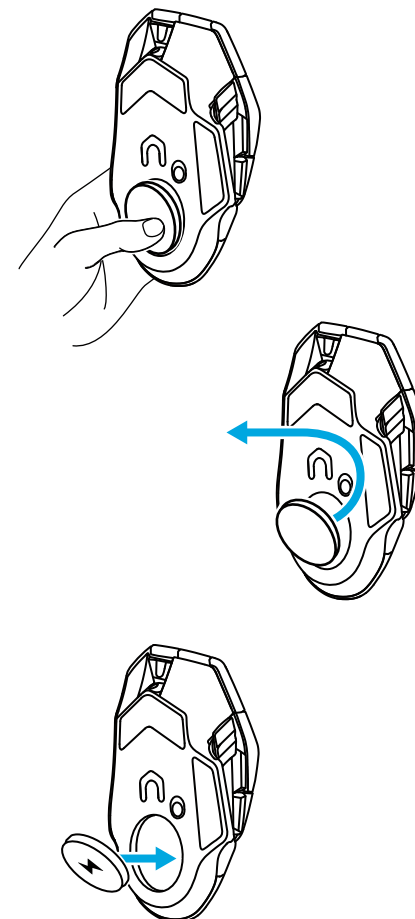


3 Umieść mysz na POWERPLAY™ 2.

Dioda LED zaświeci się, potwierdzając, że system POWERPLAY™ 2 działa prawidłowo.

3a

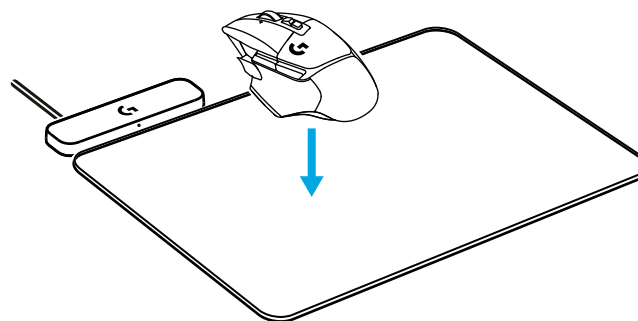

3b

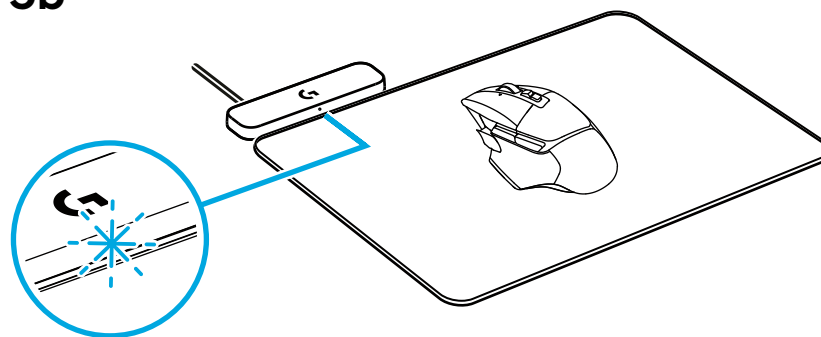

KOMPATYBILNE MYSZY

Kompatybilne myszy:

PRO X SUPERLIGHT 2 DEX

PRO X SUPERLIGHT 2

PRO X SUPERLIGHT

PRO 2 LIGHTSPEED

PRO WIRELESS

G703 LIGHTSPEED


G903 LIGHTSPEED

G502 X PLUS / G502 X LIGHTSPEED


G502 LIGHTSPEED

G309 LIGHTSPEED


i wiele innych.

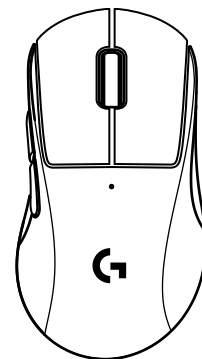


PRO X
SUPERLIGHT 2 DEX

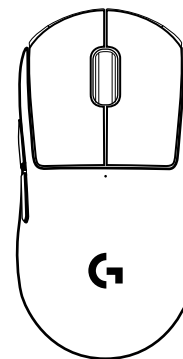


PRO X
SUPERLIGHT 2

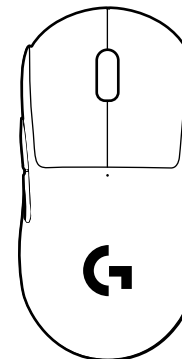


PRO X
SUPERLIGHT

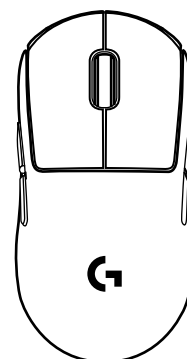


PRO 2
LIGHTSPEED

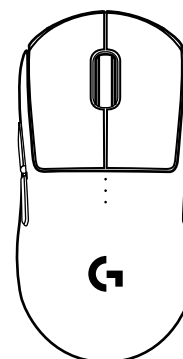


PRO WIRELESS

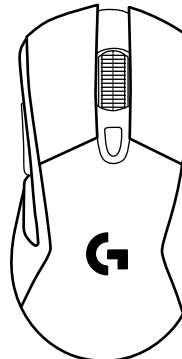


MYSZ G703
LIGHTSPEED

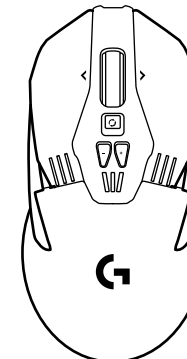


MYSZ G903
LIGHTSPEED

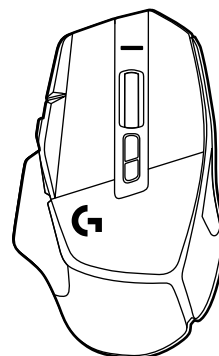


G502 X Plus /
G502 X LIGHTSPEED

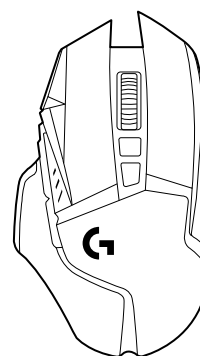

G502
LIGHTSPEED

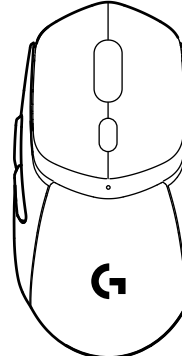

G309
LIGHTSPEED

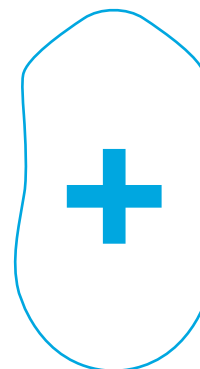

MASZ PYTANIA?

logitechG.com/support/powerplay2



©2025 Logitech. Logitech, Logitech G, Logi and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

WEB-621-002493 002