


# LIN

User manual

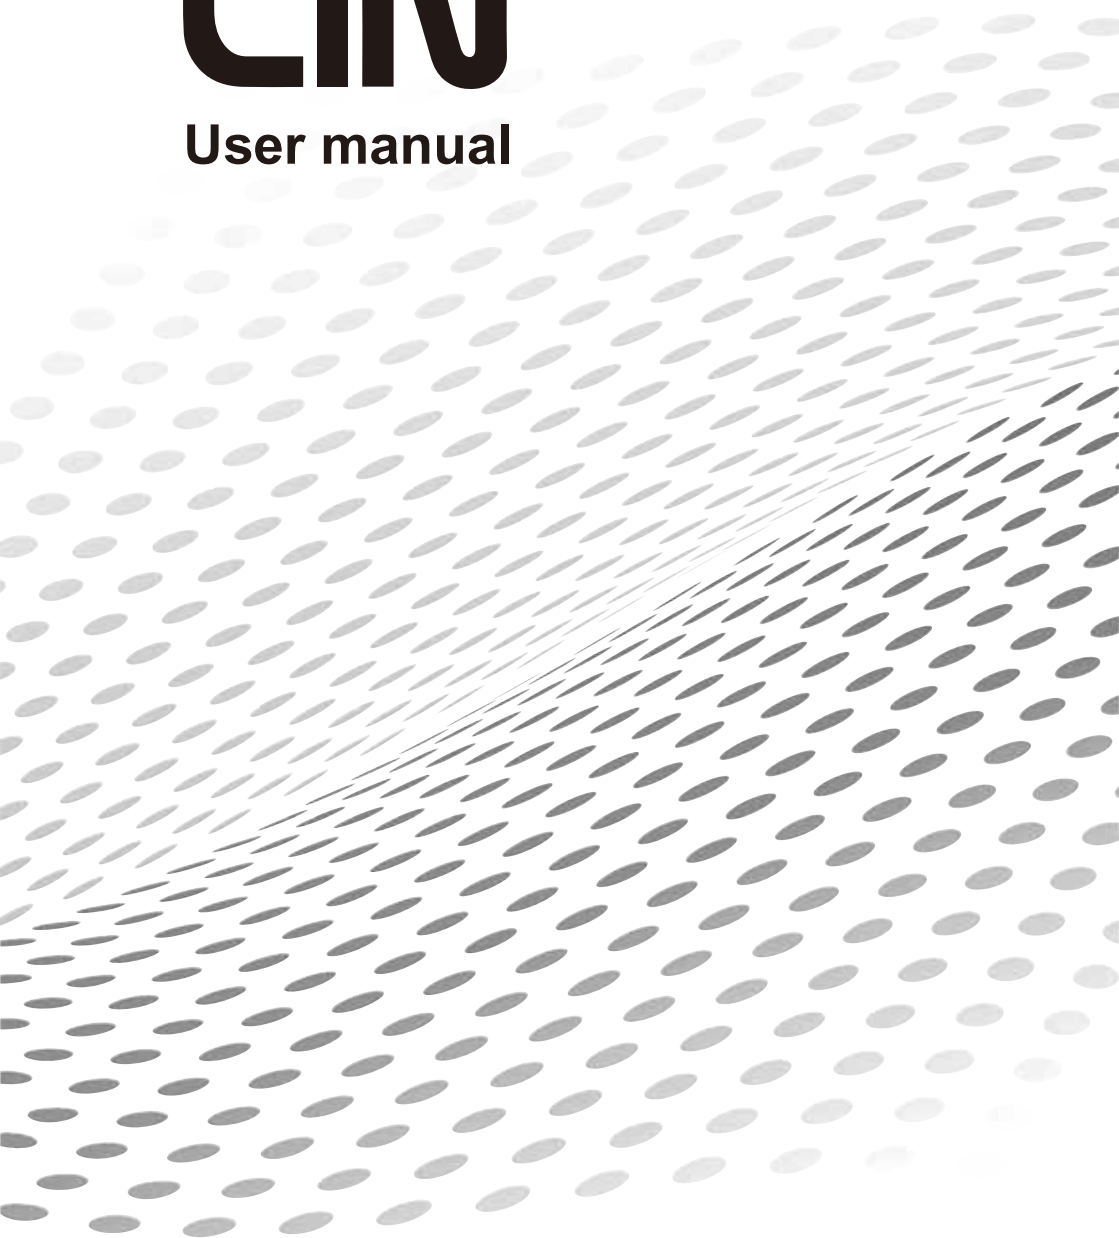

# Table of Contents

## Chapter 1: Introduction

|                                      |   |
|--------------------------------------|---|
| Precautions .....                    | 2 |
| Product .....                        | 2 |
| Power and Plug .....                 | 2 |
| Power Cord and Signal Cable .....    | 2 |
| Use Environment .....                | 2 |
| Cleaning .....                       | 2 |
| Hanging the TV Set on the Wall ..... | 2 |
| Buttons on the TV.....               | 3 |
| Sockets .....                        | 4 |
| Remote Control Functions.....        | 5 |
| Switching the TV on and off.....     | 6 |

## Chapter 2: Connections and Setup

|                         |   |
|-------------------------|---|
| Switching on .....      | 6 |
| Switching off .....     | 6 |
| Network Connection..... | 7 |

## Chapter 3: General Operation

|                    |   |
|--------------------|---|
| Menu Function..... | 8 |
| Smart Key .....    | 8 |
| Settings .....     | 8 |
| Source.....        | 9 |
| Watch TV.....      | 9 |

## Chapter 4: Advanced Functions

|                                                |    |
|------------------------------------------------|----|
| Attention and Frequently Asked Questions ..... | 10 |
| Reference section .....                        | 10 |

## Chapter 5: Other Information

|                         |    |
|-------------------------|----|
| Troubleshooting .....   | 11 |
| Base Installation ..... | 11 |

## Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

## Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

## Power and Plug

- Unplug the set under the following conditions:
  - If the set will not be used for a long period of time.
  - If the power cord or the power outlet/plug is damaged.
  - Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
  - If the set is subject to impact or has been dropped to have the cabinet damaged.

## Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

## Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set near dust place.

## Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

## Hanging the TV Set on the Wall

**Warning: This operation requires two people.**

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

### **Note:**

*Illustrations within this publication are provided for reference only.*

## Buttons on the TV

**Note:** The location and names of the function buttons and power button on the TV may vary according to TV model. And some buttons may not available for some models.



 button

1. Turn on the TV
2. The TV is on, press it to display Button menu.
3. In the Button menu, short press it to select the menu, long press it to confirm the selection.

**Note:** The location and names of the function buttons and power button on the TV may vary according to TV model.

## Sockets

*Note: The location and names of the sockets on the TV may vary according to TV model, and some sockets may not available for some models.*

- USB** – **USB sockets (input)**  
These sockets can be used to connect an USB device.
- LAN** – **LAN**  
This socket can be used to connect to external modem or network access equipment.
- SATELLITE IN** – **SATELLITE IN socket (input)**  
This socket can be used to connect the satellite receiver pot.
- ANTENNA/  
CABLE IN** – **ANTENNA/CABLE IN socket (input)**  
Lets you connect a coaxial cable to receive the signal from your antenna, cable, or cable box.
- COAXIAL** – **COAXIAL socket**  
The COAXIAL socket can be used to connect a compatible digital audio receiver.
- HDMI 1  
or HDMI 2** – **HDMI socket (input)**  
The HDMI (High-Definition Multimedia Interface) socket lets you connect a device, such as a Blu-ray player, with a HDMI output for best picture quality. It also provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.
- COMMON  
INTERFACE(CI)** – **COMMON INTERFACE(CI) socket**  
This CI socket can be used to put the CI card in to accept the Scrambled Programs.
- Mini AV IN** – **AV audio + video mini socket (input)**  
These AV out socket can be used to connect a VCR to record programs. You must leave the TV on the same channel you are recording. The VIDEO OUT socket provides composite video connection.
- EARPHONE OUT** – **EARPHONE OUT sockets**  
Allow you to connect earphones to listen to the sound coming from the TV.  
*Note: Excessive sound pressure from earphones can cause hearing loss.*

## Remote Control Functions

Most of your television's functions are available on the menu that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

*Note: The location and names of the buttons on the remote control may vary according to TV model, and not all buttons available on all models.*



- (POWER) Turns the TV on or off.
- (MUTE) Reduces the TV's volume to its minimum level. Press again to restore the volume.
- 0-9** (numeric buttons) Enters channel numbers. Enters a digit in some functions.
- FAV** Displays the favorite channel list.
- LIST** Displays channel list.
- Increases or decreases the TV's volume.
- P +/-** Scans up or down through the current channel list.
- TV** Press to enter TV mode. This function is unavailable in Multimedia mode.
- To enter SMART function interface.
- Goes to the homepage.
- Enter the option menu.
- (up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls.
- OK** Confirms your selection.
- Returns you to the previous operation in general setting.
- (INPUT) Change input source.
- EXIT** Exits the menu system.
- ZOOM** Selects the desired screen format.
- Display menu.
- INFO** Displays the status information.
- EPG** Turns on electronic program guide.
- Lang/AD** Displays audio language.
- USB** To enter the USB mode.
- SUBT.** Displays the Subtitle Language menu.
- TEXT** Teletext.

**Colored buttons** (Red/Green/Yellow/Blue) Performs the corresponding function indicated at the bottom of the screen

- Searches backward.
- (Play) Starts viewing
- (Play/Pause) Starts, pauses or resumes viewing.
- Searches forward.
- (Previous) Goes to the previous chapter.
- (Stop) Stops viewing.
- (Next) Goes to the next chapter.
- PVR function.

**NETFLIX** Goes to NETFLIX main page.

**YouTube** Goes to the YouTube homepage.

## Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two batteries in the remote control.

Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.


2. Connect the power cable **FIRST** to the television, **THEN** to a mains socket.  
(Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)

- If your TV is connected to an AC supply  
Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
- If your TV is connected to a DC supply  
Your TV set should only be connected to a DC supply. It must not be connected to a AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

3. Connect an outside aerial to the **ANTENNA IN** socket at the back of the TV set.

4. When powered on, the TV will be turned on directly or be in standby.  
Note: For some models, switch the TV on by pressing the power button.

If the power indicator lights up, the TV set is in standby mode. Press the  button on the remote control or on the TV set to turn on the TV.

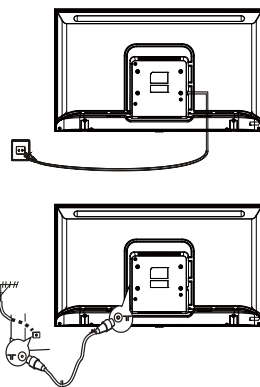

## Switching off

- To put the TV set into standby mode, press the  button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.  
Note: For some models, press the power button to switch off the TV set .

## Network Connection

To access the Internet, you must subscribe to high speed broadband Internet service with your Internet service provider (ISP).

Your TV can be connected to your home network in two ways:


- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless and your home wireless network.

**Note:** Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP.

### Connecting to a wired network

To connect to a wired network:


1. Ensure you have:
  - An Ethernet cable long enough to reach your TV
  - A router or modem with an available Ethernet port
  - A high-speed Internet connection
  - An Ethernet (LAN) port on the back of the TV
2. Connect your Ethernet cable to the router and to the Ethernet port on the back of the TV.
3. Use the **Network** menu to configure the TV.

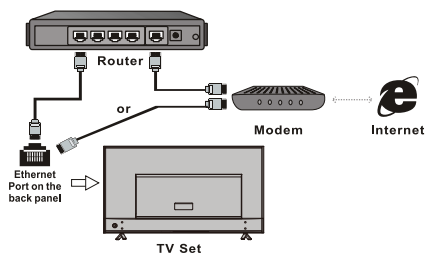

### Connecting to a wireless network

To connect to a wireless network:

1. Ensure you have:
  - A router broadcasting a high-speed wireless signal
  - A high-speed Internet connection
2. Use the **Network** menu to configure the TV.

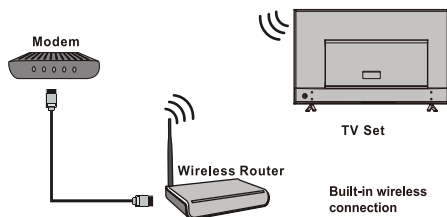

## Menu Function

You can press the  button to enter the Settings Menu. The Settings Menu consists of the following settings:

- Smart Key
- Settings
- Source
- Watch TV

In each menu, you can:

- Press the ▲▼◀▶ buttons to select an item or to adjust the value.
- Press the OK button to enter the submenu.
- Press the ◀ button to return to previous menu or exit the menu.
- Press the EXIT button to exit the menu.

### Smart Key

**Fast Cast**

Download the projection app on the phone and follow the prompts to connect.

note:mobile phone enjoy big screen picture quality faster cast phone, video,music to the TV and mobile must be in the same network.

**Wireless Display**

It allows you to beam your media content directly from your phone to the TV screen,wirelessly.

Displays your smartphone contents on the TV.

note:

1. The TV must stay in the WIRELESS DISPLAY settings page to connect to the phone.
- 2.only support Android devices.

**Enjoy Music**

Only the TV screen will turn off to listen to music.

note: press any key other than volume to exit enjoy music.

**Sleep Timer**

Sets a period of time after which the TV set goes into standby mode.

**Soundbar Ready**

Press OK to select the Soundbar Ready on or off.

**Sports Mode**

Press OK to select the sports mode on or off.

### Settings

**Picture Mode**

Press OK to enter,and press ◀/▶ to select picture mode: Standard, Movie, Personal, Natural and Dynamic.

note:Picture Mode may be automatically set to personal if you make any adjustment to the following picture options.

**Sound Mode**

Press OK to enter, and press ▲/▼ to select sound mode: Standard, Music,Movie,Sports and Personal Mode.

**Screen Mode**

Press OK to enter,and press ▲/▼ to select Screen Mode: Auto,4:3 Format,16:9 Format, Zoom1,Zoom2, Fit Screen,Fill Screen and Advanced.

-Advanced

Press OK to enter the Advanced option, you can set: Shift, Zoom, Stretch, Undo.

**Motion Style**

Press OK to enter,and press ▲/▼ to select Motion Style: Off,Middle and Strong.

**Network**

**Internet connection**

Press ◀ or ▶ to select On, then you can adjust the options below.

- Wireless

Wireless, using the internal wireless and your home wireless network.

- Wired

Connect your Wired cable to the router and to the Wired port on the back of the TV.

- More Settings

Press OK to enter the setting interface, and then you can adjust the options.

**More Setting**

- PICTURE

Selects more picture advanced settings.Adjusts the picture setting that best suits your viewing environment.

-SOUND

**Advanced**

• Audio Out

Select advanced settings to set Audio Out, you can choose TV Speakers, HDMI Sound System and TV Speaker off.

• SPDIF Type

This option is used to control the type of audio stream sent to the Digital Audio Output (SPDIF) socket.

if the sound output does not match the picture, press ◀/▶ to adjust the delay time to synchronize the sound with the picture.

• Auto Volume Control

Selects On to reduce the annoying blasts in volume during commercial breaks and also amplifies softer sounds in program material. Eliminates the need to constantly adjust the volume.

• Digital Out Levelling

You can choose to enter the Digital Out Levelling setting More, medium and less.

# General Operation

## - NETWORK

See detailed description above for network settings.

## - CHANNEL INSTALLATION

Antenna Installation/Cable installation

### - Search For Channels

Allows you to scan for all available analog and digital channels.

### - Digital: Manual installation

### - Analogue: Manual Installation

## -SYSTEM

### • Language

Chooses the on-screen display language.

### • Input Source

User can select the device name of the input source here, easy to identify the source.

### • Clock

#### Auto Clock Mode

Select on to turn on the Automatic, the TV will get the time automatically from DTV signals, and the Time item cannot be adjusted.

Sleep timer

Sets a period of time after which the TV set goes into standby mode.

### • Auto Standby

When Auto Standby is set to your desired time, TV and device will be in standby mode at the same time. If user choose home mode TV will shut down automatic after 4 HOURS.

### • Screen Saver

You can set the time when the screen saver is turned on and turn on the preview function.

### • Location

Selects the location mode depending on your viewing environment.

### • Instant Power On

Press ► to turn on or off the instant Power On function.

## -CHLD CODE

This menu can control the special function for TV.

The factory default code is 1234. And the super password is 0812. If you forget your code, enter it to override any existing codes.

## -Connectivity

Select connectivity to set up T-Link, T-Link remote control, Format USB Hard Drive and USB keyboard Setting.

## -UNIVERSAL ACCESS

Universal Access

Audio Description

Mixed Volume

Audio Effects

## MORE

### -HELP

Go in and learn about certain functional operations.

### -About TV

Product Information.

### Update Software

#### • Network Updates

Enables you to download and install the latest software version from the Internet. Make sure to set up a wired or wireless network connection first. Enter and follow the on-screen instructions to continue.

#### • USB Local Updates

Enables you to install the latest version of the software from your USB ports.

#### • Legal & Compliance

You can view the smart TV Terms of service and Privacy policy.

### Restore To Default

#### • Reinstall TV

Reset all settings and replaced installed channels.

#### • Restore Factory Settings

Reset the settings for Picture and Sound, the channel list reminds unchanged.

## Settings

### Source

Using the source menu, you can select the desired channel settings.

## Watch TV

Select the channel settings to watch TV.

### Attention and Frequently Asked Questions

#### Attention:

Some non-standard mobile storage device may not be recognized. Please change to use the standard device.

*Note: For coding files, there are many kinds non-standard coding method, so this system can not be guaranteed to support the file formats using any coding method.*

Dear Customer,

Hereby, LIN declares that this device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.lin.com.pl/](http://www.lin.com.pl/)



\* Do not touch or be close to the ANTENNA, SATELLITE IN, USB and HDMI terminals, and prevent electrostatic discharge to disturb these terminals while in USB, LAN and WiFi operation mode, or it will cause the TV to stop working or abnormal status.

#### Frequently Asked Questions:

1. Under the following conditions, this system cannot decode the file and the file cannot be play normally:
  - The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
  - The format of file is not matched or the file is harmed.
2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.
3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
4. The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..
5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.
6. When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
7. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage.

## Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

### No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

### No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

### Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

### No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

### Normal picture, no sound

1. Press the Vol+ button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

### Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

### Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

### Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

### Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

### Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

### If the TV is crashed

1. Press the Power button to turn off TV, then press the Power button again to reset TV.
2. Unplug the power cord, then press the Power button to reset TV.



Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

## Base Installation



Screw x 4

Base x 2

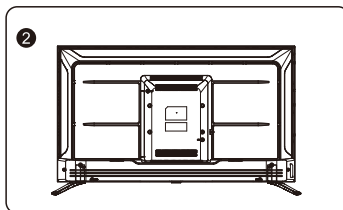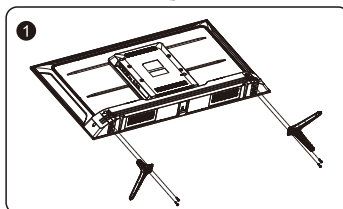

To fix the double support base on the unit by screws, the installation is completed.

## Część 1: Wstęp

|                                            |   |
|--------------------------------------------|---|
| Środki ostrożności .....                   | 2 |
| Produkt .....                              | 2 |
| Zasilanie i wtyczka .....                  | 2 |
| Przewód zasilający i kabel sygnałowy ..... | 2 |
| Środowisko operacyjne .....                | 2 |
| Czyszczenie .....                          | 2 |
| Zawieszanie telewizora na ścianie .....    | 2 |
| Przyciski na telewizorze .....             | 3 |
| Gniazda .....                              | 4 |
| Funkcje pilota .....                       | 5 |

## Część 2: Podłączenie i dopasowanie ustawień

|                           |   |
|---------------------------|---|
| Włączanie .....           | 6 |
| Wyłączanie .....          | 6 |
| Połączenie z siecią ..... | 7 |

## Część 3: Funkcje zaawansowane

|                                                  |   |
|--------------------------------------------------|---|
| Ostrzeżenia i najczęściej zadawane pytania ..... | 8 |
|--------------------------------------------------|---|

## Część 4: Pozostałe informacje

|                               |   |
|-------------------------------|---|
| Rozwiązywanie problemów ..... | 9 |
| Montaż podstawki .....        | 9 |

## Środki ostrożności

Przed rozpoczęciem korzystania z odbiornika należy uważnie zapoznać się z instrukcją obsługi. Instrukcję należy zachować do przyszłego wglądu.

### Produkt

- Nie należy blokować otworów wentylacyjnych na tylnej pokrywie.
- Nie należy wpychać żadnych przedmiotów przez szczeliny obudowy, dlatego że mogą one wejść w kontakt z elementami urządzenia i spowodować spięcie, pożar, porażenie prądem lub uszkodzenie urządzenia.
- Nie należy otwierać obudowy urządzenia, dlatego że może doprowadzić to do jego uszkodzenia. W urządzeniu nie ma żadnych elementów, które można wymienić samodzielnie. Wszystkie czynności serwisowe powinny zostać przeprowadzone przez odpowiednio wykwalifikowany personel.
- Nie należy dotykać palcami powierzchni ekranu, dlatego że może to spowodować jego porysowanie lub uszkodzenie.
- Nie należy naciskać mocno na ekran, dlatego że może spowodować to jego poważne uszkodzenie.

### Zasilanie i podłączanie urządzenia

- Odbiornik należy odłączyć od zasilania, kierując się następującymi wytycznymi.
  - Jeśli przez dłuższy czas nie będzie się z niego korzystać.
  - Kabel zasilający lub gniazdko są uszkodzone.
  - Podczas instalacji produktu i jego konfiguracji należy postępować zgodnie z instrukcją obsługi. Należy przeprowadzić konfigurację ustawień opisanych w tej instrukcji obsługi, dlatego że niewłaściwa konfiguracja może spowodować uszkodzenie urządzenia. Jeśli do tego dojdzie, należy odłączyć zasilanie urządzenia i skontaktować się z personelem serwisowym.
  - Jeśli został on uderzony lub upuszczony i uszkodziło to obudowę.
- Gdy urządzenie jest rozłączane przy użyciu głównej wtyczki lub rozłącznika, należy upewnić się, że są one w pełni sprawne.  
(\* Przy korzystaniu z rozłącznika pełno-biegunowego, należy upewnić się że jest on całkowicie sprawny.)

### Kabel zasilający oraz kabel sygnałowy

- Nie należy kłaść żadnych przedmiotów na kabel zasilający i kabel sygnałowy.
- Nie należy stąpać po kablu zasilającym i kablu sygnałowym.
- Nie należy przeciągać kabla zasilającego ani gniazda zasilania.
- Nie należy wystawiać kabla zasilającego ani kabla sygnałowego na działanie wilgoci.

### Otoczenie

- Odbiornika nie należy ustawiać na niestabilnej podstawie, stojaku czy stole.
- Odbiornik należy ustawić w miejscu, umożliwiającym dobrą wentylację.
- Odbiornika nie należy ustawiać w pobliżu wilgotnych i zimnych miejsc. Odbiornik należy chronić przed przegrzaniem.
- Odbiornik należy chronić przed bezpośrednim działaniem światła słonecznego.
- Urządzenie należy chronić przed kapaniem i rozpryskiwaniem, ani nie należy ustawiać na nim żadnych przedmiotów wypełnionych cieczami, takich jak wazon.
- Z odbiornika nie należy korzystać w zakurzonych miejscach.

### Czyszczenie

- Ekran oraz obudowę należy czyścić przy użyciu miękkiej, czystej szmatki lub specjalnego płynu czyszczącego.
- Podczas czyszczenia nie należy mocno naciskać na ekran.
- Ekranu nie należy czyścić przy użyciu wody ani chemicznych środków czyszczących, dlatego że może spowodować to jego uszkodzenie.

### Zawieszanie odbiornika TV na ścianie

**Ostrzeżenie: Operacja wymaga obecności dwóch osób.**

Aby zapewnić bezpieczeństwo podczas montażu, należy przestrzegać następujących wytycznych:

- Należy upewnić się, że ściana jest w stanie wytrzymać ciężar odbiornika TV i wspornika.
- Należy przestrzegać instrukcji montażu dostarczonych razem ze wspornikiem.
- Odbiornik TV należy zamocować na pionowej ścianie.
- Należy upewnić się, że korzysta się ze śrub odpowiednich dla materiału, z którego wykonana została ściana.
- Należy upewnić się, że kable odbiornika TV ustawione są, tak że nie ma niebezpieczeństwa potknięcia się.

Należy także przestrzegać wszystkich innych instrukcji bezpieczeństwa dotyczących naszego odbiornika TV.

### Uwagi:

**Ilustracje zawarte w tej publikacji służą tylko do celów pokazowych.**

### OSTRZEŻENIE:

Nie należy wystawiać baterii na nadmierne działanie ciepła, światła słonecznego, ognia itp.

## Przyciski w telewizorze

Take a certain model for an example Bierzemy przykład z danego modelu:



♣ Przyciski

1. Włącz odbiornik telewizyjny.
2. Po włączeniu odbiornika telewizyjnego naciśnij, by wyświetlić menu przycisków.
3. W menu przycisków naciśnij na krótko, by wybrać menu lub na długo, by potwierdzić wybór.

*Uwaga: Rozmieszczenie i nazwy przycisków funkcyjnych i przycisku zasilania na telewizorze mogą się różnić w zależności od modelu telewizora.*

## Gniazda

Uwaga: Położenie i nazwy gniazd w telewizorze mogą się różnić w zależności od modelu telewizora, a niektóre gniazda mogą być niedostępne w niektórych modelach.

|                         |   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| USB                     | - | <p>Gniazda USB (wejście)</p> <p>Gniazda te można wykorzystać do podłączenia urządzenia USB.</p>                                                                                                                                                                                                                                                                                                                                                                      |
| LAN                     | - | <p>LAN</p> <p>To gniazdo może zostać wykorzystane do podłączenia modemu zewnętrznego lub sprzętu umożliwiającego dostęp do sieci.</p>                                                                                                                                                                                                                                                                                                                                |
| SATELLITE IN            | - | <p>Gniazdo <b>SATELLITE IN</b> (wejście)</p> <p>Do tego gniazda można podłączyć dekodery satelitarne.</p>                                                                                                                                                                                                                                                                                                                                                            |
| ANTENNA/<br>CABLE IN    | - | <p>Gniazdo ANTENNA/CABLE IN (Wejście)</p> <p>Pozwala podłączyć kable koncentryczne w celu odbioru sygnału z anteny, kabla lub dekodera telewizji kablowej.</p>                                                                                                                                                                                                                                                                                                       |
| COAXIAL                 | - | <p><b>COAXIAL</b></p> <p>Użyj kabla cyfrowego do podłączenia telewizora do kompatybilnego odbiornika audio.</p>                                                                                                                                                                                                                                                                                                                                                      |
| HDMI 1/2                | - | <p>Gniazdo HDMI 1/2 (wejście)</p> <p>Gniazda HDMI (Interfejs multimedialny wysokiej rozdzielczości) można użyć do podłączenia komputera z zainstalowaną kompatybilną kartą wideo; niektórego odtwarzacza DVD lub cyfrowego dekodera satelitarnego o wysokiej rozdzielczości. To gniazdo zapewnia nieskompresowane połączenie cyfrowe, które przenosi dane wideo i audio za pomocą zintegrowanego kabla mini-wtyczki</p> <p>- Liczba portów HDMI może się różnić.</p> |
| COMMON<br>INTERFACE(CI) | - | <p>Gniazdo COMMON INTERFACE (CI)</p> <p>To gniazdo CI może być użyte do włożenia karty CI, aby mieć dostęp do zablokowanych programów.</p>                                                                                                                                                                                                                                                                                                                           |
| Mini AV IN              | - | <p>Gniazdo MiniAV IN (wejście)</p> <p>Gniazda AV IN można wykorzystać do podłączenia szeregu urządzeń, w tym magnetowidów, kamkoderów, dekodów, odbiorników satelitarnych, odtwarzaczy DVD lub konsol do gier. Gniazdo AV IN zapewnia kompozytowe połączenie wideo.</p>                                                                                                                                                                                              |
| EARPHONE OUT            | - | <p>Gniazdo EARPHONE OUT (wyjście)</p> <p>Umożliwia podłączenie słuchawek, aby słuchać dźwięku dochodzącego z telewizora.</p> <p>Uwaga: Nadmierne ciśnienie dźwięku w słuchawkach może spowodować utratę słuchu.</p>                                                                                                                                                                                                                                                  |

## Funkcje zdalnego sterowania

Większość funkcji telewizora jest dostępna za pośrednictwem menu wyświetlanych na ekranie. Pilot zdalnego sterowania dostarczony z aparatem może być używany do nawigacji po menu i do konfigurowania wszystkich ustawień ogólnych.



- Włącza/wyłącza telewizor z/do trybu czuwania.
- Wyciszenie dźwięku. Przywrócenie po ponownym naciśnięciu przycisku.
- 0-9** Przyciski 0–9 umożliwiają bezpośredni wybór kanału podczas oglądania telewizji. W trybie telegazety umożliwiają wybór numeru strony itp.
- FAV** Umożliwia wejście lub wyjście z menu ulubionych w trybie oglądania telewizji.
- LIST** Wyświetlanie listy programów zgodnie z ustawionym wyborem.
- Zwiększenie lub zmniejszenie poziomu głośności.
- P +/-** Przełączanie poszczególnych kanałów.
- TV** Bezpośredni wybór wejścia telewizji cyfrowej.
- Wejście do interfejsu SMART.
- Przechodzi do strony głównej.
- Wyświetla menu opcji wybranych funkcji.
- (przyciski kierunkowe w górę, w dół, w lewo i w prawo) Podświetla różne pozycje w systemie menu i dostosowuje elementy sterujące menu.
- OK** Potwierdza Twój wybór.
- Powrót o jeden krok wstecz.
- (WEJŚCIE) Zmień źródło wejścia.
- EXIT** Wyjście z menu lub ekranu.
- ZOOM** Naciśnięcie spowoduje zmianę wielkości wyświetlania.
- Wyświetl menu.
- INFO** Przycisk wyświetlania informacji.
- EPG** Wyświetlanie elektronicznego przewodnika po programach.
- Lang/AD** Wyświetla język dźwięku.
- USB** Naciśnij, aby przejść do trybu USB.
- SUBT.** Przycisk pokazania/ukrycia napisów na dole ekranu, jeżeli są dostępne.
- TEXT** Włączenie lub wyłączenie telegazety.

**Kolorowe przyciski** Pełnią różne funkcje w menu lub w telegazecie.

- Szybkie przejście do przodu.
- (Odtwórz) Rozpoczyna oglądanie.
- (Odtwarzaj/Pauza) Rozpoczyna, wstrzymuje lub wznowia oglądanie.
- Szybkie przewijanie do przodu.
- Przejście do poprzedniego utworu.
- Zatrzymanie nagrywania/odtwarzania.
- Przejście do następnego utworu.
- Rozpoczęcie nagrywania (wyłącznie w trybie DTV).

**NETFLIX** Wejście na stronę NETFLIX.

**YouTube** Wejście na stronę YouTube.

## Włączanie

Włącz swój odbiornik TV oraz pilot zgodnie z instrukcjami zawartymi na tej stronie przed przeczytaniem kolejnych stron, opisujących procedurę konfiguracji kanałów.

1. Do pilota należy włożyć dwie baterie AAA.


Środki ostrożności dotyczące korzystania z baterii.

- Korzystaj tylko z baterii odpowiedniego typu.
- Upewnij się, że bieguny baterii zostały ustawione prawidłowo.
- Nie używaj nowych i starych baterii razem.
- Nie korzystaj z baterii akumulatorów.
- Nie wystawiaj baterii na działanie światła słonecznego, ognia lub podobnych zjawisk, nie wrzucaj ich do ognia, ładuj ich ponownie lub otwieraj, dlatego że może spowodować to wyciek ich zawartości lub eksplozję.
- Jeżeli pilot nie będzie używany przez dłuższy czas, to należy wyciągnąć z niego baterie.

2. **NAJPIERW** podłącz kabel zasilający do telewizora, a dopiero **NASTĘPNIE** podłącz gniazdo zasilania. (Uwaga: Jeśli kabel zasilający jest już podłączony do telewizora, prosimy tylko o podłączenie kabla zasilającego do gniazda zasilania.)


Odbiornik TV może być podłączony tylko do źródła zasilania AC. Nie należy go podłączać do źródła zasilania DC. Jeśli wtyczka została oderwana od kabla, nie należy w żadnym wypadku podłączać go do gniazda zasilania, dlatego że grozi to porażeniem prądem.

*Uwaga: Ilustrację służą tylko celom pokazowym. Miejsce gniazda zasilania z tyłu telewizora może różnić się w poszczególnych modelach.*

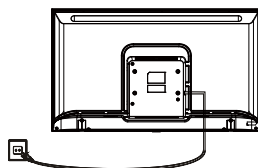

3. Gniazdo ANTENNA IN z tyłu telewizora służy do podłączenia zewnętrznej anteny.

Gniazdo anteny (75 OHM - VHF / UHF / kabel) może zostać użyte do podłączenia zewnętrznej anteny lub innego odpowiedniego sprzętu.

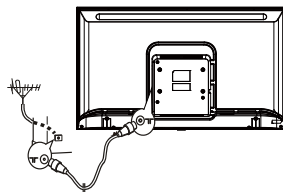

4. Po włączeniu zasilania telewizor zostanie włączony lub przejdzie do trybu czuwania.

Uwaga: W niektórych modelach włączenie telewizora wymaga naciśnięcia przycisku zasilania.

Jeśli kontrolka zasilania zaświeci się, znaczy to że odbiornik TV jest w trybie czuwania. Naciśnij przycisk  na pilocie lub odbiorniku TV, aby go włączyć.

## Wyłączanie

- Aby wprowadzić odbiornik TV w tryb czuwania, naciśnij przycisk  na pilocie lub telewizorze, a sprawi to, że telewizor pozostanie włączony, ale z niskim zużyciem energii.
- Odłączenie wtyczki od gniazda zasilania spowoduje wyłączenie odbiornika.  
Uwaga: W niektórych modelach telewizor wyłącza się poprzez naciśnięcie włącznika zasilania.

# Podłączenie i dopasowanie ustawień

## Połączenie z siecią

Aby uzyskać dostęp do Internetu, należy wykupić usługę szybkiego szerokopasmowego Internetu u swojego dostawcy usług internetowych (ISP).

Możesz podłączyć twój telewizor do swojej sieci domowej na dwa sposoby:


- Przewodowo, za pomocą złącza RJ45 (LAN) na tylnym panelu.
- Bezprzewodowo, używając wewnętrznego modułu dla połączeń bezprzewodowych oraz swojej domowej sieci bezprzewodowej.

**Uwaga:** Poniższe instrukcje to typowe sposoby podłączania telewizora do sieci przewodowej lub bezprzewodowej. Metody podłączenia mogą być różne w zależności od danej konfiguracji sieci. Jeśli masz jakiegokolwiek pytania dotyczące swojej sieci domowej, skontaktuj się ze swoim dostawcą usług internetowych.

## Podłączanie do sieci przewodowej

W celu podłączenia do sieci przewodowej:


1. Upewnij się, że posiadasz:
  - Wystarczająco długi kabel Ethernet, aby połączyć się z telewizorem
  - Router lub modem z wolnym portem Ethernet
  - Szybkie łącze internetowe
  - Port Ethernet (LAN) z tyłu telewizora
2. Podłącz kabel Ethernet do routera i portu Ethernet z tyłu telewizora.
3. Użyj menu **Sieć**, aby skonfigurować telewizor.

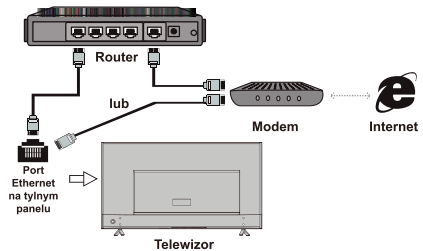

## Podłączanie do sieci bezprzewodowej

W celu podłączenia do sieci bezprzewodowej:

1. Upewnij się, że posiadasz:
  - Router umożliwiający szybkie połączenie bezprzewodowe
  - Szybkie łącze internetowe
2. Użyj menu **Sieć**, aby skonfigurować telewizor.

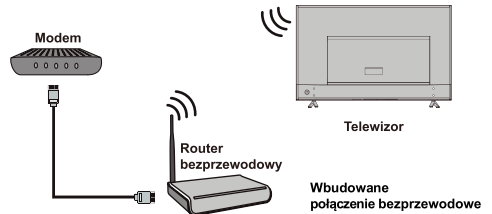

## Ostrzeżenia i najczęściej zadawane pytania

### Ostrzeżenie:

Niektóre niestandardowe przenośne urządzenia pamięci masowej mogą nie zostać rozpoznane. Należy je wymienić na standardowe urządzenia.

**Uwaga:** Co do kodowania plików, istnieje wiele rodzajów niestandardowych metod kodowania, więc nie można zagwarantować, że niniejszy system będzie obsługiwał formaty plików utworzonych przy użyciu każdej metody kodowania.

## Odpowiedzi na najczęściej zadawane pytania.

1. System nie jest w stanie zdekodować pliku i plik nie jest odtwarzany w normalny sposób.

- parametry pliku takie, jak liczba pikseli obrazu, szybkość kodowania plików audio i wideo czy szybkość próbkowania, przekraczają możliwości systemu;

- format pliku jest nie właściwy lub plik jest uszkodzony.

**Uwaga:** Szybkość kodowania obsługiwana przez system nie może przekraczać 20Mbps.

2. Wtyczka jest rozgrzana. Gdy system odczytuje lub przesyła dane nie należy rozłączać okablowania, dlatego że może to spowodować uszkodzenie systemu lub urządzenia.
3. Zwróć uwagę na zasilanie urządzenia, gdy korzystasz z przenośnego dysku twardego lub kamery cyfrowej. Jeśli zasilanie jest niedostateczne lub niestabilne, może spowodować to problemy w trakcie korzystania z urządzenia lub całkowicie je uniemożliwić. Należy wtedy ponownie uruchomić urządzenie lub rozłączyć je i ponownie podłączyć, upewniając się, że zasilanie działa w sposób prawidłowy.
4. System obsługuje standardowe urządzenia USB 1.1 oraz 2.0 takie, jak dyski do przenoszenia danych, odtwarzacze MP3, dyski przenośne, itp.
5. Aby uzyskać lepszą jakość audio i wideo, sugeruje się korzystanie z urządzeń, obsługujących standard USB 2.0.

6. W trakcie odtwarzania wideo z wysoką szybkością kompresji, zjawiska takie, jak niespodziewane zatrzymywanie się obrazu i długi czas reakcji w menu, są normalne.
7. W przypadku niektórych urządzeń USB z zasilaniem, takich jak dużej wielkości dyski twarde, MP4, etc. sugeruje się korzystanie z nich podłączonych do zasilania, dlatego że uniknie to problemów z dostarczeniem mocy. -parametry pliku takie, jak liczba pikseli obrazu, szybkość kodowania plików audio i wideo czy szybkość próbkowania, przekraczają możliwości systemu;

## Drogi Kliencie,

Firma LIN oświadcza, że niniejsze urządzenie jest zgodne z dyrektywą 2014/53/UE. Cały tekst deklaracji zgodności jest dostępny pod następującym adresem internetowym: [www.lin.com.pl/](http://www.lin.com.pl/)

## Rozwiązywanie problemów

Większość problemów, z którymi spotkasz się w trakcie korzystania z odbiornika TV, można usunąć, korzystając z rozwiązań zawartych na tej liście.

### Brak obrazu lub dźwięku

1. Sprawdź czy bezpiecznik/wyłącznik bezpieczeństwa działają prawidłowo.
2. Podłącz do gniazda inne urządzenie i upewnij się, że ono działa i jest włączone.
3. Sprawdź czy wtyczka zasilania jest dobrze wpięta do gniazda.
4. Sprawdź źródło sygnału.

### Brak koloru

1. Zmień ustawienia systemu kolorów.
2. Skonfiguruj nasycenie.
3. Spróbuj przełączyć na inny kanał. Można odtwarzać czarno-białe kolory.

### Pilot nie działa

1. Wymień baterie.
2. Sprawdź czy baterie są włożone prawidłowo.
3. Sprawdź czy podłączono źródło zasilania.

### Brak obrazu lub dźwięku

1. Skonfiguruj jasność oraz kontrast.
2. Możliwa jest przerwa w nadawaniu programu.

### Normalny obraz, brak dźwięku

1. Naciśnij Vol+ , aby zwiększyć głośność.
2. Głośność została wyciszona, naciśnij przycisk MUTE, aby przywrócić dźwięk.
3. Zmień ustawienia systemu dźwiękowego.
4. Możliwa jest przerwa w nadawaniu programu.

### Obraz zakłócony jest chaotycznym falowaniem

Zazwyczaj spowodowane to jest miejscowymi zakłóceniami takimi, jak samochody, lampy oraz suszarki do włosów. Skonfiguruj ustawienie anteny, aby zmniejszyć zakłócenia.

### Śnieżenie lub zakłócenia

Jeżeli antena znajduje się w miejscu, w którym sygnał telewizyjny jest słaby, obraz może być zakłócony kropkami. Jeśli sygnał jest bardzo słaby, może być konieczne zainstalowanie specjalnej anteny, która poprawi jakość odbioru.

1. Skonfiguruj pozycję oraz orientację zewnętrzną/ wewnętrzną anteny.
2. Sprawdź podłączenie anteny.
3. Dostrój kanał
4. Spróbuj przełączyć na inny kanał. Możliwa jest przerwa w nadawaniu programu.

### Zakłócenia

Czarne plamy lub poziome paski pojawiają się na ekranie, obraz faluje, miga lub przesuwają się. Zazwyczaj spowodowane to jest zakłóceniami wywołanymi przez zapłon samochodu, neonowe lampy, wiertarki elektryczne lub inne urządzenia elektryczne.


### Duchy

Duchy spowodowane są przez zakłócenia drogi przekazu sygnału telewizyjnego. Jedną z dróg biegnie bezpośrednio, a druga jest odbita od wysokich budynków, gór lub innych obiektów. Zmiana kierunku lub pozycji anteny może poprawić jakość odbioru.

### Zakłócenia radiowe



Ten typ zakłóceń powoduje falowanie lub poprzeczne paski oraz, w niektórych przypadkach, utratę kontrastu obrazu. Znajdź oraz pozbadź się źródła zakłóceń radiowych.

## Montaż podstawy



Wkręt x 4

Podstawa x 2

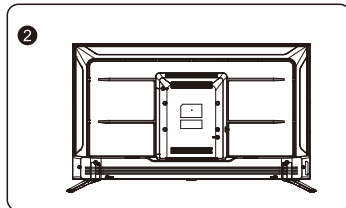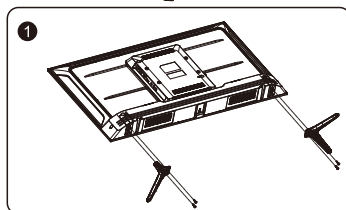

Przymocuj wspornik do urządzenia śrubami, aby zakończyć montaż.