

Instrukcja obsługi BLENDER RĘCZNY

Łuczniczka 



Model: JK - 2020

GRATULACJE!

Drogi Konsument, dziękujemy że wybrałeś produkt polskiej marki Łuczniczka. Blender ręczny zwiększy komfort przyrządzania Twoich posiłków i będzie dla Ciebie wsparciem w codziennych kuchennych zmaganiach. Dla Twojego bezpieczeństwa, wygody i bezproblemowego korzystania z urządzenia, zalecamy jednak zapoznanie się z niniejszą instrukcją obsługi jeszcze przed jego pierwszym użyciem.

OPIS ELEMENTÓW URZĄDZENIA

- A - Włącznik "I"- niższa prędkość pracy
- B - Włącznik "II"- wyższa prędkość
- C - Zdemontowana końcówka
- D - Ostrze



ZASADY BEZPIECZEŃSTWA

1. Nigdy nie dotykaj ostrza urządzenia, jeżeli jest podłączone do prądu.
2. Palce, włosy, odzież oraz jakiegokolwiek przedmioty z wyjątkiem blendowanej żywności, zawsze trzymaj z daleka od ostrza.
3. Przed zdjęciem końcówki blendera w celu jej wyczyszczenia, odłącz urządzenie od prądu.
4. Zachowaj szczególną ostrożność blendując gorące potrawy. Aby uniknąć oparzenia najlepiej użyj wysokiego naczynia.
5. Przed użyciem blendera upewnij się, że zdejmowana końcówka, która będzie miała kontakt z żywnością, została dokładnie wyczyszczona.
6. Nigdy nie zanurzaj korpusu urządzenia w wodzie ani żadnym innym płynie. Podczas blendowania potrawy zanurzaj w potrawie jedynie końcówkę z ostrzem.
7. Nie przekraczaj 50s ciągłej pracy urządzenia, aby uniknąć przegrzania silnika.
8. Używając blendera w pobliżu dzieci należy zachować szczególną ostrożność.
9. Ten produkt nie może być używany przez dzieci oraz osoby o obniżonej sprawności fizycznej lub umysłowej, chyba że zapewniony zostanie im nadzór oraz instruktaż odnośnie korzystania ze sprzętu w bezpieczny sposób.
10. Po użyciu zawsze odłączaj wtyczkę urządzenia od źródła prądu.
11. Jeżeli przewód zasilający urządzenie ulegnie uszkodzeniu, powinien zostać wymieniony przez

producenta, jego autoryzowany serwis napraw lub odpowiednio wykwalifikowanego specjalistę. Aby uniknąć uszkodzenia przewodu zasilającego unikaj jego zwijania, zginania i ściskania oraz trzymaj go z dala od źródeł ciepła.

12. Jeżeli blender wykazuje oznaki uszkodzenia, zrezygnuj z jego użycia i skontaktuj się ze sprzedawcą bądź autoryzowanym serwisem.
13. Ten produkt przeznaczony jest jedynie do użytku domowego.

INSTRUKCJA UŻYTKOWANIA

Pierwsze użycie

- Wyjmij urządzenie z opakowania.
- Wyczyść zdejmowaną końcówkę blendera oraz ostrze przy pomocy ściereczki, ciepłej

wody oraz odrobiny detergentu.

Sposób użycia

1. Podłącz zdejmowaną końcówkę blendera do jego korpusu przekręcając ją od symbolu otwartej kłódki w kierunku zamkniętej.
2. Podłącz wtyczkę urządzenia do źródła prądu.
3. Zanurz końcówkę blendera z ostrzem w pojemniku z żywnością, którą chcesz zblendować. Nie zanurzaj urządzenia powyżej linii łączenia końcówki z korpusem urządzenia.
4. Naciśnij przycisk "I" lub "II" aby zacząć blendowanie. Nie przekraczaj 50 sekund ciągłej pracy urządzenia.
5. Po skończonej pracy odłącz urządzenie od prądu. Zdejmij końcówkę blendera przekręcając ją w kierunku od zamkniętej kłódki do otwartej, a następnie wyczyść ją.

CZYSZCZENIE

- Przed rozpoczęciem czyszczenia odłącz urządzenie od prądu. I odłącz zdejmowaną końcówkę.
- Nigdy nie dotykaj ostrzy dłonią.
- Przed kontaktem blendera z żywnością zawsze upewnij się, że jest ona dokładnie wyczyszczona.
- Niektóre rodzaje żywności, takie jak marchewka, mogą powodować barwienie tworzywa, z którego zbudowana jest obudowa urządzenia. Regularne czyszczenie pomaga usunąć przebarwienia.



II klasa ochronności



Communate Europeene




Ten symbol oznacza, że produkt ten nie powinien być wyrzucany razem z innymi odpadami domowymi w całej UE. Aby zapobiec potencjalnym szkodom dla środowiska lub zdrowia ludzkiego w wyniku niekontrolowanego usuwania odpadów oraz w celu promowania zrównoważonego ponownego wykorzystania zasobów, należy je podać recynglowi. Aby zwrócić zużyte urządzenie, należy skorzystać ze specjalnych

systemów zwrotu i odbioru zużytej elektroniki lub skontaktować się ze sprzedawcą, u którego zakupiono produkt. Powinien on odebrać produkt do bezpiecznego recynglingu.

DANE TECHNICZNE

Napięcie: 220-240V

Moc: 1200W

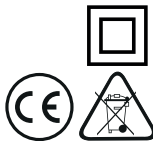

INFORMACJA

o postępowaniu ze zużyтым sprzętem elektrycznym i elektronicznym

W związku z obowiązkiem informacyjnym wynikającym z wprowadzenia ustawy o zużyтым sprzęcie elektrycznym i elektronicznym informujemy, że:

1. Zużyty sprzęt elektryczny i elektroniczny nie może być umieszczany z innymi odpadami. Sprzęt taki powinien być zbierany selektywnie o czym przypomina załączone oznakowanie (przekreślony, kołowy kontener na odpady).

2. Nieprzestrzeganie tej zasady może, przy nieprawidłowej utylizacji zużytego sprzętu, stanowić zagrożenie dla środowiska i zdrowia ludzi, wynikające z obecności w sprzęcie składników niebezpiecznych (takich jak np. okablowanie elektryczne, tworzywa sztuczne, baterie, wyłączniki, płytki obwodów drukowanych, itp.). Aby uniknąć takiego zagrożenia, składniki takie powinny zostać zebrane i w odpowiedni sposób przetworzone przez wyspecjalizowane firmy.

3. Dane o masie sprzętu zawiera informacja o pozostałych podstawowych parametrach urządzenia (w załączeniu). Gospodarstwo domowe spełnia ważną rolę w przyczynianiu się do ponownego użycia i odzysku, w tym recyklingu, zużytego sprzętu. Odbywa się to w szczególności poprzez uczestnictwo w systemie zbierania zużytych urządzeń.

Informujemy, że zużyty sprzęt możecie Państwo oddać bezpłatnie w sklepie, w którym został on zakupiony. Samodzielne demontowanie zużytego sprzętu jest niedopuszczalne. Ze sklepu zużyty sprzęt trafi następnie do wyspecjalizowanej firmy zajmującej się przetwarzaniem, odzyskiem (w tym recyklingiem) i unieszkodliwieniem składników niebezpiecznych.

ŻYCZYMY SATYSFAKCJI Z UŻYTKOWANIA NINIEJSZEGO WYROBU.

Importer:
Aspa ELECTRO Sp. z o.o.
51-162 Wrocław, ul. Macieja Miechowity 1

MAGAZYN GŁÓWNY/SERWIS:
ul. Bierutowska 81 bud. A
51-317 Wrocław
tel./fax: +48 71 722 52 88
e-mail: reklamacje@aspa.pl

Importer deklaruje, że wyrób został wyprodukowany zgodnie z Dyrektywą Niskonapięciową LVD 2014/35/EU, Dyrektywą o Kompatybilności Elektromagnetycznej EMC 2014/30/EU, Dyrektywą ws. Ograniczenia stosowania niektórych niebezpiecznych substancji w sprzęcie elektrycznym i elektronicznym RoHS 2011/65/EU.

Lucznik

Instruction Manual

HAND BLENDER



Model: JK - 2020

CONGRATULATIONS!

Dear Consumer, thank you for choosing the Polish brand Łucznik. Hand blender is a product of everyday use - for your safety, convenience and trouble-free use of the device, we recommend that you read this user manual before the first use.

HAND-HELD BLENDER

- A - Speed "I" Low speed
- B - Speed "II" High speed
- C - Motor Unit
- D - Blade attachment



SAFETY

1. Close supervision is necessary when and appliance near children.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.

GENERAL

- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand-held blender's shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufacturer's instructions.
- Never touch the blades while the machine's plugged in.
- Keep fingers, hair, clothing, and utensils away from moving parts.
- Unplug after use and before changing attachments.

- Never blend hot oil or fat.
- Don't let children or infirm people use the hand blender without supervision.
- Never use a damaged hand-held blender, Get it checked or repaired in your local place.
- Never put the power handle in water or let the cord or plug get wet-you could get an electric shock.
- Never let the cord touch hot surfaces or hand down where a child grabs it.
- Never use an unauthorized attachment.
- Young children should be supervised to ensure that they do not play with this appliance.

Important

- With heavy mixtures, don't use your hand blender for longer than 50 seconds in any four minutes period-it'll overheat.
- Only use your hand blender for its intended domestic use.

Before using for the first time

1. Remove all packaging.
2. Wash the parts: see 'cleaning'.

Know your hand blender

To use the hand blender with hand-held accessory

- You can merge liquids and solids into a blend.

For beaker blending

- Put the base/lid on the bottom of the beaker. (This stops the beaker sliding on the worktop.)
- Don't fill the beaker above 800ml.

For saucepan blending

Take the pan off the heat and let it cool slightly, otherwise your hand-held blender could overheat.

1. Fit the power handle inside the blender shaft, turn and lock.
2. Plug in. To avoid splashing, place the blade in the food before switching on.

3. Hold the beaker steady. Then press either speed button.
Don't let liquid get above the joint between the power handle and blender shaft.
Move the blade through the food and use a stabbing action.
If your blender gets blocked, unplug before clearing.
4. After use, unplug and dismantle.

WARNING:

- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning;
- Do not allow children to use the blender without supervision.

Processing guide

Maximum Amount	Operate time	Rest time
800ml	1 min	1 min

CLEANING

- Always switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Don't touch the sharp blades.
- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand-held blender shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufacturer's instructions.
- Some foods, e.g. carrot, may discolour the plastic. Rubbing with a cloth dipped vegetable oil help remove discolouring.

The list of the marking symbol

V	Volt	Hz	Hertz
W	Watt	~	Alternating current



II protection class



Communate Europene




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

DANE TECHNICZNE

Voltage: 220-240V

Power: 1200W

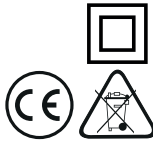

INFORMATION

on the treatment of used electrical and electronic equipment

To observe the regulations regarding use and disposal of electronic and electric equipment, please be advised of the following:

1. Worn electrical and electronic equipment must not be placed with other wastes. Such equipment should be collected selectively, as indicated by the marking on the product's packaging and in this manual (crossed-out waste container).
2. Failure to observe this rule may result in a threat to the environment and human health resulting from the presence of components which are considered hazardous or dangerous for the environment (such as electrical wiring, plastics, batteries, switches, printed circuit boards, etc.) in the equipment. To avoid such a threat, the equipment should be collected and appropriately processed by specialized companies.
3. This manual contains information on all the basic parameters of the device. Remember that your household plays an important role in contributing to re-use and recovery, including recycling, of used equipment. This is done in particular through participation in the collection of used equipment.

Be advised that in most countries used equipment can be returned free of additional charge (save eventual shipping costs) at the store where it was purchased, or at a specialized recycling center or company dealing in processing, re-covery (incl. recycling) and the disposal of hazardous components. For details, please contact your local government representative. Disassembly of used equipment is not allowed.

WE WISH YOU SATISFACTION WITH THE USE OF THIS PRODUCT !

Importer:
ASPA Electro Sp. z o.o.
ul. Miechowity 1, 51-162 Wrocław, Poland

MAGAZYN GŁÓWNY/SERWIS:
ul. Bierutowska 81 bud. A
51-317 Wrocław
tel./fax: +48 71 722 52 88
e-mail: reklamacje@aspa.pl

The importer declares that the product has been manufactured in accordance with the LVD Low Voltage Directive 2014/35/EU, Directive on Electromagnetic Compatibility EMC 2014/30/EU and the Directive on restrictions on the use of certain hazardous substances in electrical and electronic equipment RoHS2 2011/65/EU.

