

Strona główna » WEKOME » Instrukcja obsługi słuchawek Bluetooth WEKOME Beluga S9 TWS



zawartość

- 1 Słuchawki douszne Bluetooth WEKOME Beluga S9 TWS**
- 2 Często zadawane pytania**
- 3 Zmień wygaszacz ekranu**
- 4 TRYBY GRY**
- 5 TRYB FUNKCJI SŁUCHAWEK**
- 6 INSTRUKCJA OBSŁUGI SŁUCHAWEK**
- 7 TRYB KOMUNIKACJI**
- 8 OŚWIADCZENIE FCC**
- 9 Gwarancja**
- 10 Dokumenty/zasoby**
 - 10.1 Odniesienia**



WEKOME

Słuchawki douszne Bluetooth WEKOME Beluga S9 TWS



Często zadawane pytania

Często zadawane pytania

- **P:** Jak rozwiązać problem, jeśli produkt się nie włącza?
 - **A:** Sprawdź źródło zasilania i połączenia, aby upewnić się, że wszystko jest prawidłowo

skonfigurowane. Jeśli problem będzie się powtarzał, skontaktuj się z obsługą klienta, aby uzyskać pomoc.

- **P:** Czy mogę stosować z tym produktem akcesoria innych marek?
 - **A:** Aby zapewnić kompatybilność i optymalną wydajność, zaleca się korzystanie z akcesoriów specjalnie zaprojektowanych dla tego produktu.

Zmień wygaszacz ekranu



1. Naciśnij i przytrzymaj ekran, aby zmienić wzór wygaszacza ekranu


TRYB ODTWARZANIA




1. Kliknij tryb słuchawek Bluetooth, telefon wyszuka „So9” w celu nawiązania połączenia, a słuchawki przejdą w tryb roboczy.
2. Kliknij tryb głośnika Bluetooth, a telefon wyszuka BOX „So9”, aby się połączyć. Box odtworzy utwory z telefonu.
3. Kliknij na tryb głośnika karty pamięci, a urządzenie będzie odtwarzać utwory z karty pamięci.
4. Kliknij tryb słuchawek na karcie pamięci, a pole wyszukiwania wyszuka „So9”, aby się połączyć. Słuchawki odtworzą utwory z karty pamięci.



TRYB FUNKCJI SŁUCHAWEK

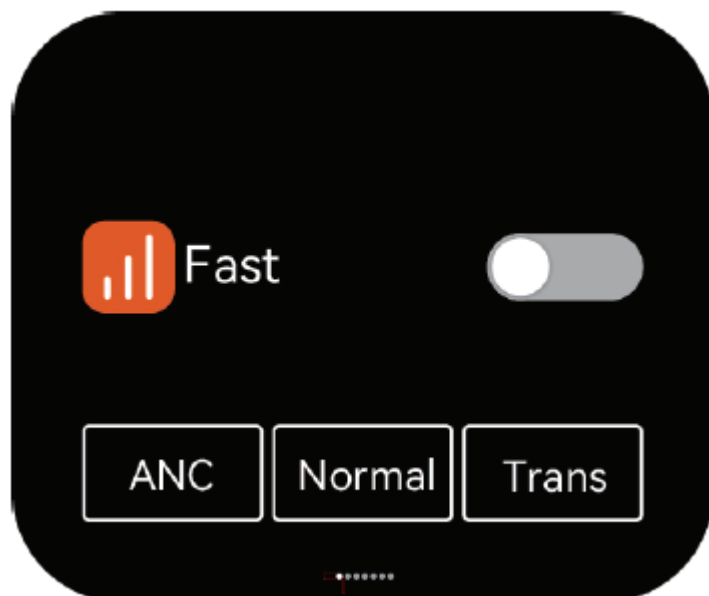


1. Kliknij, aby wybrać preferowany tryb.

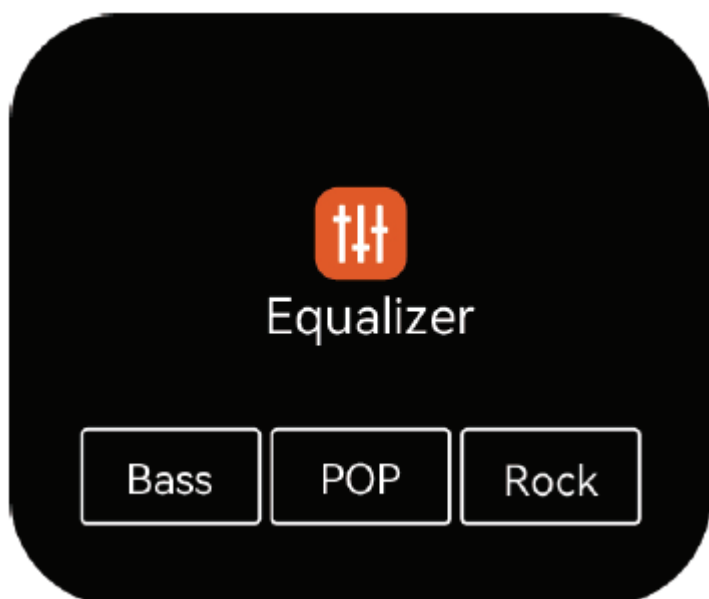

1. Kliknij, aby wybrać ulubione efekty dźwiękowe.



INSTRUKCJA OBSŁUGI SŁUCHAWEK

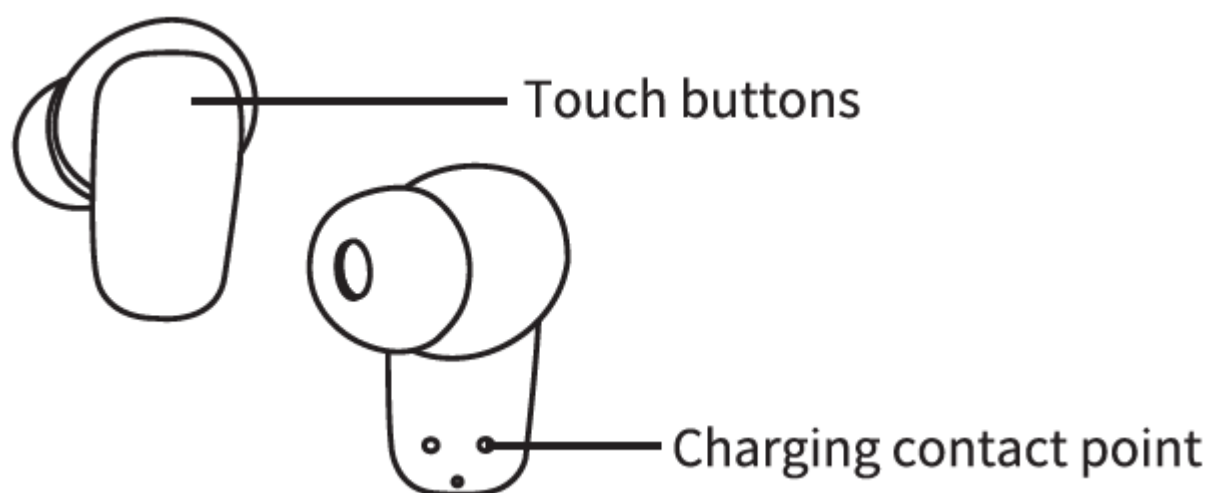

Lista operacji:



Pairing:	When you open the cover to take out the earphones, both sides will flash quickly for about 5 seconds. After that, only one earphone will flash red and white, indicating a successful pairing.
Power ON/OFF:	The earphones will turn on automatically when taken out of the charging case. To turn them off, hold down for 8 seconds. To charge, place them in the charging case, and they will turn off if not connected after holding down for 8 seconds.
Music: Play/Pause, Answer/End call:	Single click either side.
Voice Assistant:	Quad-click either side to summon the voice assistant.
Call Rejection:	Long press either side to reject an incoming call.
Previous Track:	Double click the left side.
Next Track:	Double click the right side.
Volume Up:	Triple click the right side.
Volume Down:	Triple click the left side.
Mode Switching:	Long press either side for 2 seconds to switch between standard, transparency, and noise reduction modes.

TRYB KOMUNIKACJI





1. Jeśli słuchawki utracą połączenie z etui ładującym, otwórz pokrywę etui ładującego i trzykrotnie kliknij przycisk oznaczony  kolorem białym, co oznacza pomyślne ponowne nawiązanie połączenia.
2. Pojedyncze kliknięcie przycisku  powoduje wstrzymanie aktualnie odtwarzanego utworu.
3. Pojedyncze kliknięcie przycisku  odtwarza poprzedni utwór. Pojedyncze kliknięcie przycisku  odtwarza następny utwór.
4. Pojedyncze kliknięcie przycisku  powoduje zmniejszenie głośności. Pojedyncze kliknięcie przycisku  powoduje zwiększenie głośności.

 Dziękujemy za zakup i korzystanie ze słuchawek bezprzewodowych Bluetooth.

Niniejsza instrukcja pomoże Ci w korzystaniu ze słuchawek Bluetooth.

Przed użyciem słuchawek Bluetooth musisz najpierw zrozumieć i zapoznać się z funkcją Bluetooth w swoim telefonie komórkowym lub innych urządzeniach elektronicznych obsługujących technologię Bluetooth, takich jak funkcja Bluetooth w komputerze.

Zasady bezpieczeństwa:

1. To ensure safety, please comply with the rules mentioned in this manual. We strongly recommend that you read this manual before using the Bluetooth earphones.
2. Be cautious of sharp edges, uneven surfaces, metal parts, accessories, and packaging to avoid any possible injuries.
3. Do not disassemble or repair this product. This may cause fire, electrical breakdown, or even complete damage to the product, which is not covered by the warranty.
4. Do not wipe the product with oil or other volatile liquids.
5. Do not use the product in dangerous places.

Safety Warning

- The battery must not be exposed to overheating environments such as direct sunlight, fire, or similar conditions. If the battery becomes severely swollen, do not continue to use it.
- Improper battery replacement can lead to explosion risks; it is strictly forbidden to replace the battery on your own.
- The power adapter suitable for charging this device is DC5V-1A. Using a power adapter with higher voltage to charge this device may risk damaging the earphones.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Warranty

Warranty Card

Thank you for purchasing our product. Please fill in the following information at the time of purchase and keep this card properly to facilitate us in providing you with comprehensive after-sales service. To ensure your legal rights and usage privileges, please carefully read and retain the terms and conditions.

- **Model produktu:**
- **Data zakupu:**
- **Nazwa użytkownika:**
- **Tel.:**



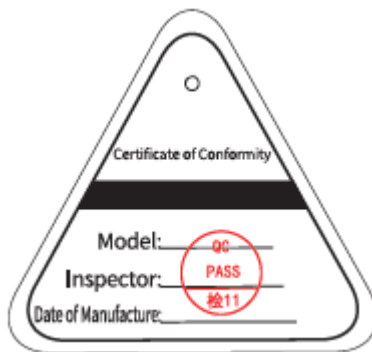

Dokumenty / Zasoby

	WEKOME Beluga S9 TWS Słuchawki Bluetooth [pdf] Instrukcja obsługi S09, 2BGIM-S09, 2BGIMS09, Beluga S9 TWS Słuchawki Bluetooth, Beluga S9 Słuchawki douszne, Beluga Słuchawki douszne, Beluga, Słuchawki douszne, S9 Słuchawki douszne, Słuchawki douszne Bluetooth, Słuchawki douszne, Słuchawki douszne TWS, Słuchawki douszne Bluetooth
--	---

Odniesienia

- [Instrukcja obsługi](#)

[Manuals+](#) | [Prześlij](#) | [Głębokie wyszukiwanie](#) | [Polityka prywatności](#) | [@manuals.plus](#) | [YouTube](#)

Niniejsza strona internetowa jest niezależną publikacją i nie jest powiązana ani wspierana przez żadnego z właścicieli znaków towarowych. Znak słowny i logo „Bluetooth®” są zastrzeżonymi znakami towarowymi należącymi do Bluetooth SIG, Inc. Znak słowny i logo „Wi-Fi®” są zastrzeżonymi znakami towarowymi należącymi do Wi-Fi Alliance. Jakiegokolwiek użycie tych znaków na tej stronie internetowej nie oznacza żadnego powiązania ani wsparcia.

