

[Strona główna](#) » [Denver](#) » **denver TSP-306NR Instrukcja obsługi głośnika Bluetooth**

zawartość

1 głośnik Bluetooth Denver TSP-306NR

2 Informacje o produkcji

3 FUNKCJE

4 SPECYFIKACJA

5 Informacje o adapterze

6 Dokumenty / Zasoby

6.1 Odniesienia

DENVER®

Głośnik Bluetooth Denver TSP-306NR



Informacje o produkcie

- **Nazwa produktu:** GŁOŚNIK BLUETOOTH TSP-306NR

- **Producent:** Denver Electronics
- **Strona internetowa:** www.facebook.com/denverelectronics

Funkcje

1. **POWER:** Włączanie/wyłączanie głośnika.
2. **POPZEDNI UTWOR/GŁOŚNOŚĆ :** Naciśnij, aby wybrać poprzedni utwór do odtworzenia. Naciśnij i przytrzymaj przez 3 sekundy, aby zmniejszyć głośność.
3. **ODTWARZANIE/PAUZA:** Naciśnij, aby przełączać się między pauzą i odtwarzaniem.
4. **NASTĘPNY UTWOR/GŁOŚNOŚĆ+:** Naciśnij, aby wybrać następny utwór do odtworzenia. Naciśnij i przytrzymaj przez 3 sekundy, aby zwiększyć głośność.
5. **MP3/AUX/BT-MODE:** Naciśnij, aby przełączać się między odtwarzaczem MP3, wejściem AUX i Bluetooth.
6. **PORT USB/microSD:** Podłącz kartę USB/microSD, aby odtwarzać muzykę w formacie MP3.
7. **Wejście DC 9V:** Ładuj przy użyciu określonego adaptera 9V, 1,5A, w przeciwnym razie głośnik może ulec uszkodzeniu.
8. **Wskaźnik ładowania:** Gdy bateria jest słaba, wskaźnik ładowania świeci na czerwono. Gdy bateria jest w pełni naładowana, wskaźnik ładowania świeci na niebiesko.
9. **Gniazdo wejściowe AUX IN 3,5 mm:** do podłączania urządzeń liniowych (np. odtwarzacza CD/MP3/DVD, systemu hi-fi, komputera).
10. **BAS:** Regulacja ogólnego poziomu basów.
11. **TREBLE:** Regulacja ogólnego poziomu tonów wysokich.
12. **KONTROLA ECHA:** Dostosuj intensywność efektu echa.
13. **GŁOŚNOŚĆ MIKROFONU:** Regulacja głośności mikrofonu.
14. **MIC IN Gniazdo wejściowe 6,3 mm 1/4 cala:** do podłączenia mikrofonu.
15. **PRIORYTET MIKROFONU :** Naciśnij, aby automatycznie zmniejszyć głośność muzyki podczas korzystania z mikrofonu.
16. **NAGRYWANIE:** Naciśnij, aby nagrywać przez port USB/microSD.
17. **EQ:** Naciśnij, aby wybrać tryb EQ spośród Pop, Rock, Jazz, Classic, Normal dla USB/microSD.
18. **POWTARZAJ :** Naciśnij, aby powtórzyć utwory.
19. **Przełącznik oświetlenia LED :** Włącza/wyłącza oświetlenie LED.
20. **Głośność:** Dostosuj ogólny poziom głośności.

Klawisze i funkcje pilota zdalnego sterowania

1. **POWER:** Włączanie/wyłączanie głośnika.
2. **KLAWISZE NUMERYCZNE:** Naciśnij, aby wybrać utwory na USB/microSD.

3. **EQ:** Naciśnij, aby wybrać tryb EQ spośród Pop, Rock, Jazz, Classic, Normal dla USB/microSD.
4. **Powtórz:** Naciśnij, aby powtórzyć pojedynczy utwór lub wszystkie utwory. Naciśnij raz, aby powtórzyć pojedynczy utwór, naciśnij dwa razy, aby powtórzyć wszystkie utwory, naciśnij trzy razy, aby wyjść z trybu powtarzania i powrócić do normalnego odtwarzania.
5. **PREVIOUS TRACK:** Press to select the previous track for playback in USB/microSD/BT mode.
6. **STOP/PLAY:** The key to stop/play in USB/TF/BT.
7. **NEXT TRACK:** Press to select the next track for playback in USB/microSD/BT mode.
8. **MUTE:** Press to mute/unmute the sound.
9. **VOL-:** Press to reduce the volume.
10. **VOL+:** Press to increase the volume.


Packaging Contents

- 1x main unit
- 1x User Manual
- 1x Remote Control
- 1x Charging Adapter
- 1x Wired Microphone

Specification

- **Bluetooth Version:** 5.0
- **Battery Capacity:** 7.4 V 1800 mAh lithium Battery
- **Battery Type:** Lithium Battery
- **Power Supply:** DC 9 V/1.5 A input
- **Speaker Output Power:** 20W
- **Impedance:** 4 ohm
- **Frequency Response:** 40 Hz-20 KHz
- **Average active efficiency:** 82.83%
- **Efficiency at low load (10%):** 75%
- **No-load power consumption:** <0.1 W

FUNCTIONS

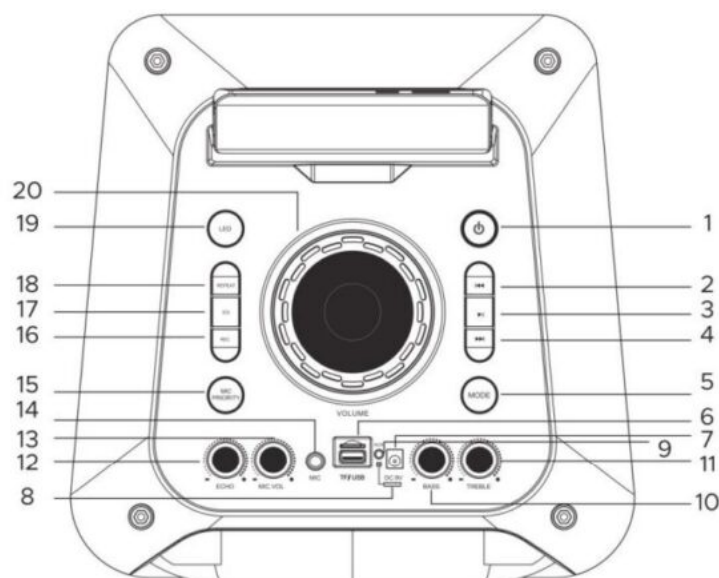

1. POWER

Turn speaker on/off.

2. PREVIOUS TRACK/VOL-

Press to select the previous track for playback. Press and hold for 3 seconds to reduce the volume.

3. PLAY/PAUSE

Press to toggle between pause and playback.

4. NEXT TRACK/VOL+

Press to select the next track for playback. Press and hold for 3 seconds to increase the volume.

5. MP3/AUX/BT-MODE

Press to toggle between MP3 player, Aux in and Bluetooth.

6. USB/microSD PORT

Connect your USB/microSD card to playback music in MP3 format.

7. DC 9V input

Charge with the specified adapter 9V, 1.5A, otherwise the speaker may be damaged.

8. Charging indicator

When the battery is low, the charging indicator lights up red. When the battery is fully charged, the charging indicator lights up blue.

9. AUX IN

3.5mm input jack for connecting line level devices (e.g. CD/MP3/DVD player, hi-fi system, PC).

10. BASS

Adjust the overall bass level.

11. **TREBLE**

Adjust the overall treble level.

12. **ECHO CONTROL**

Adjust the intensity of the echo effect.

13. **MIC VOLUME**

Adjust the microphone volume.

14. **MIC IN**

6.3mm 1/4" input jack for microphone.

15. **MIC PRIORITY**

Press to automatically reduce the music volume when using the microphone.

16. **RECORD**

Press to record via USB/microSD port.

17. **EQ**

Press to select EQ mode as Pop, Rock, Jazz, Classic, Normal for USB/microSD.

18. **REPEAT**

Press to repeat tracks.

19. **LED light switch**

Turn LED light on/off.

20. **Volume**

Adjust the overall volume level.

REMOTE CONTROL KEYS AND FUNCTIONS

1. **POWER:** Turn speaker on/off.

2. **NUMERICAL KEYS:** Press to select tracks on USB/microSD.

3. **EQ:** Press to select EQ mode as Pop, Rock, Jazz, Classic, Normal for USB/microSD.

4. **Repeat:** Press to repeat single track or all tracks. Press once to repeat single track, press twice to repeat all tracks, press three times to exit repeat mode and return to normal playback.

5.  Press to select the previous track for playback in USB/microSD/BT mode.

6.  The key to stop/play in USB/TF/BT.

7.  Press to select the next track for playback in USB/microSD/BT mode.

8. **MODE:** Press once to cycle through connected devices (BLUETOOTH – USB –microSD – FM).

9. **MUTE:** Press to mute/unmute the sound.

10. **VOL-:** Press to reduce the volume.

11. **VOL+**: Press to increase the volume.

PACKAGING CONTENTS

- 1x main unit
- 1x User Manual
- 1x Remote Control
- 1x Charging Adapter
- 1x Wired Microphone

SPECIFICATION

- **Bluetooth Version:** 5.0
- **Battery Capacity:** 7.4 V 1800 mAh lithium Battery
- **Battery Type:** Lithium Battery
- **Power Supply:** DC 9 V/1.5 A input
- **Speaker Output Power:** 20W
- **Impedance:** 4 ohm
- **Frequency Response:** 40 Hz-20 KHz

Adaptor Information

Manufacturer’s name or trade mark, commercial registration number and address:
Dong Guan JFEC Electronic Technical Product Inc. 9144190069476483X1 No. 18. Minye Street.
No. 178 Industrial Zone. Tangxia Town. Dongguan City. Guangdong Province. P. R. China

1. **Model identifier:** JF012WR-0900130VH
2. **Input voltage:** 100 – 240 VAC
3. **Input AC frequency:** 50/60 HZ
4. **Output voltage:** 9 V
5. **Output current:** 1.3 A
6. **Output power:** 11.7 W
7. **Average active efficiency:** 82.83%
8. **Efficiency at low load (10%):** 75%
9. **No-load power consumption:** <0.1 W

Please notice-All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

www.denver-electronics.com



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly. Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

Wszystkie miasta mają wyznaczone punkty zbiórki, gdzie sprzęt elektryczny i elektroniczny można oddać bezpłatnie w stacjach recyklingu i innych punktach zbiórki lub odebrać z gospodarstw domowych. Dodatkowe informacje są dostępne w dziale technicznym Twojego miasta.

Niniejszym Inter Sales A/S oświadcza, że typ urządzenia radiowego TSP-306NR jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: www.denver-electronics.com, a następnie kliknij ikonę wyszukiwania na górze strony internetowej. Wpisz numer modelu: TSP-306NR. Teraz wprowadź stronę produktu, a dyrektywa RED znajduje się w plikach do pobrania/innych plikach do pobrania

- **Zakres częstotliwości roboczej** : 2402 ~ 2480 MHz
- **Maksymalna moc wyjściowa** : 43 dBm

⦿ DENVER ELECTRONICS A/S Omega 5A, Soeften DK-8382 Hinnerup

Dania

www.facebook.com/denverelectronics

<https://manual-hub.com/>

	denver TSP-306NR Głośnik Bluetooth [pdf] Instrukcja obsługi TSP-306NR, Głośnik Bluetooth TSP-306NR, Głośnik Bluetooth, Głośnik
--	---

Odniesienia

- [Instrukcja obsługi](#)

[Manuals+](#) | [Prześlij](#) | [Głębokie wyszukiwanie](#) | [Polityka prywatności](#) | [@manuals.plus](#) | [YouTube](#)

Ta strona internetowa jest niezależną publikacją i nie jest ani powiązana, ani popierana przez żadnego z właścicieli znaków towarowych. Znak słowny „Bluetooth®” i logo są zarejestrowanymi znakami towarowymi należącymi do Bluetooth SIG, Inc. Znak słowny „Wi-Fi®” i logo są zarejestrowanymi znakami towarowymi należącymi do Wi-Fi Alliance. Jakiemukolwiek użycie tych znaków na tej stronie internetowej nie oznacza żadnego powiązania ani poparcia.

