



GNIAZDKO Z MIERNIKIEM SP401M MATTER

Instrukcja obsługi
i warunki gwarancji

SP401M METER SOCKET

Operating Manual
& Warranty Terms



WPROWADZENIE

Dziękujemy za zaufanie, jakim nas Państwo obdarzyli, dokonując zakupu urządzenia marki **Setti+**. Jesteśmy przekonani, że to bardzo dobrej jakości urządzenie, zapewni Państwu dużo radości i satysfakcji z jego użytkowania.

NALEŻY DOKŁADNIE PRZECZYTAĆ INSTRUKCJĘ OBSŁUGI I JEJ PRZESTRZEGAĆ!

To urządzenie jest przeznaczone do użytku domowego lub podobnego, nie dotyczącego celów komercyjnych. Producent nie ponosi odpowiedzialności za szkody powstałe w wyniku użytkowania niewłaściwego lub niezgodnego z przeznaczeniem.

WAŻNE ŚRODKI OSTROŻNOŚCI

1. Nie należy uruchamiać urządzenia jeżeli ma uszkodzoną wtyczkę lub obudowę.
2. Ze względów bezpieczeństwa, do wszelkich napraw urządzenia uprawniony jest jedynie producent, serwis autoryzowany przez producenta lub osoba o odpowiednich kwalifikacjach.
3. Nie wolno rozkręcać obudowy urządzenia, próbować naprawiać i ingerować we wnętrze

urządzenia.

4. Nie należy dotykać urządzenia mokrymi dłońmi.
5. Niniejszy sprzęt może być użytkowany przez dzieci w wieku co najmniej 8 lat i przez osoby o obniżonych możliwościach fizycznych, umysłowych i osoby o braku doświadczenia i znajomości sprzętu, jeżeli zapewniony zostanie nadzór lub instruktaż odnośnie użytkowania sprzętu w bezpieczny sposób, tak aby związane z tym zagrożenia były zrozumiałe. Dzieci nie powinny bawić się sprzętem. Dzieci bez nadzoru nie powinny wykonywać czyszczenia i konserwacji sprzętu.
6. Urządzenie przeznaczone jest do użytku wewnątrz pomieszczeń, temperatura pracy nie powinna przekraczać zakresu 0-40°C.



7. Gniazdo należy stosować wyłącznie

w instalacjach ze stykiem ochronnym/
bolcem uziemiającym.


8. Nie należy umieszczać i korzystać z gniazda w pomieszczeniach o podwyższonej wilgotności.
9. Nie należy zanurzać urządzenia w wodzie oraz innych płynach.
10. Należy chronić urządzenie przed wilgocią.
11. Należy chronić urządzenie przed gorącymi powierzchniami.

DANE TECHNICZNE

Model	SP401M
Napięcie i częstotliwość znamionowa wejście/wyjście	85-250 V~ ;50/60 Hz
Prąd znamionowy	16 A
Maksymalna moc wyjściowa	3680 W
Wilgotność pracy	20-80% RH, bez kondensacji
Temperatura pracy	0-40°C
Zużycie energii w trybie czuwania	0.5 W
Częstotliwość i standard łączności	2.4 GHz, 802.11 b/g/n

Zakres częstotliwości	2412 - 2472 MHz
Maksymalna moc transmisji	14.14 dBm
Wymagania systemowe	Android, iOS
Obsługa	Setti+, Tuya
Sterowanie głosowe	Amazon Alexa; Google Assistant

OPIS PRODUKTU

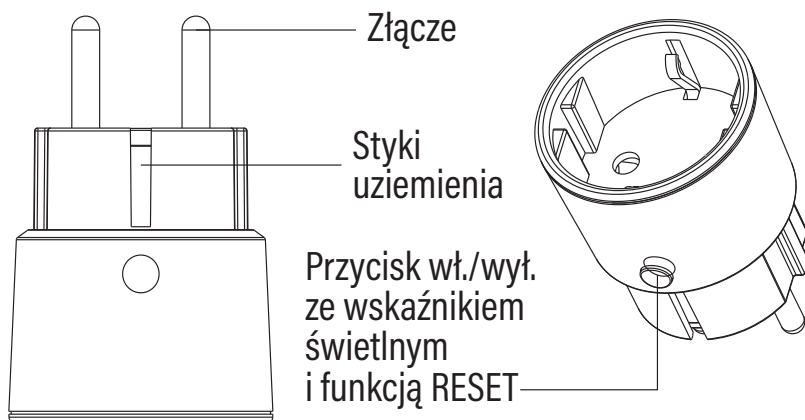

INSTALACJA

1. Podłącz gniazdo zasilające do gniazda elektrycznego AC z uziemieniem o napięciu zasilania i częstotliwości 85-250 V~ 50/60 Hz.
2. Naciśnij przycisk wł./wył, aby włączyć lub wyłączyć zasilanie w gnieździe:
 - wskaźnik podświetlony: włączone zasilanie,
 - wskaźnik niepodświetlony: wyłączone zasilanie.

INSTALACJA I OBSŁUGA APLIKACJI

1. Pobierz aplikację:



w aplikacji Google Play
wyszukaj Setti+



w aplikacji App Store
wyszukaj Setti+

2. Otwórz zainstalowaną aplikację.
3. Jako nowy użytkownik załóż nowe konto. W przypadku posiadania konta zaloguj się korzystając z własnych danych dostępowych.
4. Zainstaluj urządzenie w gnieździe elektrycznym, następnie naciśnij i przytrzymaj przycisk przez 6 sekund, aż światło wskaźnika na przycisku zacznie szybko migać.
5. Włącz łączność Bluetooth i Wi-Fi w telefonie.
6. W prawym górnym rogu aplikacji wybierz „+” a następnie , zeskanuj kod QR znajdujący się na obudowie gniazda.
7. Wybierz sieć Wi-Fi, wprowadź hasło i wybierz „Dalej”.

8. Aplikacja doda urządzenie, następnie potwierdź wybierając „Zakończ”. Po pomyślnym dodaniu urządzenia do aplikacji możesz w pełni cieszyć się zdalną obsługą.
9. W celu zrestartowania urządzenia i dokonania nowej konfiguracji, naciśnij i przytrzymaj przycisk wł./wył. przez 6 sekund do czasu, aż wskaźnik zacznie migać.

Szczegółowa instrukcja obsługi zdalnej urządzenia jest dostępna na stronie internetowej <https://setti.pl/aplikacja> lub po zeskanowaniu kodu QR:



ROZWIĄZYWANIE PROBLEMÓW

PROBLEM	MOŻLIWA PRZYCZYNA	ROZWIĄZANIE
Wskaźnik na przycisku nie przestaje migać.	Gniazdo nie zostało prawidłowo skonfigurowane.	Skonfiguruj gniazdo zgodnie z sekcją „Instalacja i obsługa aplikacji”.

Brak możliwości konfiguracji gniazda z siecią Wi-Fi.	Router pracuje w częstotliwości 5GHz.	Zmień częstotliwość pracy routera z 5GHz na 2.4GHz.
	Wystąpił problem z połączeniem Wi-Fi.	Sprawdź, czy sygnał Wi-Fi routera działa prawidłowo.
Gniazdo nie reaguje na zmiany ustawień w aplikacji.	Wystąpił problem z połączeniem Wi-Fi.	Sprawdź, czy sygnał Wi-Fi routera działa prawidłowo.
	Urządzenie znajduje się za daleko od źródła sygnału Wi-Fi.	Wzmocnij sygnał Wi-Fi routera lub zmień jego miejsce.
	Konfiguracja routera została zmieniona.	Skonfiguruj gniazdo na nowo, zgodnie z sekcją „Instalacja i obsługa aplikacji”.

DEKLARACJA:

ART-DOM Sp. z o.o. niniejszym oświadcza, że gniazdo Wi-Fi jest zgodne z odpowiednimi wymaganiami unijnego prawodawstwa harmonizacyjnego: dyrektywą 2014/53/UE i innym unijnym prawodawstwem harmonizacyjnym. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem: www.artdom.net.pl/deklaracja/SP401M/

EKOLOGICZNA I PRZYJAZNA DLA ŚRODOWISKA UTYLIZACJA

To urządzenie jest oznaczone, zgodnie z Dyrektywą Parlamentu Europejskiego i Rady 2012/19/UE z dnia 4 lipca 2012 r. w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE), symbolem przekreślonego kontenera na odpady:



Nie należy wyrzucać urządzeń oznaczonych tym symbolem, razem z odpadami domowymi.

Urządzenie należy zwrócić do lokalnego punktu przetwarzania i utylizacji odpadów lub skontaktować się z władzami miejskimi.

MOŻESZ POMÓC CHRONIĆ ŚRODOWISKO!

Właściwe postępowanie ze zużytym sprzętem elektrycznym i elektronicznym przyczynia się do uniknięcia szkodliwych dla zdrowia ludzi i środowiska naturalnego konsekwencji, wynikających z obecności składników niebezpiecznych oraz niewłaściwego składowania i przetwarzania takiego sprzętu.

WARUNKI GWARANCJI DOTYCZĄCE GNIAZDA

1. ART-DOM Sp. z o.o. z siedzibą w Łodzi (92-402) przy ul. Zakładowej 90/92 Numer Krajowego Rejestru Sądowego 0000354059 (Gwarant) gwarantuje, że zakupione urządzenie jest wolne od wad fizycznych. Gwarancja obejmuje tylko wady wynikające z przyczyn tkwiących

w rzeczy sprzedanej (wady fabryczne).

2. Ujawniona wada zostanie usunięta na koszt Gwaranta w ciągu 14 dni od daty zgłoszenia uszkodzenia do serwisu autoryzowanego lub punktu sprzedaży.
3. W wyjątkowych przypadkach, np. konieczności sprowadzenia części zamiennych od producenta, termin naprawy może zostać wydłużony do 30 dni.
4. Okres gwarancji dla użytkownika wynosi 24 miesiące od daty wydania towaru.
5. Towar przeznaczony jest do używania wyłącznie w warunkach indywidualnego gospodarstwa domowego.
6. Gwarancja nie obejmuje:
 - a. uszkodzeń powstałych na skutek używania urządzenia niezgodnie z instrukcją obsługi,
 - b. uszkodzeń mechanicznych, chemicznych lub termicznych,
 - c. napraw i modyfikacji dokonanych przez firmy lub osoby nieposiadające autoryzacji producenta,
 - d. części z natury łatwo zużywalnych lub materiałów eksploatacyjnych takich jak: baterie, żarówki, bezpieczniki, filtry, pokrętła, półki, akcesoria,
 - e. instalacji, konserwacji, przeglądów, czyszczenia, odblokowania, usunięcia zanieczyszczeń oraz instruktażu.
7. O sposobie usunięcia wady decyduje Gwarant. Usunięcie potwierdzonej wady urządzenia nastąpi poprzez wykonanie naprawy gwarancyjnej lub wymianę urządzenia. Gwarant może dokonać naprawy, gdy kupujący żąda wymiany lub Gwarant może dokonać wymiany, gdy kupujący żąda naprawy, jeżeli

doprowadzenie do zgodności towaru (urządzenia) zgodnie z udzieloną gwarancją w sposób wybrany przez kupującego jest niemożliwe albo wymagałoby nadmiernych kosztów dla Gwaranta. W szczególnie uzasadnionych wypadkach, jeżeli naprawa i wymiana są niemożliwe lub wymagałyby nadmiernych kosztów dla Gwaranta może on odmówić doprowadzenia towaru do zgodności z udzieloną gwarancją i zaproponować inny sposób załatwienia reklamacji z gwarancji.

8. Wymiany towaru dokonuje punkt sprzedaży, w którym towar został zakupiony (wymiana lub zwrot gotówki) lub autoryzowany punkt serwisowy, jeżeli dysponuje taką możliwością (wymiana). Zwracane urządzenie musi być kompletne, bez uszkodzeń mechanicznych. Niespełnienie tych warunków może spowodować nieuznanie gwarancji.
9. W przypadku braku zgodności towaru z umową sprzedaży, kupującemu z mocy prawa przysługują środki ochrony prawnej ze strony i na koszt sprzedawcy, a gwarancja nie ma wpływu na te środki ochrony prawnej.
10. Niniejsza gwarancja obowiązuje na terytorium Polski.
11. Warunkiem dokonania naprawy lub wymiany urządzenia w ramach gwarancji jest przedstawienie dowodu zakupu oraz użytkowanie towaru zgodnie z informacjami zawartymi w instrukcji obsługi.

UWAGA!

Uszkodzenie lub usunięcie tabliczki znamionowej z urządzenia może spowodować nieuznanie gwarancji.

Cały czas udoskonalamy nasze produkty, dlatego mogą się one nieznacznie różnić od zdjęć przedstawionych na opakowaniu oraz w instrukcji obsługi. Przed przystąpieniem do użytkowania urządzenia przeczytaj instrukcję obsługi.

**ART-DOM Sp. z o.o., ul. Zakładowa 90/92, 92-402 Łódź,
info@artdom.net.pl. Numer Krajowego Rejestru Sądowego
0000354059.**

Setti  v. 2



INTRODUCTION

Thank you for the trust you have placed in us when purchasing a **Setti+** device. We are convinced that this high quality device will provide you with a lot of joy and satisfaction during its use.

PLEASE CAREFULLY READ AND FOLLOW THE OPERATING MANUAL!

This device is intended for domestic or similar, non-commercial use. The manufacturer will not be held liable for damages resulting from improper or non-compliant use.

IMPORTANT PRECAUTIONS

1. Do not start the device if it has a damaged plug or housing.
2. Due to safety concerns, only the manufacturer, a service authorized by the manufacturer or a person with appropriate qualifications can perform any repairs of the device.
3. Do not unscrew the housing of the device, attempt to repair or interfere with the interior of the device.
4. Do not touch the device with wet hands.
5. This product may only be operated by

children 8 or more years old, mentally and/or physically deficient persons and persons without knowledge of or experience in operation of this appliance type if supervised or instructed in safe operation, with clear understanding of all related risks. Children should not play with the device. Unsupervised children should not carry out the cleaning and maintenance of the device.

6. The device is intended for indoor use, the operating temperature should not exceed the 0-40°C range.




7. The socket should only be used for installations with protective contact/earthing pin.
8. Do not place or use the socket in rooms with higher humidity.
9. Do not immerse the device in water nor in other liquids.

- 10. Protect the device from moisture and dust.
- 11. Protect the device from hot surfaces.

TECHNICAL DATA

Model	SP401M
Rated input/output voltage and frequency	85-250 V~ ;50/60 Hz
Rated current	16 A
Maximum output power	3680 W
Operating humidity	20-80% RH, non-condensing
Operating temperature	0-40oC
Power consumption in standby mode	0.5W
Communication frequency and standard	2.4 GHz, 802.11b/g/n
Frequency range	2412 - 2472 MHz
Maximum transmission power	14.14 dBm
System requirements	Android, iOS
Operation	Setti+, Tuya
Voice control	Amazon Alexa; Google Assistant

PRODUCT DESCRIPTION

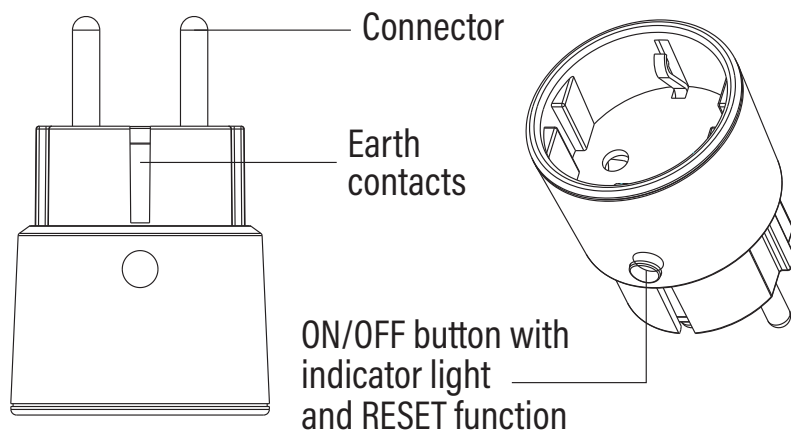

INSTALLATION

1. Plug the power socket into an earthed AC power socket with 85-250V~
2. Press the ON/OFF button to turn the socket on or off:
 - illuminated indicator: power on,
 - indicator not illuminated: power off.

INSTALLATION AND OPERATION OF THE APP

1. Download the app:



**w aplikacji Google Play
wyszukaj Setti+**



**w aplikacji App Store
wyszukaj Setti+**

2. Open the installed app.
3. As a new user, set up a new account. If you already have an account, log in using your access data.
4. Install the device in the electrical socket, then press and hold the button for 6 seconds until the indicator lights on the button starts flashing quickly.
5. Turn on Bluetooth and Wi-Fi connectivity on your phone.
6. In the upper right corner of the app, tap „+” and then , and scan the QR code located on the socket housing.
7. Select the Wi-Fi network, enter the password and select „Next”.

8. The app will add the device, confirm it by selecting „Finish” After successfully adding the device to the app, you can enjoy its remote operation.
9. To reset the device and perform a new configuration, press and hold the ON/OFF button for 6 seconds until the indicator flashes.

The detailed device manual is available at:
<https://setti.pl/aplikacja> or after scanning the QR code below:



TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The indicator on the button does not stop flashing.	The socket was not correctly configured.	Set up the socket according to the „Installation and operation of the app” section.

It is not possible to configure a socket with a Wi-Fi network.	Router operates in the 5GHz frequency range.	Change the router operating frequency from 5GHz to 2.4GHz.
	A problem occurred with Wi-Fi connection.	Check that the Wi-Fi signal of the router is of correct strength.
The socket does not respond to changes in app settings.	A problem occurred with Wi-Fi connection.	Check that the Wi-Fi signal of the router is of correct strength.
	The device is too far from the Wi-Fi signal source.	Boost the router's Wi-Fi signal or change its location.
	The router configuration has been changed.	Re-configure the socket, according to the „Installation and operation of the app” section.

DECLARATION:

ART-DOM Sp. z o.o. hereby declares that the Wi-Fi socket complies with the relevant requirements of the Union harmonisation legislation: Directive 2014/53/EU and other Union harmonisation legislation. The full text of the EU declaration of conformity is available at the following address: www.artdom.net.pl/deklaracja/SP401M/

ECO-FRIENDLY AND ENVIRONMENTALLY

This device is marked, in accordance with Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE), with the symbol of a crossed-out waste container:



Do not dispose of the device marked with this symbol together with household waste.¹⁴

For disposal return the device to your local waste treatment and disposal facility or contact your local authorities.

YOU CAN HELP PROTECT THE ENVIRONMENT!

Proper handling of waste electrical and electronic equipment contributes to avoiding harmful consequences for human health and the environment resulting from the presence of hazardous components and improper storage and processing of such equipment.

METER SOCKET WARRANTY CONDITIONS

1. ART-DOM Sp. z o.o. with its registered office in Łódź (92-402) at ul. Zakładowa 90/92 National Court Register Number 0000354059 (Guarantor) guarantees that the purchased device is free from physical defects. The warranty covers only defects resulting from the causes inherent in the item sold (manufacturing defects).

2. A disclosed defect will be removed at the Guarantor's expense within 14 days from the date of reporting the damage to the authorized service or point of sale.
3. In exceptional cases, e.g. the need to import spare parts from their manufacturer, the repair period may be extended up to 30 days.
4. The warranty period for the user is 24 months from the date of delivery of the goods.
5. The goods are intended for use only in the conditions of an individual household.
6. The present warranty does not cover:
 - a. damage caused by using the device in a manner inconsistent with the user manual,
 - b. mechanical, chemical or thermal damage,
 - c. repairs and modifications made by companies or persons that were not authorized to do so by the manufacturer,
 - d. parts that are easy to use or consumables such as: batteries, bulbs, fuses, filters, knobs, shelves, accessories,
 - e. installation, maintenance, inspection, cleaning, unlocking, removal of contaminants and instruction.
7. The Guarantor will select the mode of defect removal at its own discretion. Removal of a confirmed defect of the device will take place through warranty repair or replacement of the device. The Guarantor may perform repairs when the buyer requests replacement or the Guarantor may perform replacements when the buyer requests

repair, if bringing the goods (device) into conformity in accordance with the granted warranty in the manner selected by the buyer is impossible or would require excessive costs at the part of Guarantor. In particularly justified cases, if both repair and replacement are impossible or would require excessive costs for the Guarantor, the Guarantor may refuse to bring the goods into compliance with the granted warranty and propose another way to settle the warranty claim.

8. The exchange of goods is made at the point of sale at which the goods were purchased (replacement or refund) or an authorized service point, if it offers such service (replacement). The returned device must be complete, without mechanical damage. Failure to comply with these conditions may result in failure to accept the warranty claim.
9. In the event of non-compliance of the goods with the sales contract, the buyer is entitled by law to legal protection measures on the part and at the expense of the seller, and the warranty does not affect these legal protection measures.
10. The warranty is valid in Poland.
11. The condition for the warranty repair or replacement of the device is the presentation of proof of purchase and the use of the goods in accordance with the information contained in the user manual.

CAUTION! Damage or removal of the rating plate from the device may result in warranty being deemed void.

Damage or removal of the rating plate from the device may result in warranty being deemed void. We are constantly improving our products, so they may differ slightly from the images presented on the packaging and in the user manual. Please read the user manual carefully before operating the device.



ART-DOM Sp. z o.o., ul. Zakładowa 90/92, 92-402 Łódź,
info@artdom.net.pl. National Court Register number 0000354059.

Setti  v. 2