



MAD DOG

MIKROFON STREAMINGOWY SM100K

Instrukcja obsługi
i warunki gwarancji

LIVE STREAM MICROPHONE SM100K

Operating Manual
& Warranty Terms



WARUNKI BEZPIECZEŃSTWA I ZAGROŻENIA

1. Należy używać urządzenia zgodnie z przeznaczeniem opisanym w instrukcji obsługi.
2. Należy przeczytać uważnie instrukcję obsługi przed rozpoczęciem użytkowania produktu.
3. Dzieci nie mogą bawić się urządzeniem.
4. Dzieci nie mogą zajmować się czyszczeniem ani konserwacją bez nadzoru dorosłych.
5. Nie należy zanurzać urządzenia w wodzie ani innym płynie.
6. Nie należy uruchamiać urządzenia, jeżeli ma uszkodzoną obudowę.
7. Nie należy uderzać urządzeniem o inne przedmioty.
8. Nie należy używać urządzenia w ekstremalnie niskich ani wysokich temperaturach.
9. Nie należy używać urządzenia w warunkach dużej wilgotności powietrza ani w miejscach, w których mogłoby dojść do kontaktu urządzenia z wodą.
10. Należy czyścić urządzenie za pomocą suchej, delikatnej ściereczki.

WPROWADZENIE

Dziękujemy za zaufanie, jakim nas Państwo obdarzyli, dokonując zakupu urządzenia marki **Mad Dog**. Jesteśmy przekonani, że to bardzo dobrej jakości urządzenie zapewni Państwu dużo radości i satysfakcji z jego użytkowania.

NALEŻY DOKŁADNIE PRZECZYTAĆ INSTRUKCJĘ OBSŁUGI I JEJ PRZESTRZEGAĆ!


To urządzenie jest przeznaczone do użytku domowego lub podobnego, niedotyczącego celów komercyjnych. Producent nie ponosi odpowiedzialności za szkody powstałe w wyniku użytkowania niewłaściwego lub niezgodnego z przeznaczeniem.

DANE TECHNICZNE


Model	SM100K
Kierunkowość:	Kardiodalna
Pasma przenoszenia:	30Hz-20kHz
Czułość mikrofonu:	-40dB +/- 3dB
Zasilanie:	5.0V --- 100mA
Materiał:	Metal

Kolor:	czarny
Obsługiwane systemy:	MacOS, WINDOWS 10, 11

CHARAKTERYSTYKA CZĘSTOTLIWOŚCI

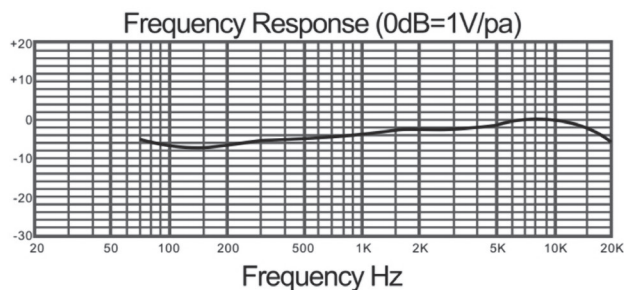


Wykres pasma przenoszenia

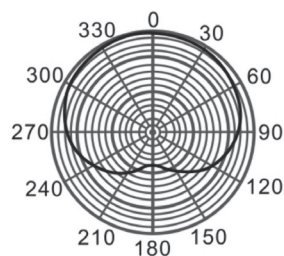

Charakterystyka kardiodalna

OPIS URZĄDZENIA

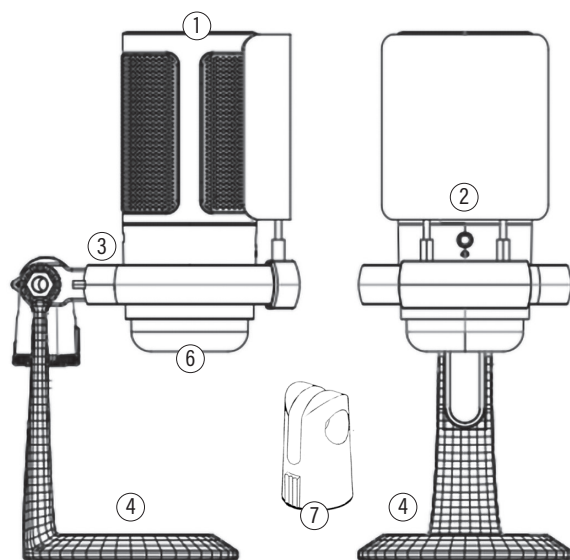

1. Przycisk wyciszania/zmiana podświetlenia
2. Gniazdo Jack 3,5mm
3. Gniazdo USB-C
4. Podstawa do mikrofonu
5. Przewód USB-A USB-C
6. Regulacja wzmacnienia mikrofonu
7. Prześciółka montażowa

INSTALACJA I PIERWSZE URUCHOMIENIE

1. Przykręć mikrofon do dołączonej podstawki lub do innego uchwyty mikrofonowego za pomocą dołączonej do zestawu prześciółki.
2. Załóż filtr pop z przodu mikrofonu.
3. Podłącz przewód do gniazda USB-C.
4. Drugi koniec przewodu podłącz do portu USB-A komputera.

5. Mikrofon powinien zostać automatycznie wykryty przez system operacyjny. W razie problemów należy sprawdzić i skonfigurować urządzenie w panelu sterowania.
6. Aby włączyć mikrofon przekręć pokrętkę regulacji wzmocnienia na urządzeniu w prawo. Przekręcenie pokrętki w końcową pozycję w lewo wycisza mikrofon.
7. Aby całkowicie wyłączyć podświetlenie, należy nacisnąć na co najmniej 5 sekund przycisk wyciszania. W taki sam sposób można ponownie włączyć podświetlenie. W przypadku wyciszenia mikrofonu, podświetlenie zmienia kolor na czerwony, bez względu na to, czy podświetlenie było włączone czy wyłączone.

WSKAZÓWKI UŻYTKOWANIA

Pamiętaj, aby przed podłączeniem mikrofonu ustawić regulator głośności w pozycji minimalnej, a dopiero po podłączeniu mikrofonu dostosuj ustawienia dźwięku na odpowiednim poziomie.

Jeżeli mikrofon zostanie przykryty lub zostanie umieszczony zbyt blisko głośnika, to mogą powstać sprzężenia dźwięku. Aby tego uniknąć, najpierw zmniejsz poziom wzmocnienia, a następnie ustaw mikrofon w odpowiedniej odległości pamiętając o tym, aby nie był skierowany na głośnik.

Nie uderzaj mikrofonem, ani nie narażaj go na silne wstrząsy, może to wpłynąć negatywnie na działanie urządzenia.

ROZWIĄZYWANIE PROBLEMÓW

PROBLEM	MOŻLIWA PRZYCZYNA	ROZWIĄZANIE
Nie działa mikrofon.	Niesprawny port USB.	Podłącz urządzenie do innego portu USB.
	Uszkodzony przewód USB.	Wymień przewód USB na inny.
	Źle skonfigurowany system operacyjny.	Upewnij się, czy są poprawne ustawienia w systemie operacyjnym.
	Mikrofon jest wyciszony.	Wyłącz wyciszenie mikrofonu.
	Pokrętkę wzmocnienia sygnału, jest skrócone maksymalnie w lewo.	Ustaw odpowiednie wzmocnienie sygnału z mikrofonu.

EKOLOGICZNA I PRZYJAZNA DLA ŚRODOWISKA UTYLIZACJA

To urządzenie jest oznaczone, zgodnie z Dyrektywą Parlamentu Europejskiego i Rady 2012/19/UE z dnia 4 lipca 2012 r. w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE), symbolem przekreślonego kontenera na odpady:



Nie należy wyrzucać urządzeń oznaczonych tym symbolem razem z odpadami domowymi.

Urządzenie należy zwrócić do lokalnego punktu przetwarzania i utylizacji odpadów lub skontaktować się z władzami miejscowymi.

MOŻESZ POMÓC CHRONIĆ ŚRODOWISKO!

Właściwe postępowanie ze zużytym sprzętem elektrycznym i elektronicznym przyczynia się do uniknięcia szkodliwych dla zdrowia ludzi i środowiska naturalnego konsekwencji, wynikających z obecności składników niebezpiecznych oraz niewłaściwego składowania i przetwarzania takiego sprzętu.

WARUNKI GWARANCJI DOTYCZĄCE MIKROFONU

1. ART-DOM Sp. z o.o. z siedzibą w Łodzi (92-402) przy ul. Zakładowej 90/92 Numer Krajowego Rejestru Sądowego 0000354059 (Gwarant) gwarantuje, że zakupione urządzenie jest wolne od wad fizycznych. Gwarancja obejmuje tylko wady wynikające z przyczyn tkwiących w rzeczy sprzedanej (wady fabryczne).
2. Ujawniona wada zostanie usunięta na koszt Gwaranta w ciągu 14 dni od daty zgłoszenia uszkodzenia do serwisu autoryzowanego lub punktu sprzedaży.
3. W wyjątkowych przypadkach, np. konieczności sprowadzenia części zamiennych od producenta, termin naprawy może zostać wydłużony do 30 dni.
4. Okres gwarancji dla użytkownika wynosi 24 miesiące od daty wydania towaru.
5. Towar przeznaczony jest do używania wyłącznie w warunkach indywidualnego gospodarstwa domowego.
6. Gwarancja nie obejmuje:
 - a. uszkodzeń powstałych na skutek używania urządzenia niezgodnie z instrukcją obsługi,
 - b. uszkodzeń mechanicznych, chemicznych lub termicznych,
 - c. napraw i modyfikacji dokonanych przez firmy lub osoby nieposiadające autoryzacji producenta,
 - d. części z natury łatwo zużywalnych lub materiałów eksploatacyjnych takich jak: baterie, żarówki, bezpieczniki, filtry, pokrętła, półki, akcesoria,
 - e. instalacji, konserwacji, przeglądów, czyszczenia, odblokowania, usunięcia zanieczyszczeń oraz instruktażu.
7. O sposobie usunięcia wady decyduje Gwarant. Usunięcie potwierdzonej wady urządzenia nastąpi poprzez wykonanie naprawy gwarancyjnej lub wymianę urządzenia. Gwarant może dokonać naprawy, gdy kupujący żąda wymiany lub Gwarant może dokonać wymiany, gdy kupujący żąda naprawy, jeżeli doprowadzenie do zgodności towaru (urządzenia) zgodnie z udzieloną gwarancją w sposób wybrany przez kupującego jest niemożliwe albo wymagałoby nadmiernych kosztów dla Gwaranta. W szczególnie uzasadnionych wypadkach, jeżeli naprawa i wymiana są niemożliwe lub wymagałyby nadmiernych kosztów dla Gwaranta może on odmówić doprowadzenia towaru do zgodności z udzieloną gwarancją i zaproponować inny sposób załatwienia reklamacji z gwarancji.
8. Wymiany towaru dokonuje punkt sprzedaży, w którym towar został zakupiony (wymiana lub zwrot gotówki) lub autoryzowany punkt serwisowy, jeżeli dysponuje taką możliwością (wymiana). Zwracane urządzenie musi być kompletne, bez uszkodzeń mechanicznych. Niespełnienie tych warunków może spowodować nieuznanie gwarancji.
9. W przypadku braku zgodności towaru z umową sprzedaży, kupującemu z mocy prawa przysługują środki ochrony prawnej ze strony i na koszt sprzedawcy, a gwarancja nie ma wpływu na te środki ochrony prawnej.
10. Niniejsza gwarancja obowiązuje na terytorium Polski.
11. Warunkiem dokonania naprawy lub wymiany urządzenia w ramach gwarancji jest przedstawienie dowodu zakupu oraz użytkowanie towaru zgodnie z informacjami zawartymi w instrukcji obsługi.

UWAGA!

Uszkodzenie lub usunięcie tabliczki znamionowej z urządzenia może spowodować nieuznanie gwarancji.

Cały czas udoskonalamy nasze produkty, dlatego mogą się one nieznacznie różnić od zdjęć przedstawionych na opakowaniu oraz w instrukcji obsługi.
Przed przystąpieniem do użytkowania urządzenia przeczytaj instrukcję obsługi.

ART-DOM Sp. z o.o., ul. Zakładowa 90/92, 92-402 Łódź. Numer Krajowego Rejestru Sądowego 0000354059.



v. 2

SAFETY CONDITIONS AND HAZARDS

1. Use the device according to its intended purpose described in the operating manual.
2. Before using the device please read the entire product manual.
3. Children shall not play with the device.
4. Children must not perform cleaning or maintenance without being supervised by an adult.
5. Do not immerse the device in water or any other liquid.
6. Do not start a device with a damaged housing.
7. Do not hit other objects with the device.
8. Do not operate the device in extremely low or high temperatures.
9. Do not use the device in conditions of high air humidity, nor in places where it could come in touch with water.
10. Clean the device using a dry, soft cloth.

INTRODUCTION

Thank you for the trust you have placed in us when you purchased your **Mad Dog** device.

We are convinced that this high quality device will provide you with a lot of joy and satisfaction during its use.

PLEASE CAREFULLY READ AND FOLLOW THE OPERATING MANUAL!


This device is intended for domestic or other non-commercial use.

The manufacturer will not be held liable for damages resulting from improper or non-compliant use.


TECHNICAL DATA

Model	SM100K
Directionality:	Cardioid
Frequency response:	30 Hz-20 kHz
MIC Sensitivity:	-40 dB +/- 3 dB
Power supply:	5.0 V $\approx$ 100 mA
Material:	Metal
Colour:	Black
Supported Systems:	MacOS, WINDOWS 10, 11

FREQUENCY CHARACTERISTICS

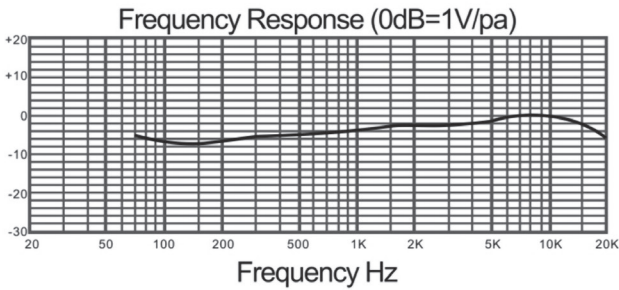


Frequency response graph

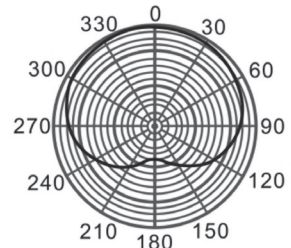

Cardioid characteristics

DEVICE DESCRIPTION

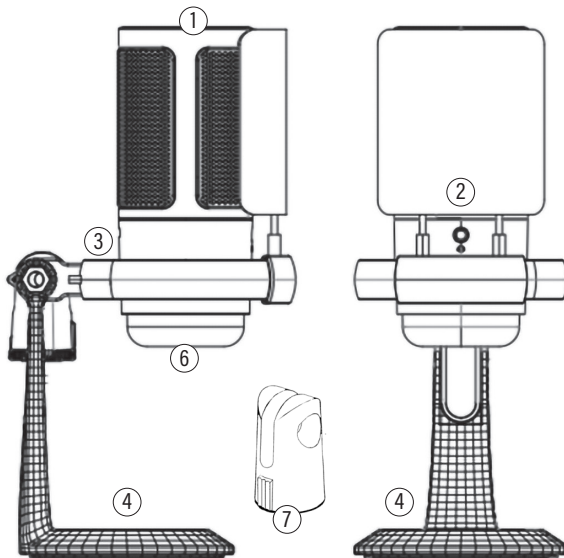

1. Mute button/RGB ON-OFF
2. 3.5 mm Jack socket
3. USB-C socket
4. MIC stand
5. USB-A to USB-C cable
6. MIC gain adjustment
7. Assembly adapter

INSTALLING AND FIRST START-UP

1. Screw the microphone to the included stand or to another microphone holder by using additional adapter from the set.
2. Install the pop filter on the front of the microphone.
3. Plug the cable into the USB-C socket.
4. Connect the other end of the cable to a computer's USB-A port.
5. The microphone should be automatically detected by the OS. In case of problems, check and configure the device in the control panel.
6. To turn on the microphone, turn the gain control knob on the device to the right. Turning the knob to the final left position turns the microphone off.

7. To turn off the backlight completely, press and hold the mute button for at least 5 seconds. You can turn the backlight back on in the same way. If you mute the microphone, the backlight will turn red, regardless of whether the backlight was on or off.

INSTALLING AND FIRST START-UP

1. Screw the microphone to the stand.
2. Install the pop filter on the front of the microphone.
3. Plug the cable into the USB-C socket.
4. Connect the other end of the cable to a computer's USB-A port.
5. The microphone should be automatically detected by the OS. In case of problems, check and configure the device in the control panel.
6. To turn on the microphone, turn the gain control knob on the device to the right. Turning the knob to the final left position turns the microphone off.
7. To turn off the backlight completely, press and hold the mute button for at least 5 seconds. You can turn the backlight back on in the same way. If you mute the microphone, the backlight will turn red, regardless of whether the backlight was on or off.

TIPS FOR USERS

Always remember to set the volume knob in the minimum position before connecting the MIC, and only after the microphone is connected do adjust the volume to the desired level. Sound feedback may occur if the microphone is covered, or placed too close to a speaker. To prevent it first reduce the gain level, and then set the MIC at a correct distance, always remembering not to point it at speakers. Do not hit the microphone, nor expose it to strong shocks, as it may adversely affect the operation of the device.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The microphone does not work.	Defective USB port.	Connect the device to another USB port.
	Damaged USB cable.	Replace the USB cable with another one.
	Incorrectly configured operating system.	Make sure there are correct settings in the operating system.
	The microphone is muted.	Unmute the microphone.
	The signal amplification knob, is turned to the left.	Set the appropriate signal gain from the microphone.

ECO-FRIENDLY AND ENVIRONMENTALLY FRIENDLY DISPOSAL

This device is marked, in accordance with Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE), with the symbol of a crossed-out waste container:



Do not dispose of the device marked with this symbol together with household waste.

For disposal return the device to your local waste treatment and disposal facility or contact your local authorities.

YOU CAN HELP PROTECT THE ENVIRONMENT!

Proper handling of waste electrical and electronic equipment contributes to avoiding harmful consequences for human health and the environment resulting from the presence of hazardous components and improper storage and processing of such equipment.

MICROPHONE WARRANTY CONDITIONS

1. ART-DOM Sp. z o.o. with its registered office in Łódź (92-402) at ul. Zakładowa 90/92 National Court Register Number 0000354059 (Guarantor) guarantees that the purchased device is free from physical defects. The warranty covers only defects resulting from the causes inherent in the item sold (manufacturing defects).
2. A disclosed defect will be removed at the Guarantor's expense within 14 days from the date of reporting the damage to the authorized service or point of sale.
3. In exceptional cases, e.g. the need to import spare parts from their manufacturer, the repair period may be extended up to 30 days.
4. The warranty period for the user is 24 months from the date of delivery of the goods.
5. The goods are intended for use only in the conditions of an individual household.
6. The present warranty does not cover:
 - a. damage caused by using the device in a manner inconsistent with the user manual,
 - b. mechanical, chemical or thermal damage,
 - c. repairs and modifications made by companies or persons that were not authorized to do so by the manufacturer,
 - d. parts that are easy to use or consumables such as: batteries, bulbs, fuses, filters, knobs, shelves, accessories,
 - e. installation, maintenance, inspection, cleaning, unlocking, removal of contaminants and instruction.
7. The Guarantor will select the mode of defect removal at its own discretion. Removal of a confirmed defect of the device will take place through warranty repair or replacement of the device. The Guarantor may perform repairs when the buyer requests replacement or the Guarantor may perform replacements when the buyer requests repair, if bringing the goods (device) into conformity in accordance with the granted warranty in the manner selected by the buyer is impossible or would require excessive costs at the part of Guarantor. In particularly justified cases, if both repair and replacement are impossible or would require excessive costs for the Guarantor, the Guarantor may refuse to bring the goods into compliance with the granted warranty and propose another way to settle the warranty claim.
8. The exchange of goods is made at the point of sale at which the goods were purchased (replacement or refund) or an authorized service point, if it offers such service (replacement). The returned device must be complete, without mechanical damage. Failure to comply with these conditions may result in failure to accept the warranty claim.
9. In the event of non-compliance of the goods with the sales contract, the buyer is entitled by law to legal protection measures on the part and at the expense of the seller, and the warranty does not affect these legal protection measures.

10. The warranty is valid in Poland.
11. The condition for the warranty repair or replacement of the device is the presentation of proof of purchase and the use of the goods in accordance with the information contained in the user manual.

CAUTION!

Damage or removal of the rating plate from the device may result in warranty being deemed void.

Damage or removal of the rating plate from the device may result in warranty being deemed void.

We are constantly improving our products, so they may differ slightly from the images presented on the packaging and in the user manual. Please read the user manual carefully before operating the device.

ART-DOM Sp. z o.o., ul. Zakładowa 90/92, 92-402 Łódź. National Court Register number 0000354059.



v. 2

