
# 24.10.05 140x210mm 说明书SJ-1000 2国语言 24P

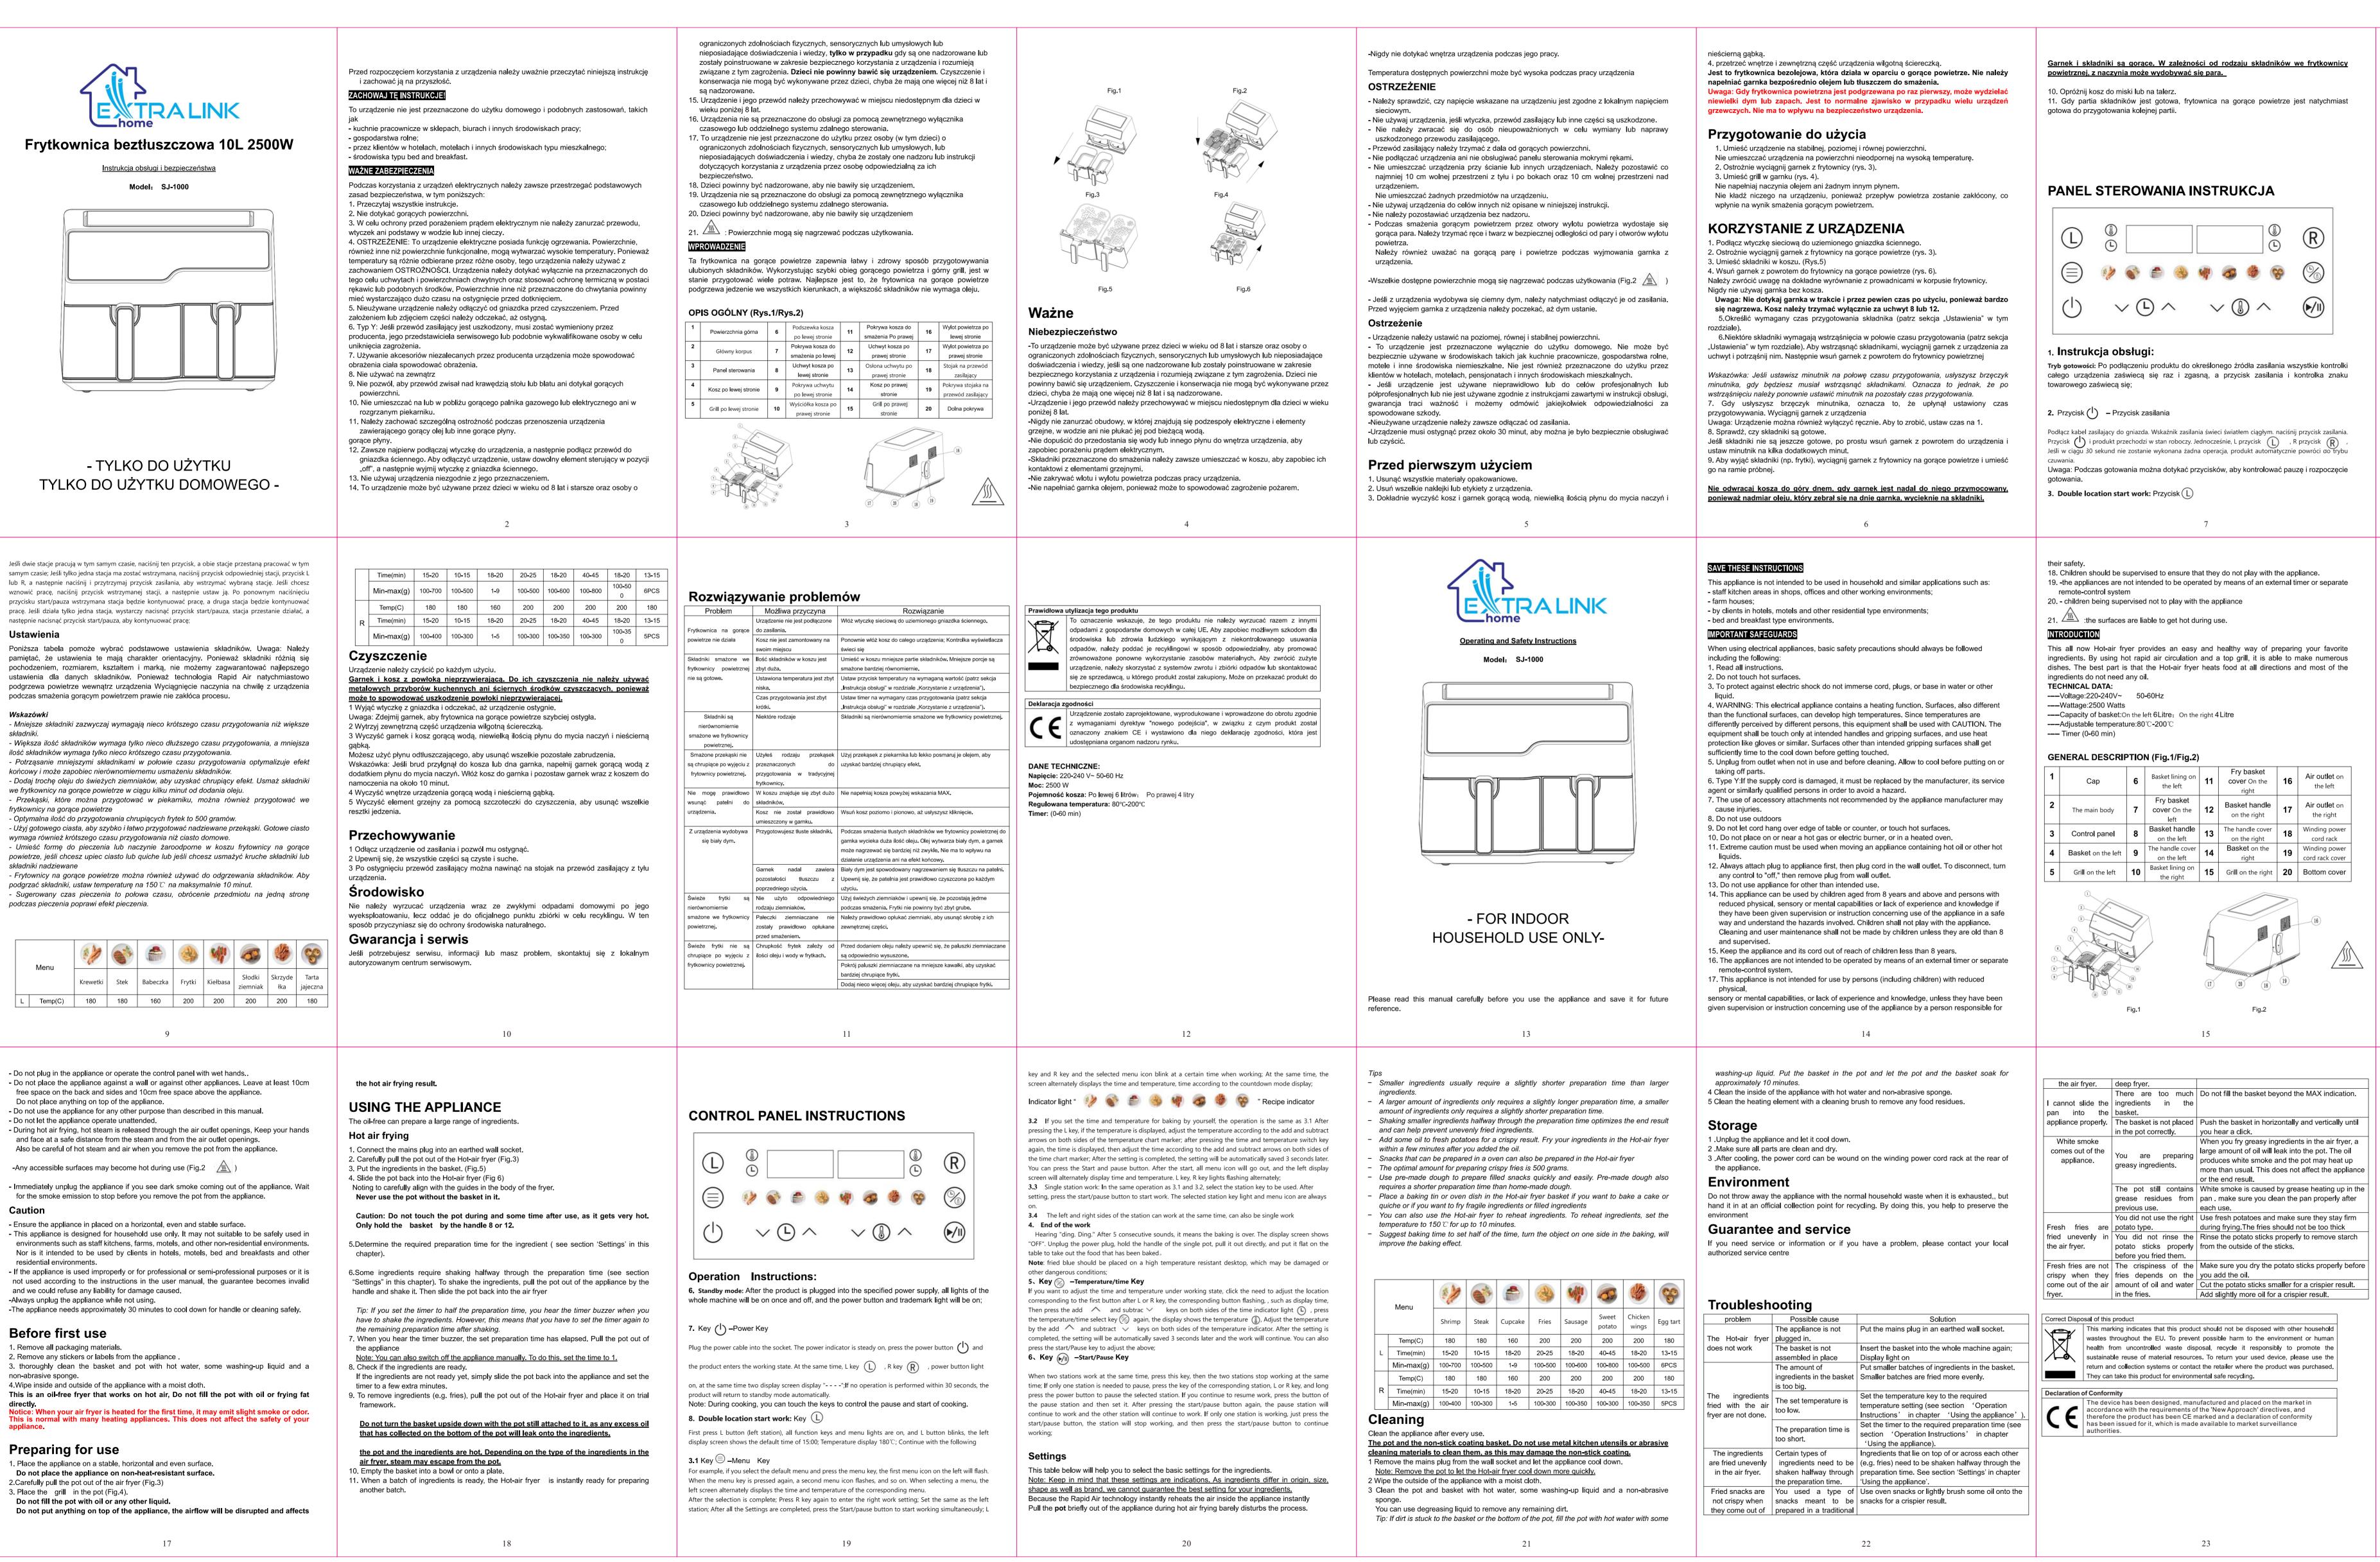

| -        | Troubleshooting     |                                    |   |  |  |  |
|----------|---------------------|------------------------------------|---|--|--|--|
| t        | problem             | Possible cause                     | Solution  |  |  |  |
|          |                     | The appliance is not               | Put the mains plug in an earthed wall socket.                       |  |  |  |
| 1        | The Hot-air fryer   | plugged in.                        | Insert the basket into the whole machine again;<br>Display light on |  |  |  |
|          | does not work       | The basket is not                  |   |  |  |  |
|          |                     | assembled in place                 |   |  |  |  |
|          |                     | The amount of                      | Put smaller batches of ingredients in the basket.                   |  |  |  |
|          |                     | ingredients in the basket          | Smaller batches are fried more evenly.                              |  |  |  |
|          |                     | is too big.                        |   |  |  |  |
|          | The ingredients     | The set temperature is too low.    | Set the temperature key to the required                             |  |  |  |
|          | fried with the air  |                                    | temperature setting (see section 'Operation                         |  |  |  |
| <u>e</u> | fryer are not done. |                                    | Instructions' in chapter 'Using the appliance')                     |  |  |  |
|          |                     | The preparation time is too short. | Set the timer to the required preparation time (see                 |  |  |  |
|          |                     |                                    | section 'Operation Instructions' in chapter                         |  |  |  |
|          |                     | too short.                         | 'Using the appliance).  |  |  |  |
|          | The ingredients     | Certain types of                   | Ingredients that lie on top of or across each other                 |  |  |  |
|          | are fried unevenly  | ingredients need to be             | (e.g. fries) need to be shaken halfway through the                  |  |  |  |
|          | in the air fryer.   | shaken halfway through             | preparation time. See section 'Settings' in chapter                 |  |  |  |
|          |                     | the preparation time.              | 'Using the appliance'.  |  |  |  |
|          | Fried snacks are    | You used a type of                 | Use oven snacks or lightly brush some oil onto the                  |  |  |  |
|          | not crispy when     | snacks meant to be                 | snacks for a crispier result.                                       |  |  |  |
|          | they come out of    | prepared in a traditional          |   |  |  |  |
| L        |                     |                                    |   |  |  |  |

| ig.2)               |    |                                     |    |                                    |  |  |  |
|---------------------|----|-------------------------------------|----|------------------------------------|--|--|--|
| g on                | 11 | Fry basket<br>cover On the<br>right | 16 | Air outlet on<br>the left          |  |  |  |
| et<br>the           | 12 | Basket handle<br>on the right       | 17 | <b>Air outle</b> t on<br>the right |  |  |  |
| nd <b>l</b> e<br>ft | 13 | The handle cover<br>on the right    | 18 | Winding power<br>cord rack         |  |  |  |
| cover<br>ft         | 14 | Basket on the right                 | 19 | Winding power<br>cord rack cover   |  |  |  |
| g on                | 15 | Grill on the right                  | 20 | Bottom cover                       |  |  |  |

4. Najpierw naciśnij przycisk L (lewa stacja), wszystkie przyciski funkcyjne i kontrolki menu zaświecą się, a przycisk L zacznie migać, lewy ekran wyświetlacza pokaże domyślną godzinę 15:00; Wyświetlacz temperatury 180 °C; Kontynuuj następujące czynności

### 3.1 Przycisk 🗐 – Przycisk Menu

Na przykład po wybraniu menu domyślnego i naciśnięciu przycisku menu zacznie migać pierwsza ikona menu po lewej stronje. Po ponownym naciśniecju przycisku menu miga druga ikona menu itd. Podczas wybierania menu na lewym ekranie naprzemiennie wyświetlana jest godzina i temperatura odpowiedniego Po zakończeniu wyboru; Naciśnij ponownie przycisk R, aby przejść do prawego ustawienia pracy; Ustaw to

samo, co lewa stacja; Po zakończeniu wszystkich ustawień naciśnij przycisk Start/pauza, aby rozpoczać prace jednocześnie; Przycisk L i przycisk R oraz wybrana ikona menu migają w określonym czasie podczas pracy; W tym samym czasie na ekranie naprzemiennie wyświetlana jest godzina i temperatura, czas zgodnie z wyświetlaniem trybu odliczania;

### Lampka kontrolna " 🚺 🛋 🚔 🤐 🐙 📶

3.2 Po naciśnieciu przycisku L, wyświetlana jest temperatura, dostosuj temperature zgodnie ze strzałkami dodawania i odejmowania po obu stronach znacznika wykresu temperatury; po ponownym naciśnięciu przycisku przełączania czasu i temperatury wyświetlany jest czas, następnie dostosuj czas zgodnie ze strzałkami dodawania i odejmowania po obu stronach znacznika wykresu czasu; Po zakończeniu ustawiania ustawienie zostanie automatycznie zapisane 3 sekundy później. Można nacisnąć przycisk startu i pauzy. Po uruchomieniu wszystkie ikony menu znikną, a na lewym ekranie wyświetlana bedzie na przemian godzina temperatura. Przyciski L i R beda migać naprzemiennie:


**3.3** Praca z jedną stacją: W taki sam sposób jak w punktach 3.1 i 3.2 wybierz przycisk stacji, który ma być używany. Po dokonaniu ustawień naciśnij przycisk start/pauza, aby rozpoczać prace. Kontrolka wybranego przycisku stacji i ikona menu są zawsze włączone. **3.4** Lewa i prawa strona stacji może pracować w tym samym czasie, może również pracować pojedynczo


4 Koniec pracy Słysząc "ding. Ding." Po 5 kolejnych dźwiękach oznacza to zakończenie pieczenia. Na wyświetlaczu pojawi się komunikat "OFF". Odłacz wtyczke zasilania, chwyć uchwyt pojedynczego naczynia, wyciagnii je bezpośrednio i połóż płasko na stole, aby wyjąć upieczoną potrawę.

**Uwaga:** Smażone na niebiesko urządzenie powinno być umieszczone na odpornym na wysoka temperature biurku, które może ulec uszkodzeniu lub w innych niebezpiecznych warunkach; 5. Przycisk (%) – Klawisz temperatury/czasu

Jeśli chcesz dostosować czas i temperaturę w stanie roboczym, kliknij miejsce odpowiadające pierwszemu przyciskowi po przycisku L lub R, odpowiedni przycisk zacznie migać, np. czas wyświetlania, Następnie naciśnij przycisk dodawania \land 🛛 i odejmowania 🗸 po obu stronach wskaźnika czasu 🕒 , naciśnij przycisk wyboru temperatury/czasu 🛞 ponownie, wyświetlacz pokazuje temperaturę 🕼 Dostosuj temperaturę za pomocą przycisków dodawania 🛛 🔨 odejmowania 🗸 po obu stronach wskaźnika temperatury. Po zakończeniu ustawiania, ustawienie zostanie automatycznie zapisane 3 sekundy później i praca będzie kontynuowana. Można również nacisnąć przycisk Start/Pauza, aby dostosować powyższe ustawienia;

## Przycisk () – Start/Pauza

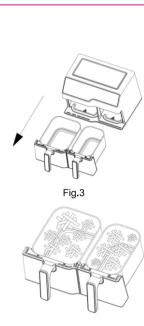

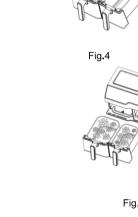

Important

-This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. -Keep the appliance and its cord out of reach of children less than 8 years. -Never immerse the housing, which contains electrical components and the heating elements, in water nor rinse it under the tap.

-Do not let any water or other liquid enter the appliance to prevent electric shock. -Always put the ingredients to be fried in the basket, to prevent it from coming into contact with the heating elements.

-Do not cover the air inlet and the air outer openings while the appliance is operating. -Do not fill the pot with oil as this may cause a fire hazard. -Never touch the inside of the appliance while it is operating.

The temperature of accessible surfaces may be high when the appliance is operating

### VARNING

Check if the voltage indicated on the appliance fits the local mains voltage. - Do not use the appliance if there is any damage on plug, mains cord or other parts. - Do not go to any unauthorized person to replace or fix damaged main cord. - Keep the mains cord away from hot surfaces.