

Use a dry and soft cloth to clean the device. Do not clean with water. Dab a little neutral detergent on the cloth to remove stubborn dirt.
Do not use strong detergents such as thinner, gasoline or alcohol, as they may damage the protective coatings.

① LED panel
② Flexible arm
③ Setting adjustment knob
④ LED panel indicator - left / right
⑤ LED panel switch - left / right
⑥ ON / OFF switch
⑦ Color temperature adjustment
⑧ Channel setting
⑨ Display screen
⑩ Cold shoe mount
⑪ USB-A port
⑫ Mounting knob

-

2. Mount the LED light fixture on top of the lighting tripod and tighten the knob to secure the lamp.
-

3. Bend the flexible arms to adjust the lighting angles.
-

4. Mount the phone holder on the cold shoe of the LED lamp and tighten the knob.
-

5. Insert your phone into the holder and use it freely. You can plug your phone into the USB-A port to charge it.

1. Unfold the lighting tripod, adjust the height and tighten the knob to secure in the correct position.

Switching between panels (right / left / both).


Briefly press the button to switch between the left and right LED panels. You can also turn on both panels at the same time.

Brightness adjustment

Briefly press the button. The will flash on the screen. Turn the dial to adjust the brightness from 0 to 100%.

Basic functions of the remote control


- ① Slide the battery cover down to remove it. Insert two AAA batteries into the battery compartment with positive and negative polarity. Replace the cover.
- ② Press the **○** button briefly to turn the remote control on/off.

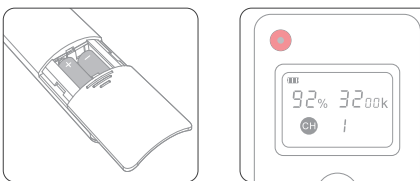

The diagram shows the remote control with the battery cover removed. The display screen shows a battery level of 92% and a temperature of 32.0°C. Below the screen are four buttons: a power button (○), a channel up/down button (M), and two arrow buttons (↑ and ↓).

2. Adjust the channel of the remote control

- ① Turn on the remote control.
- ② Briefly press the "M" button on the remote control. The channel number will start flashing on the display of the remote control.
- ③ Briefly press the "↑" and "↓" buttons on the remote control to adjust the channels (1~10 and 80). A total of 77 channels are available. After making your selection, press the "M" button to confirm.

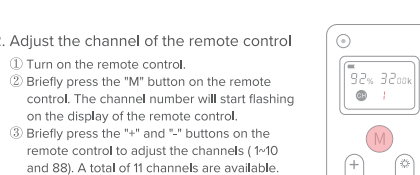

The diagram shows the remote control with the display screen flashing the channel number 92. The power button (○) is highlighted with a red circle, and the "M" button is highlighted with a red circle.

Remote control of both LED lights

Set each LED light to any channel from "0" to "10". Set channel "88" to control all LED lights simultaneously using the remote control.

- 1 Set the first group of LED lights to the same channel (e.g., channel "1"), the second group of LED lights to another channel (e.g., channel "2"), and so on.
- 2 When the remote control channel is set to "1", it can control the first group, when the remote control channel is set to "2", it can control the second group, and so on.
- 3 When the remote control channel is set to "88", it can control all LED lamps, regardless of the channel originally set.

Figure 1-1 illustrates the accessories provided for the device. The accessories are arranged in two columns. The left column includes a control dial for adjusting color temperature (labeled 'Adjust color temperature'), a control dial for adjusting brightness (labeled 'Adjust brightness'), a Bluetooth remote (labeled 'Bluetooth remote'), a lightening tripod (labeled 'Lightening tripod'), a power cable (labeled 'Power cable'), a remote control (labeled 'Remote control 2.4G'), an AC adapter (labeled 'AC adapter'), and a phone holder (labeled 'Phone holder'). The right column shows a control dial for adjusting color temperature (labeled 'Adjust color temperature'), a control dial for adjusting brightness (labeled 'Adjust brightness'), a Bluetooth remote (labeled 'Bluetooth remote'), a lightening tripod (labeled 'Lightening tripod'), a power cable (labeled 'Power cable'), a remote control (labeled 'Remote control 2.4G'), an AC adapter (labeled 'AC adapter'), and a phone holder (labeled 'Phone holder').

Number of LEDs	448 pcs
Input DC	DC 15V
Output	3V 2A
Power	max. 36 W
Light intensity	5200 Lx / 0.5m
CRI	98+
Brightness adjustment	0%-100%
Color temperature adjustment	3200K - 5600K
Chained number	0-4D
Remote control	2.4G 2 x AAA battery

OPIS TREŚCI	STRONA
1. WSKAŹÓWKI DOTYCZĄCE BEZPIECZEŃSTWA	1
2. BUDOWA LAMPY	1
3. OPIS PILOTA	2
4. INSTALACJA LAMPY	2
5. UŻYTKOWANIE	3
6. PODSTAWOWE FUNKCJE PILOTA	4
7. ZAWARTOŚĆ ZESTAWU	6
8. SPECYFIKACJA	6
9. UTYLIZACJA	6
10. GWARANCJA	6

Lampa jest wyposażona w precyzyjny. Nie przepuszcza światła, nie uderza, nie narazi na urazy.

Urządzenie posiada wodoszczelną konstrukcję. Pracując w suchym, chłodnym i wentylowanym miejscu. Nie należy narazić urządzenia na działanie wiatru lub deszczu.

Nie używać urządzenia w pobliżu łatwopalnych środków i rozpuszczalników.

Nie należy używać lampy zbyt daleko przedmiotów. Nie zakrywać obrotów.

Należy używać wyłącznie materiałów przewidzianych do urządzenia. Nie dotykać części elektrycznych materiałów przewodzących.

Nie używać w przypadku przebiegnięcia napięcia zasilającego o prędkości.

Należy używać urządzenia zgodnie z instrukcją obsługi.

To normalne, że urządzenie będzie trochę gorące podczas pracy.

Nie należy używać LED na zewnętrzne w bezpośrednim świetle słonecznym przez dłuższy czas.

Na czas przechowywania lub transportu należy odłączyć zasilanie.

Nie włączaj urządzenia w opakowaniu. Przed włożeniem do opakowania należy wyjąć urządzenie z opakowania.

Trzymać po załączeniu dymu.

W przypadku stwierdzenia dymu lub dziwnego zapachu wyłączonego zasilania. Nie należy samodzielnego naprawy. Wyłączyć urządzenie. Rozkierować urządzenie spowolnić urazy gwarancji.

W przypadku gdy występuje problem z urządzeniem, należy dostarczyć do:

① Panel LED
 ② Białe ramię
 ③ Pokrycie regulacji ustawień
 ④ Wskaźnik paneli LED - lewy / prawy
 ⑤ Przycisk paneli LED - lewy / prawy
 ⑥ Suwak ON / OFF
 ⑦ Regulacja jasności
 ⑧ Regulacja temperatury barwowej
 ⑨ Ustawienie kanału
 ⑩ Ekran wyświetlacza
 ⑪ Mocowanie zintegrowanej stopki
 ⑫ Port USB-A
 ⑬ Pokrycie do mocowania stałego
 ⑭ Gniazdo DC

Przycisk zasilania

Przycisk kanału

Przycisk "+" temperatury

Przycisk "-" temperatury

Przycisk "+" jasności

Przycisk "-" jasności

Ekran wyświetlacza

1. Rozciąść statyw oświetleniowy, wyreguluj wysokość i dokręć pokrętło, aby zabezpieczyć w odpowiedniej pozycji.

Regulacja temperatury barwonow

Krótko nacisnąć przycisk ☀️
Ikona ☀️ będzie migłać na ekranie.
Obróć pokrętło, aby wyregulować temperaturę barwonow do 3200K
do 5600K.

Wybór kanału

Krótko nacisnąć przycisk 🌙
Ikona 🌙 będzie migłać na ekranie.
Obróć pokrętło, aby wyregulować temperaturę barwonow do 3200K
do 5600K.

Kanal CH-2 „D” jest kanalem alternatywnym, którym można sterować za pomocą pokrętła zlokalizowanego wewnątrz, wybijając kanał "88".

„Lewo światło”, „prawo światło” i „podwójne światło” nie mogą być ustawione jako ten sam kanał.

Ustaw lampę LED i pilota zdalnego sterowania na ten sam kanał (np. oba urządzenia ustawione są na kanał **f**), aby sterować oświetleniem za pomocą pilota.

- ① Ustaw pierwszą grupę lamp LED na ten sam kanał (np. kanał "1"), drugą grupę lamp LED na inny kanał (np. kanał "2") itd.
- ② Gdy kanał zdalnego sterowania jest ustawiony na "1", może sterować pierwszą grupą, gdy kanał zdalnego sterowania jest ustawiony na "2", może sterować drugą grupą itd.
- ③ Gdy kanał pilota zdalnego sterowania jest ustawiony na "88", może on sterować wszystkimi lampami LED, niezależnie od pierwotnie ustawionego kanału.

lub z niego wyjść.

Ustaw każdą lampę LED na dowolny kanał od "0" do "10". Ustaw kanał "88", aby sterować wszystkimi lampami jednocześnie za pomocą pilota zdalnego sterowania.

Węjsce	DC 15V
Wyjsce	5V 2A
Moc	maks. 36 W
Natężenie światła	5200 Lx / 0.5m
CRI	98+
Regulacja jasności	0%-100%
Regulacja temperatury barwowej	3200K - 5600K
Numer kanału	0-10
Pilot zdalnego sterowania	2.4G 2 x bateria AAA

 Symbol przekreślonego kosza oznacza, że zużytego sprzętu elektrycznego i elektronicznego, baterii i akumulatorów oraz opakowań nie wolno umieszczać z innymi odpadami domowymi. Muszą one być przekazane do oddzielnego systemu zbiórki odpadów.

 Produkty Newell objęte są 40-miesięczną gwarancją