

Lenovo **Tab Pen Pro**

Quick Start Guide

English/Polski

The Lenovo logo is displayed vertically in white text on a dark gray rectangular background in the bottom right corner of the page.

Lenovo


Contents

English	1
Polski.....	4

English

- All pictures and illustrations in this guide are for your reference only. The actual product may vary.


Overview

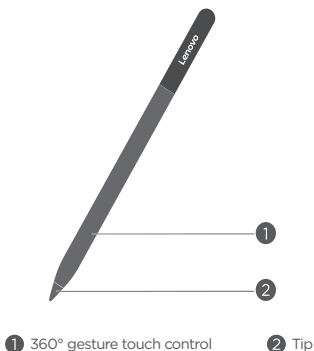

Pairing and charging


Before first use, charge the pen for pairing.

After use, attach the pen to the charging area for charging and storage.

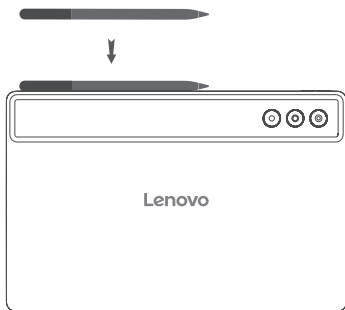

Replacing the tip

1. Rotate the tip counterclockwise to remove it.
2. Rotate the new tip clockwise to secure it.

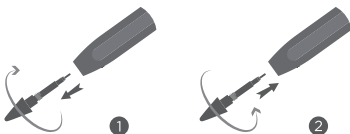

Gesture touch control



Double tap, slide up, or slide down to quickly perform the actions assigned to these gestures.

Gestures may vary depending on the app you are using.




Warning

- The firmware upgrade will require the pen to be magnetically attached to the paired tablet.
- The pen will enter battery protection mode if not used for an extended period. We recommend charging it for 5-10 minutes before use.
- If the tablet is powered off, you need to connect it to the charger for wireless pen charging.
- The tip may wear out during daily writing, especially on the rough film surface.
- Please be cautious when using the pen. The pen contains sensitive electronic components. Dropping it may cause damage.
- Keep the pen and detachable tips out of the reach of children. Otherwise, children may damage them or swallow the tips by mistake, which may cause suffocation or other risks.

- Wszystkie obrazy i ilustracje wykorzystane w tym podręczniku mają wyłącznie charakter poglądowy. Rzeczywisty produkt może się różnić.

Omówienie

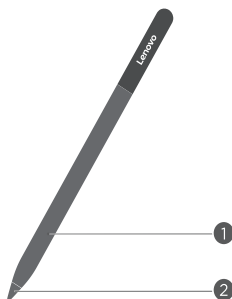


1 Sterowanie dotykowe gestami 360°

2 Końcówka

Parowanie i ładowanie


Przed pierwszym użyciem należy naładować pióro na potrzeby parowania.

Po użyciu przymocuj pióro do obszaru ładowania w celu ładowania i przechowywania.

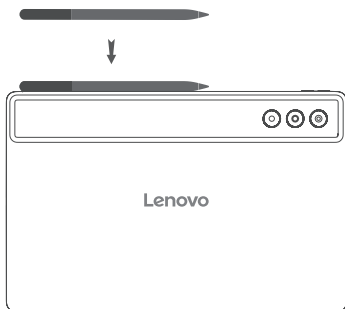

Wymiana końcówki

1. Obróć końcówkę w kierunku przeciwnym do ruchu wskazówek zegara, aby ją wyjąć.
2. Obróć nową końcówkę zgodnie z ruchem wskazówek zegara, aby ją zabezpieczyć.

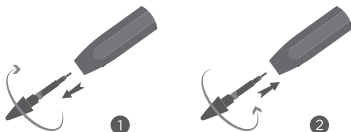

Sterowanie gestami i dotykiem



Dotknij dwukrotnie, przesunij palcem w górę lub w dół, aby szybko wykonać czynności przypisane do tych gestów.

Gesty mogą się różnić w zależności od używanej aplikacji.



Ostrzeżenie

- Aktualizacja oprogramowania sprzętowego będzie wymagała magnetycznego podłączenia pióra do sparowanego tabletu.
- Rysik przejdzie w tryb ochrony baterii, jeśli nie będzie używany przez dłuższy czas. Zalecamy ładowanie go przez 5-10 minut przed użyciem.
- Jeśli tablet jest wyłączony, należy podłączyć go do ładowarki w celu bezprzewodowego naładowania pióra.
- Końcówka może się zużyć podczas codziennego pisania, zwłaszcza na szorstkiej powierzchni folii.
- Podczas używania pióra należy zachować ostrożność. Pióro zawiera wrażliwe elementy elektroniczne. Upuszczenie pióra może skutkować jego uszkodzeniem.
- Należy trzymać pióro oraz zdejmowane końcówki poza zasięgiem dzieci. W przeciwnym razie dzieci mogą je uszkodzić lub połknąć przez pomyłkę końcówki, co może spowodować uduszenie i inne zagrożenia.

© Copyright Lenovo 2025.

Reduce | Reuse | Recycle



V1.0_20250123



HQ622010085Q0

QFY

Printed in China

