

BLOW 77-573# RK3 YM-237 DAB

BLOW

INSTRUKCJA OBSŁUGI USER MANUAL

RK3



77-573#


BLOW 77-573# RK3 YM-237 DAB

BLOW

PL

RADIO RK3 DAB+

OPIS PRODUKTU

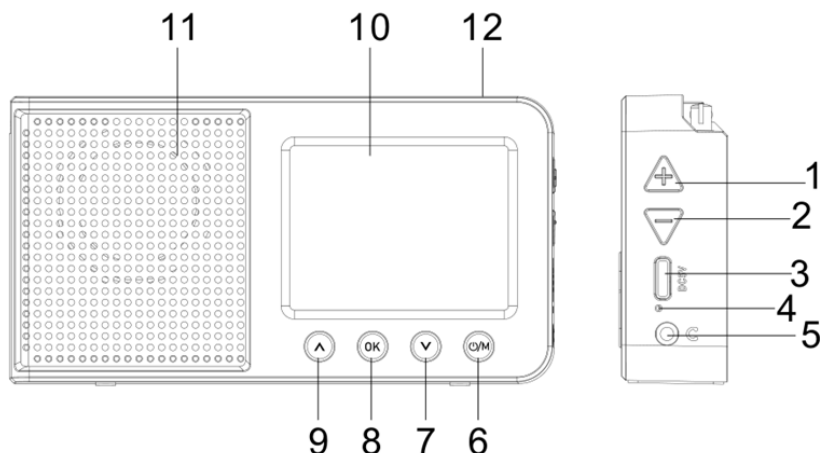

- | | |
|---|---------------------|
| 1. VOL+ : Przycisk zwiększania głośności | 7. NASTĘPNY |
| 2. VOL- : Przycisk zmniejszania głośności | 8. ENTER: Potwierdź |
| 3. GNIAZDO USB-C 5 V | 9. POPRZEDNI |
| 4. Dioda LED ŁADOWANIA | 10. WYŚWIETLACZ |
| 5. GNIAZDO SŁUCHAWKOWE | 11. GŁOŚNIK |
| 6. ZASILANIE/TRYB | 12. ANTENA |

Włączanie/Wyłączanie

Naciśnij i przytrzymaj przycisk POWER/MODE przez 2 sekundy, na ekranie wyświetli się „Welcome Digital Radio”, możesz naciśnąć krótko przycisk POWER/MODE, aby przełączać się między trybami.

Naciśnij i przytrzymaj przycisk POWER przez 2 sekundy, a urządzenie przełączy się na wyświetlanie zegara. Możesz odczekać 15 sekund lub naciśnąć i przytrzymaj przycisk POWER/MODE przez 2 sekundy, aby wyświetlić GOOD-BYE i wyłączyć urządzenie.

Funkcja DAB

nnaciśnij krótko przycisk POWER/MODE, aby przełączyć się na tryb DAB. Naciśnij i przytrzymaj przycisk ENTER przez 2 sekundy, aby uzyskać dostęp do menu DAB. Użyj przycisków NEXT lub PREV, aby wybrać opcje menu, a następnie naciśnij przycisk ENTER, aby wprowadzić odpowiednią funkcję. Podczas przełączania na tryb DAB, jeśli wcześniej nie przeszukano żadnych stacji radiowych, automatycznie rozpocznie się wyszukiwanie stacji. Po zakończeniu wyszukiwania liczba znalezionych stacji zostanie wyświetlona po prawej stronie ekranu, a pierwsza znaleziona stacja zostanie odtworzona. Możesz użyć przycisków PREV lub NEXT, aby wybrać z listy dostępnych stacji, i naciśnąć przycisk ENTER, aby odtworzyć wybraną stację.

BLOW**PL**

RADIO RK3 DAB+

Menu funkcji w trybie DAB

Pełne skanowanie (automatyczne wyszukiwanie stacji)

1. W trybie DAB naciśnij i przytrzymaj przycisk ENTER przez 2 sekundy, aby uzyskać dostęp do listy menu. Użyj przycisków PREV lub NEXT, aby wybrać opcję <Full Scan>.
2. Naciśnij przycisk ENTER, aby potwierdzić, a rozpocznie się wyszukiwanie stacji.
3. Po zakończeniu wyszukiwania liczba znalezionych stacji zostanie wyświetlona po prawej stronie ekranu, a odtwarzanie rozpocznie się od pierwszej znalezionej stacji.
4. Jeśli urządzenie zostanie włączone po przywróceniu ustawień fabrycznych, automatycznie rozpocznie wyszukiwanie stacji w trybie DAB.

DAB Preset Store (zapisywanie stacji zaprogramowanych)

DAB może zapisać do 40 stacji:

1. Podczas odtwarzania DAB naciśnij i przytrzymaj przycisk ENTER przez 2 sekundy; na ekranie wyświetli się <1. EMPTY>.
2. W tym momencie użyj przycisku PREV lub NEXT, aby wybrać pozycję zapisu (1-40).
3. Po wybraniu pozycji, na przykład pozycji 1, naciśnij przycisk ENTER, a na ekranie wyświetli się „Preset 1 saved”.
4. Pozycja 1 została zapisana. Aby zapisać inne stacje, powtórz powyższe kroki.

DAB Preset Recall (odtwarzanie stacji zaprogramowanych)

Aby odtworzyć zapisaną zaprogramowaną stację:

1. Podczas odtwarzania stacji DAB naciśnij i przytrzymaj przycisk ENTER przez 2 sekundy, aby uzyskać dostęp do menu. Następnie użyj przycisków PREV lub NEXT, aby wybrać opcję <Preset Recall> i naciśnij przycisk ENTER. Na ekranie zostanie wyświetlona lista zapisanych stacji.
2. Użyj przycisków PREV lub NEXT, aby wybrać numer zaprogramowanej stacji, którą chcesz odtworzyć.
3. Naciśnij przycisk ENTER, aby potwierdzić i odtworzyć wybraną zaprogramowaną stację.
4. Aby odtworzyć inne zaprogramowane stacje, powtórz powyższe kroki.

Ręczne strojenie DAB+

1. W trybie DAB naciśnij i przytrzymaj przycisk ENTER przez 2 sekundy, aby przejść do trybu menu. Następnie użyj przycisków PREV lub NEXT, aby wybrać opcję <Manual Tune>.
2. Naciśnij przycisk ENTER, aby potwierdzić, a na ekranie wyświetli się „<5A 174.928MHz>”. Użyj przycisków PREV lub NEXT, aby wybrać częstotliwości od 5A do 13F.
3. Po wybraniu żądanej częstotliwości naciśnij przycisk ENTER, aby potwierdzić. Zostanie wyświetlona siła sygnału tej częstotliwości. Jeśli na tej częstotliwości występuje sygnał stacji, zostanie wyświetlona siła sygnału, a lista stacji dla tej częstotliwości zostanie zapisana. Odtwarzanie rozpocznie się od pierwszej stacji na liście.

BLOW 77-573# RK3 YM-237 DAB

BLOW

PL

RADIO RK3 DAB+

Usuń nieprawidłowe stacje

Gdy pewne stacje DAB, które zostały wcześniej wyszukane i odtworzone, nie mają już sygnału, użytkownicy mogą wejść do menu, wybrać „Prune” i nacisnąć przycisk ENTER aby potwierdzić.

Stacje bez sygnału zostaną usunięte z listy stacji DAB, podczas gdy te z sygnałem zostaną zachowane.

System (ustawienia systemowe)

Naciśnij przycisk ENTER, aby przejść do ustawień systemowych, w których znajdziesz następujące opcje menu:

<Sleep> - Uśpienie	<Language> - Język
<Alarms> - Alarmy	<Factory Reset> - Reset do ustawień fabrycznych
<Time/Date> - Czas i data	
<Backlight> - Podświetlenie	<SW version> - Wersja oprogramowania

DAB INFO (funkcja przeglądania informacji)

Podczas odtwarzania DAB naciśnij przycisk INFO/MENU, aby wyświetlić kolejno następujące informacje:

DLS (Dynamic Label Segment)	Współczynnik błędów sygnału
Siła sygnału	Szybkość transmisji audio
Typ programu	Czas
Zespół/Multiplex (nazwa grupy)	Data
Częstotliwość	

Funkcja FM

Aby przełączyć się na tryb FM, włącz urządzenie i naciśnij przycisk MODE. Na ekranie wyświetli się „87,5 MHz” (domyślnie). Jeśli stacja była wcześniej słuchana, urządzenie powróci do ostatnio dostrojonej częstotliwości po uruchomieniu.

W trybie odtwarzania FM naciśnij krótko przycisk ENTER, aby wyciszyć dźwięk; naciśnij go ponownie, aby włączyć dźwięk.

Wyszukiwanie stacji FM

1. W trybie FM naciśnij krótko przycisk PREV, aby zmniejszyć wyszukiwanie stacji. Naciśnij i przytrzymaj przycisk PREV przez 2 sekundy, aby stale zmniejszać częstotliwość o 50 kHz. Po znalezieniu stacji wyszukiwanie zostanie zatrzymane, a stacja zostanie odtworzona.
2. Naciśnij krótko przycisk NEXT, aby zwiększyć wyszukiwanie stacji. Naciśnij i przytrzymaj przycisk NEXT przez 2 sekundy, aby stale zwiększać częstotliwość o 50 kHz.

BLOW 77-573# RK3 YM-237 DAB

BLOW

PL

RADIO RK3 DAB+

Po znalezieniu stacji wyszukiwanie zostanie zatrzymane, a stacja zostanie odtworzona.

3. Podczas odtwarzania FM przytrzymaj przycisk ENTER przez 2 sekundy, aby wyświetlić menu. Następnie użyj przycisków PREV lub NEXT, aby wybrać menu AMS. Naciśnij przycisk ENTER, a na ekranie pojawi się komunikat „Start auto search?”. Użyj przycisków PREV lub NEXT, aby wybrać opcję YES, co spowoduje rozpoczęcie wyszukiwania od 88 do 108 MHz i automatyczne zapisanie stacji. Po zakończeniu wyszukiwania odtworzy pierwszą znalezioną stację.

FM INFO (funkcja wyświetlania informacji)

Podczas odtwarzania FM naciśnij przycisk INFO/MENU, aby kolejno wyświetlić następujące opcje:

1. Radio Text: Wyświetlanie informacji tekstowych
2. Program Type: Typ programu radiowego
3. Station Name: Nazwa stacji radiowej
4. Audio Mode: Tryb Stereo/Mono
5. Date: Bieżąca data

Stacje zaprogramowane FM

Możesz zaprogramować do 40 stacji FM:

1. Podczas odtwarzania FM przytrzymaj klawisz ENTER przez 2 sekundy, aby wyświetlić menu. Następnie użyj klawiszy PREV lub NEXT, aby wybrać menu „Preset Save”. Naciśnij klawisz ENTER, a na ekranie wyświetli się „<1: Empty>”. Jeśli pozycja 1 ma zapisaną stację, zostanie wyświetlona częstotliwość stacji, np. <1: 107,50 MHz>.
2. Użyj klawiszy PREV lub NEXT, aby wybrać lokalizację zapisu (1-40).
3. Po wybraniu żądanej lokalizacji zapisu (np. pozycja 1) naciśnij klawisz ENTER, a na ekranie wyświetli się „Preset 1 stored”.
4. Pozycja 1 została zapisana. Aby zapisać inne stacje, powtórz powyższe kroki.

Menu funkcji w trybie FM

Odtwarzanie zapisanych stacji

1. Podczas odtwarzania FM przytrzymaj klawisz ENTER przez 2 sekundy, aby wyświetlić menu. Następnie użyj klawiszy PREV lub NEXT, aby wybrać menu „Preset Recall”. Naciśnij klawisz ENTER, a na ekranie wyświetli się lista zapisanych stacji.
2. Użyj klawiszy PREV lub NEXT, aby wybrać numer zaprogramowanej stacji, którą chcesz odtworzyć.
3. Naciśnij klawisz ENTER, aby potwierdzić, a wybrana zaprogramowana stacja rozpocznie odtwarzanie.
4. Aby odtworzyć inne zaprogramowane stacje, powtórz powyższe kroki.

BLOW 77-573# RK3 YM-237 DAB

BLOW

PL

RADIO RK3 DAB+

1. Ustawienia skanowania

Naciśnij przycisk ENTER, a następnie naciśnij przycisk PREV lub NEXT, aby:

<Strong stations only> - Wyszukaj tylko silne stacje.

<All stations> - Wyszukaj wszystkie stacje.

2. Ustawienia audio

W tej pozycji menu naciśnij przycisk ENTER, a następnie naciśnij przycisk PREV lub NEXT, aby przełączyć:

<Stereo allowed> - Tryb dźwięku stereo

<Forced mono> - Wymuszony tryb mono.

3. Ustawienia systemowe

Szczegóły znajdują się później.

Funkcja BT

Naciśnij przycisk MODE, aby przełączyć się na tryb BT; na ekranie wyświetli się komunikat „Paring”, co oznacza, że Bluetooth jest w trybie wyszukiwania, a inne urządzenia mogą znaleźć Bluetooth tego urządzenia o nazwie „BLOW RK3”.

1. Gdy telefon lub komputer wykryje „BLOW RK3”, kliknij, aby sparować i połączyć. Po pomyślnym połączeniu usłyszysz dźwięk monitu, a na ekranie pojawi się komunikat „Connected”.
2. Naciśnij przycisk ENTER, aby rozpocząć odtwarzanie muzyki; na ekranie wyświetli się komunikat „Playing”. Ponowne naciśnięcie spowoduje wstrzymanie odtwarzania.
3. Naciśnij przycisk PREV, aby odtworzyć poprzedni utwór.
4. Naciśnij przycisk NEXT, aby odtworzyć następny utwór.
5. Jeśli podczas parowania nie zostaną podłączone żadne urządzenia lub jeśli podłączone urządzenie nie odtwarzało muzyki przez 15 minut, automatycznie przejdzie ono w tryb czuwania zegara.

Funkcja wyjścia słuchawkowego

W dowolnym trybie odtwarzania po włączeniu zasilania włożenie wtyczki słuchawkowej 3,5 mm wyciszy głośniki, umożliwiając słyszenie dźwięku przez słuchawki.

Uśpienie (ustawienia timera uśpienia)

Po wybraniu menu <Sleep> „Uśpienie” naciśnij przycisk OK/SCAN, aby potwierdzić, a następnie możesz przełączać opcje timera uśpienia:

- 15 minut
- 30 minut
- 45 minut
- 60 minut
- 90 minut

BLOW**PL**

RADIO RK3 DAB+

Funkcja alarmów

1. Ustawienia alarmu 1

To urządzenie może ustawić 2 alarmy, a sposób działania dla obu jest taki sam.

Używając alarmu 1 jako przykładu, ustawienia są następujące:

W dowolnym trybie (włączony lub czuwanie) uzyskaj dostęp do interfejsu menu alarmów, naciśnij przycisk ENTER/SCAN, aby wejść, wybierz Alarm 1, aby uzyskać dostęp do ustawień alarmu i ponownie naciśnij przycisk ENTER/SCAN. Następnie możesz przełączać się między następującymi ustawieniami:

1. Godzina włączenia: 06:00 (Ustaw godzinę alarmu, naciskając przyciski PREV lub NEXT, aby dostosować godziny i minuty)
2. Czas trwania: 60 --> 90 --> 15 --> 30 --> 45 --> 60.... (Ustaw czas trwania alarmu, wybierając różne opcje za pomocą przycisków PREV lub NEXT)
3. Źródło: Brzęczyk --> FM --> DAB --> Brzęczyk..... (Wybierz tryb dźwięku alarmu za pomocą przycisków PREV lub NEXT)
4. Codziennie: (Ustaw harmonogram powtarzania alarmu, wybierając z następujących opcji za pomocą przycisków PREV lub NEXT)
 - Codziennie (codziennie)
 - Raz (raz)
 - Weekendy (sobota, niedziela)
 - Dni robocze (od poniedziałku do piątku)
5. Głośność: Ustaw głośność alarmu, regulując poziom od 1 do 16 za pomocą przycisków PREV lub NEXT

Alarm Wyl.: Włącz lub wyłącz funkcję alarmu. Po ustawieniu Alarmu na WŁ. na ekranie będzie wyświetlany stan alarmu.

Alarm 1 (Alarm i Stop)

Podczas dzwonienia Alarmu 1 naciśnij przycisk POWER, aby zatrzymać i dezaktywować alarm na dany dzień.

Funkcja drzemki

Wszystkie przyciski oprócz przycisku POWER aktywują funkcję SNOOZE podczas alarmu.

Gdy alarm zadzwoni, naciśnięcie dowolnego przycisku innego niż przycisk POWER spowoduje przejście w tryb drzemki, a alarm zadzwoni ponownie po 9 minutach (domyślnie). Na ekranie wyświetli się odliczanie drzemki.

BLOW**PL**

RADIO RK3 DAB+

Ustawienia czasu

W menu <TIME/DATE> naciśnij przycisk ENTER aby uzyskać dostęp do następujących ustawień:

1. Ustaw czas/datę

- 1) Naciśnij przycisk ENTER; na ekranie wyświetli się <Set Time/Date>.
- 2) Naciśnij ponownie przycisk ENTER; pojawi się data, a pozycja dnia będzie migać. Użyj przycisku PREV lub DOWN, aby ustawić dzień.
- 3) Naciśnij przycisk ENTER; pozycja miesiąca zacznie migać. Użyj przycisku PREV lub DOWN, aby ustawić miesiąc.
- 4) Naciśnij przycisk ENTER; pozycja roku zacznie migać. Użyj przycisku PREV lub DOWN, aby ustawić rok.
- 5) Naciśnij przycisk ENTER; pozycja godziny zacznie migać. Użyj przycisku PREV lub NEXT, aby ustawić godzinę.
- 6) Naciśnij przycisk ENTER aby potwierdzić; pozycja minut zacznie migać. Użyj przycisku PREV lub NEXT, aby ustawić minuty.
- 7) Naciśnij przycisk ENTER, aby potwierdzić; ustawienie daty/czasu jest zakończone, wyświetla się „Saved”, a następnie następuje powrót do menu ustawiania czasu. Jeśli przez 10 sekund nie zostanie naciśnięty żaden przycisk, nastąpi wyjście z menu.

2. Ustaw format 12/24-godzinny

- 1) W menu Times naciśnij przycisk ENTER i użyj przycisku PREV lub NEXT, aby wybrać <Set 12/24 hour>.
- 2) Naciśnij przycisk ENTER; na ekranie pojawi się <Set 24 hour>. Użyj przycisku PREV lub NEXT, aby przełączać się między formatem 12/24-godzinnym (domyślnie jest to 24-godzinny).
- 3) Naciśnij przycisk ENTER, aby zakończyć ustawianie, powracając do poprzedniego menu. Jeśli żaden przycisk nie zostanie naciśnięty przez 10 sekund, nastąpi wyjście z trybu menu.

3. Ustaw format daty

- 1) W menu Times naciśnij przycisk ENTER i użyj przycisku PREV lub NEXT, aby wybrać <Set date format>.
- 2) Naciśnij przycisk ENTER, a następnie użyj przycisku PREV lub NEXT, aby wybrać między formatami daty: DD-MM-RRRR lub MM-DD-RRRR.
- 3) Po dokonaniu wyboru naciśnij ENTER, aby potwierdzić.

4. Ustawienia automatycznej aktualizacji czasu

W tym menu użyj przycisku PREV lub NEXT, aby wybrać jedną z następujących opcji:

- Aktualizuj z dowolnego: Aktualizuj czas z dowolnego trybu.
- Brak aktualizacji: Nie aktualizuj czasu.
- Aktualizuj z FM: Aktualizuj czas z radia FM.
- Aktualizuj z DAB: Aktualizuj czas z radia DAB.

BLOW 77-573# RK3 YM-237 DAB

BLOW

PL

RADIO RK3 DAB+

Ustawienia jasności podświetlenia

W menu Podświetlenie naciśnij przycisk ENTER, a następnie użyj przycisku PREV lub NEXT, aby wybrać następujące ustawienia:

- 1) Limit czasu: To ustawienie określa czas, przez jaki podświetlenie pozostaje włączone. Jeśli przez pewien czas nie zostanie naciśnięty żaden przycisk, podświetlenie zostanie przyciemnione do bardzo niskiej jasności. Dostępne opcje czasu to:
OFF-->10 sek.-->20 sek.-->30 sek.-->45 sek.-->60 sek.-->90 sek.-->120 sek.-->180 sek.-->OFF...

Jeśli ustawione na Wł., podświetlenie utrzyma wybraną jasność bez przyciemniania do bardzo niskiego poziomu.

- 2) Poziom wł.: To ustawienie dostosowuje poziom jasności podświetlenia, z następującymi opcjami:

1. Średni
2. Wysoki
3. Niski

Ustawienia języka

To urządzenie obsługuje 9 języków, przy czym angielski jest ustawiony jako domyślny. Obsługiwane języki to:

1. English (UK)
2. Deutsch (niemiecki)
3. Italiano (włoski)
4. Français (francuski)
5. Norsk Språk (norweski)
6. Svenska (szwedzki)
7. Dansk (duński)

8. Polski (polski)

9. Suomi (fiński)

Ustawienia fabryczne

W tym trybie menu wybierz <YES> i naciśnij przycisk ENTER, aby potwierdzić. System przywróci ustawienia fabryczne, a wszystkie konfiguracje użytkownika zostaną usunięte.

Wersja oprogramowania

Ten tryb menu umożliwia wyświetlenie wersji oprogramowania produktu.

BLOW 77-573# RK3 YM-237 DAB

BLOW

PL

RADIO RK3 DAB+

Regulacja głośności

W trybie włączania naciśnij przycisk VOL+, aby stopniowo zwiększać głośność. Przytrzymanie przycisku VOL+ spowoduje ciągłe zwiększanie głośności. Naciśnij przycisk VOL-, aby stopniowo zmniejszać głośność, a przytrzymanie spowoduje ciągłe zmniejszanie głośności. Głośność można regulować w zakresie od 0 do 16.

Funkcja ładowania

To urządzenie jest wyposażone we wbudowaną baterię litową i obsługuje ładowanie przez USB-C. Maksymalny prąd ładowania wynosi 1 A. Podczas ładowania lampka kontrolna obok portu ładowania USB-C będzie świecić na czerwono, a po pełnym naładowaniu zmieni kolor na zielony.


BLOW 77-573# RK3 YM-237 DAB

BLOW

EN

RADIO RK3 DAB+

PRODUCT DESCRIPTION

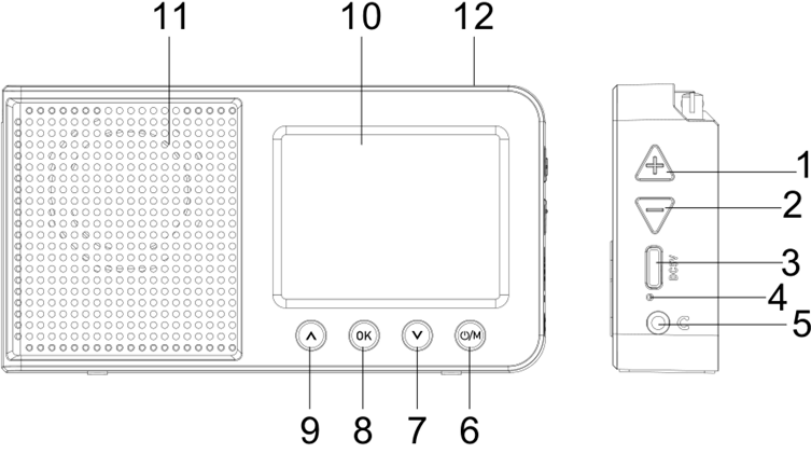

- | | |
|---|------------------------------------|
| 1. VOL+: Volume Up | 7. NEXT: Next / Next Track |
| 2. VOL-: Volume Down | 8. ENTER: Confirm |
| 3. TYPE-C JACK: 5V Charging Input | 9. PREV: Previous / Previous Track |
| 4. CHARGE LED: Charging Indicator | 10. DISPLAY: Dot Matrix Display |
| 5. EARPHONE JACK OUTPUT | 11. SPEAKER: Speaker |
| 6. POWER/MODE: Power On/Off / Mode Switch | 12. ANT - FM/DAB : Antenna |

Power On/Off

Short press the POWER/MODE key to turn on the device. The screen will display "Welcome Digital Radio," followed by the mode content. Then, you can short press the POWER/MODE key to switch between modes.

When the device is on, long press the POWER/MODE key for 2 seconds to display STANDBY, after which it will switch to show the clock. You can either wait for 15 seconds or long press the POWER/MODE key for 2 seconds to display GOOD-BYE and power off the device.

DAB Function

In the powered-on state, short press the POWER/MODE key to switch to DAB mode. Long press the ENTER key for 2 seconds to access the DAB menu. Use the NEXT or PREV keys to select the menu options, then press the ENTER key to enter the corresponding function.

When switching to DAB mode, if no radio stations have been previously searched, it will automatically begin searching for stations. Once the search is complete, the number of found stations will be displayed on the right side of the screen, and the first station found will start playing. You can use the PREV or NEXT keys to choose from the list of available stations, and press the ENTER key to play the selected station.

Function menu in DAB mode

Full Scan (Automatic Station Search)

1. In DAB mode, press and hold the ENTER key for 2 seconds to access the menu list. Use the PREV or NEXT keys to select < Full Scan >.
2. Press the ENTER key to confirm, and the station search will begin.
3. Once the search is complete, the number of found stations will be displayed on the right side of the screen, and playback will start with the first found station.
4. If the device is powered on after a factory reset, it will automatically begin searching for stations in DAB mode.

DAB Preset Store (Saving Preset Stations)

DAB can store up to 40 stations:

1. While playing a DAB station, press and hold the ENTER key for 2 seconds to bring up the menu. Then use the PREV or NEXT keys to select < Preset Save > and press the ENTER key. The screen will display “<1: Empty>.” If a station is already stored in position 1, the station name will be shown.
2. Use the PREV or NEXT keys to choose the position you want to store the station (positions 1-40).
3. Once you have selected the desired position (for example, position 1), press the ENTER key, and the screen will display “Preset 1 stored.”

DAB Preset Recall (Playing Stored Stations)

To play a stored preset station:

1. While playing a DAB station, press and hold the ENTER key for 2 seconds to access the menu. Then use the PREV or NEXT keys to select < Preset Recall > and press the ENTER key. The screen will display the list of stored stations.
2. Use the PREV or NEXT keys to choose the number of the preset station you want to play.
3. Press the ENTER key to confirm and play the selected preset station.
4. To play other preset stations, repeat the above steps.

Manual Tune (Manual Station Search)

1. In DAB mode, press and hold the ENTER key for 2 seconds to enter the menu mode. Then use the PREV or NEXT keys to select < Manual Tune >.
2. Press the ENTER key to confirm, and the screen will display “<5A 174.928MHz>.” Use the PREV or NEXT keys to select frequencies from 5A to 13F.
3. Once you have selected the desired frequency, press the ENTER key to confirm. The signal strength of that frequency will be displayed. If there is a station signal at that frequency, the signal strength will be shown, and the station list for that frequency will be stored. Playback will then begin with the first station in the list.

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO **RK3** DAB+

Prune Invalid (Remove Invalid Stations)

When some previously searched and played DAB stations no longer have a signal, users can enter the menu, select < Prune >, and press the ENTER key to confirm. The DAB station list will remove any stations without a signal, while those with a signal will be retained.

System Settings

Press the ENTER key to enter the system settings, which will display the following menu options:

- < Sleep >
- < Alarm >
- < Time/Date >
- < Backlight >
- < Language >
- < Factory Reset >
- < Software Version >

DAB INFO (Information Viewing Function)

During DAB playback, press the INFO/MENU key to sequentially view the following information:

DLS (Dynamic Label Segment)	Signal error Rate
Signal strength	Audio Bit Rate
Program Type	Time
Ensemble/Multiplex (Group Name)	Date
Frequency	DLS

FM Function

In power-on mode, press the POWER/MODE key to switch to FM mode. The screen will display "87.5MHz" (default). If a station was previously listened to, the device will return to the last listened frequency upon startup.

FM Mode Functions (Menu)

During FM playback, long press the ENTER key for 2 seconds to enter the FM mode menu list, which will display the following menu options:

- < AMS >
- < Preset Recall >
- < Preset Save >
- < Scan Settings >
- < Audio Settings >
- < System Settings >

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO RK3 DAB+

FM Station Search

1. In FM mode, press the PREV key briefly to decrease the frequency and search for stations. Holding the PREV key for 2 seconds will continuously decrease the frequency by 50kHz. When a station is found, the search will stop, and the found station will start playing.
2. Press the NEXT key briefly to increase the frequency and search for stations. Holding the NEXT key for 2 seconds will continuously increase the frequency by 50kHz. When a station is found, the search will stop, and the found station will start playing.
3. During FM playback, hold the ENTER key for 2 seconds to bring up the menu. Then, use the PREV or NEXT keys to select the AMS menu. Press ENTER, and the screen will display "Start auto search?" Use the PREV or NEXT keys to select YES, which will start searching from 88 to 108 MHz and automatically store the stations. Once the search is complete, it will play the first station found.

FM INFO (Information Viewing Function)

During FM playback, briefly press the ENTER key to view the following options:

1. Radio Text: Displays text information
2. Program Type: Shows the type of radio program
3. Station Name: Displays the name of the station
4. Audio Mode: Indicates stereo/mono mode
5. Date: Shows the date/day
6. Radio Text: (repeated option)

FM Preset Stations

You can preset up to 40 FM stations:

1. During FM playback, hold the ENTER key for 2 seconds to bring up the menu. Then, use the PREV or NEXT keys to select the "Preset Save" menu. Press ENTER, and the screen will display "<1: Empty>." If position 1 has a stored station, it will show the station frequency, e.g., "<1: 107.50MHz>."
2. Use the PREV or NEXT keys to choose the storage location (1-40).
3. After selecting the desired storage location (e.g., position 1), press the ENTER key, and the screen will display "Preset 1 stored."
4. Position 1 is now stored. To store other stations, repeat the above steps.

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO RK3 DAB+

FM Preset Stations

The FM function can store up to 40 stations.

1. During FM playback, hold the ENTER key for 2 seconds to bring up the menu. Then use the PREV or NEXT keys to select the "Preset Recall" menu. Press ENTER, and the screen will display the list of stored stations.
2. Use the PREV or NEXT keys to choose the preset station number you want to play.
3. Press the ENTER key to confirm, and the selected preset station will start playing.
4. To play other preset stations, repeat the above steps.

Scan Setting

In this menu location, press the ENTER key, then use the PREV or NEXT keys to toggle between:

<Strong stations only>: Search for strong signal stations only

<All stations >: Search for all strong and weak signal stations

Audio Setting

In this menu location, press the ENTER key, then use the PREV or NEXT keys to toggle between:

<Stereo allowed>: Stereo audio mode

<Forced mono >: Forced mono audio

System Settings

For more detailed information, please refer to the subsequent sections.

BT Function

In power-on mode, press the POWER/MODE key to switch to BT mode. The screen will display "Pairing," indicating that Bluetooth is in search mode. Other mobile phones or computer Bluetooth devices can search for this device, which is named "Blow RK3."

1. When your mobile phone or computer Bluetooth device finds "Blow RK3" click to pair and connect. Once connected successfully, there will be a prompt sound, and the screen will display "Connected."
2. Press the ENTER key to start playing music; the screen will show "Playing." Pressing the ENTER key again will pause playback.
3. Press the PREV key to play the previous track.
4. Press the NEXT key to play the next track.
5. If no device connects during the pairing process, or if the connected Bluetooth device has not played any tracks for 15 minutes, the system will automatically enter standby clock mode.

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO RK3 DAB+

Headphone Output Function

In any playback mode after powering on, inserting a 3.5mm headphone jack will mute the speakers, allowing you to hear sound through the headphones.

System Settings

All time settings, sleep shutdown settings, alarm settings, backlight brightness, language selection, etc., will be completed in the system settings menu. In power-on mode, press and hold the ENTER key for 2 seconds, then press the PREV or NEXT key to select the System menu. Press the ENTER key again to enter the menu:

- <Sleep>
- <Alarm>
- <Time/Date>
- <Backlight>
- <Language>
- <Factory Reset>
- <Software Version>

Sleep (Sleep Shutdown Settings)

When the Sleep menu is selected, press the ENTER key to confirm and you can cycle through the sleep shutdown times:

- Sleep Time off (default)
- 15 minutes
- 30 minutes
- 45 minutes
- 60 minutes
- 90 minutes
- 120 minutes
- Sleep Time off

After selecting the sleep time, a crescent moon symbol will appear in the lower left corner of the screen along with the remaining sleep shutdown time.

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO RK3 DAB+

Alarms Function

1.Alarm 1 Settings

This device can set 2 alarms, and the operation method for both is the same. Using Alarm 1 as an example, the settings are as follows:

In any mode (powered on or standby), access the Alarms menu interface, press the ENTER/SCAN button to enter, select Alarm 1 to access the alarm settings, and press the ENTER/SCAN button again. You can then cycle through the following settings:

1.On Time: 06:00 (Set the alarm time by pressing the PREV or NEXT buttons to adjust hours and minutes)

2.Duration: 60 --> 90 --> 15 --> 30 --> 45 --> 60.... (Set the alarm duration by selecting different options with the PREV or NEXT buttons)

3.Source: Buzzer --> FM --> DAB --> Buzzer..... (Select the alarm sound mode using the PREV or NEXT buttons)

4.Daily: (Set the repeat alarm schedule by choosing from the following options using PREV or NEXT buttons)

Daily (every day)

Once (once)

Weekends (Saturday, Sunday)

Weekdays (Monday to Friday)

5.Volume: Set the alarm volume by adjusting the level from 1 to 16 using the PREV or NEXT buttons

Alarm Off: Toggle the alarm function on or off; when set to Alarm ON, the screen will display the alarm status.

Alarm 1(Alarm & Stop)

During the Alarm 1 ringing, press the POWER button to stop and deactivate the alarm for that day.

Snooze Function

All buttons except the POWER button will activate the SNOOZE function during the alarm.

When the alarm rings, pressing any button other than the POWER button will enter snooze mode, and the alarm will ring again after 9 minutes (default). The screen will display the snooze countdown.

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO RK3 DAB+

Time Settings

In the Times menu, press the ENTER button to access the following settings:

1.Set Time/Date

1. Press ENTER, and the screen will display <Set Time/Date>;
2. Press ENTER again, and the screen will show the date with the day position blinking. At this point, press PREV or DOWN to set the day;
3. Press ENTER; the month position will start blinking. Use PREV or DOWN to set the month;
4. Press ENTER; the year position will blink. Use PREV or DOWN to set the year;
5. Press ENTER; the hour position will blink. Use PREV or NEXT to set the hour;
6. Press ENTER to confirm, and the minute position will blink. Use PREV or NEXT to set the minutes;
7. Press ENTER to confirm the settings. The screen will display Time Saved, then return to the Time Set menu. If no buttons are pressed for 10 seconds, the menu will exit automatically.

Stopping Alarm 1

During the Alarm 1 ringing, pressing the POWER key will stop and turn off the alarm for that day.

Snooze Function

All keys except the POWER key serve as SNOOZE during the alarm ringing.

When the alarm goes off, pressing any key other than the POWER key will activate snooze mode, and the alarm will ring again after 9 minutes (default). The screen will display a countdown for the snooze time.

Time/Date Settings

When you select the Time/Date menu, press the ENTER button to access the following settings:

Set Time/Date

1. Press ENTER, and the screen will display <Set Time/Date>;
2. Press ENTER again, and the screen will show the date with the day position blinking. At this point, press PREV or DOWN to set the day;
3. Press ENTER; the month position will start blinking. Use PREV or DOWN to set the month;
4. Press ENTER; the year position will blink. Use PREV or DOWN to set the year;
5. Press ENTER; the hour position will blink. Use PREV or NEXT to set the hour;

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO RK3 DAB+

6. Press ENTER to confirm, and the minute position will blink. Use PREV or NEXT to set the minutes;
7. Press ENTER to confirm the settings. The screen will display Time Saved, then return to the Time Set menu. If no buttons are pressed for 10 seconds, the menu will exit automatically.

2. Set 12/24 Hour Format

1. In the Time/Date menu, press the ENTER button and use PREV or NEXT to select <Set 12/24 hour>;
2. Press ENTER; the screen will display 12 hour and 24 hour options. Use PREV or NEXT to switch between 12-hour and 24-hour formats (default is 24-hour);
3. Press ENTER to confirm the setting, and you will return to the previous menu. If no buttons are pressed for 20 seconds, the menu will exit automatically.

3. Set Date Format

1. In the Time/Date menu, press the ENTER button and use PREV or NEXT to select <Set date format>;
2. Press ENTER, then use PREV or NEXT to choose between date formats: DD-MM-YYYY and MM-DD-YYYY;
3. Once you've made your selection, press ENTER to confirm.

4. Auto Update Time Settings

In this menu, use PREV or NEXT to choose from the following options:

From Any: Updates time from any mode

No Update: Does not update time

Update From FM: Updates time from FM radio

Update From Digital Radio: Updates time from DAB radio

Backlight Brightness Settings

In the Backlight menu, press the OK/SCAN button, then use the PREV or NEXT button to select the following settings:

- 1) Timeout: This setting determines the duration for which the backlight remains on. If no buttons are pressed for a period of time, the backlight will dim to a very low brightness. The available duration options are:
On-->10Sec-->20Sec-->30Sec-->45Sec-->60Sec-->90Sec-->120Sec-->180Sec-->On.....

If set to On, the backlight will maintain the selected brightness without dimming to a very low level.

BLOW 77-573# RK3 YM-237 DAB

BLOW

EN | RADIO RK3 DAB+

2) On Level: This setting adjusts the brightness level of the backlight, with the following options:

1. Medium
2. Hight
3. Low

Language Settings

This device supports 9 languages, with English set as the default. The supported languages are as follows:

1. English (UK)
2. Deutsch (German)
3. Italiano (Italian)
4. Français (French)
5. Norsk Språk (Norwegian)
6. Svenska (Swedish)
7. Dansk (Danish)
8. Polski (Polish)
9. Suomi (Finnish)

Factory Reset

In this menu mode, select <YES> and press the ENTER button to confirm. The system will restore factory settings, and all user configurations will be erased.

SW Version

This menu mode allows you to view the software version of the product.

Volume Adjustment

In power-on mode, press the VOL+ button to increase the volume incrementally. Holding down the VOL+ button will continuously increase the volume. Press the VOL- button to decrease the volume incrementally, and holding it down will continuously decrease the volume. The volume is adjustable from 0 to 16.

Charging Function

This device is equipped with a built-in lithium battery and supports USB-C charging. The maximum charging current is 1A. During charging, the indicator light next to the USB-C charging port will show red, and it will turn green once fully charged.