



zawartość

1 gramofon Moto

1.1 Instrukcja obsługi

1.1.1 Zawartość pudełka

1.1.1.1 Co znajduje się w pudełku?

1.1.2 Sterowanie i funkcje

1.1.2.1 Widok z góry

1.1.2.2 Widok z przodu

1.1.2.3 Widok z tyłu

1.1.2.4 Widok z boku

1.1.3 Instrukcja obsługi

1.1.3.1 Podstawowa obsługa

1.1.3.2 Uruchomienie gramofonu

1.1.3.3 Tryb Phono – Odtwarzanie płyty winylowej

1.1.3.4 Bluetooth – tryb wyjścia

1.1.3.5 Nagrywanie USB

1.1.3.6 Tryb wejścia AUX

1.1.3.7 Bluetooth – tryb włączony

1.1.3.8 Tryb odtwarzania USB

1.1.3.9 Podłączanie głośników za pomocą złącza RCA

1.1.3.10 Wskazówki dotyczące lepszej wydajności gramofonu

1.1.4 Rozwiązywanie problemów

1.1.4.1 Wsparcie

1.1.5 Specyfikacja i gwarancja

1.1.5.1 Specyfikacja

1.1.5.2 Gwarancja

1.1.6 Ostrzeżenia i informacje dotyczące bezpieczeństwa

2 Dokumenty / Zasoby

2.1 Odniesienia

3 Powiązane posty



Gramofon Moto

Instrukcja obsługi

MAJORITY

AUDIO DOMOWE • CAMBRIDGE

3-letnia gwarancja


Zarejestruj swój produkt online, aby otrzymać BEZPŁATNĄ rozszerzoną gwarancję na 3 lata na stronie: www.majority.co.uk


Zawartość pudełka

Co jest w pudełku?

- A. Gramofon Majority Moto
- B. Zasilacz
- C. Zasilacz 45 RPM
- D. Mata filcowa




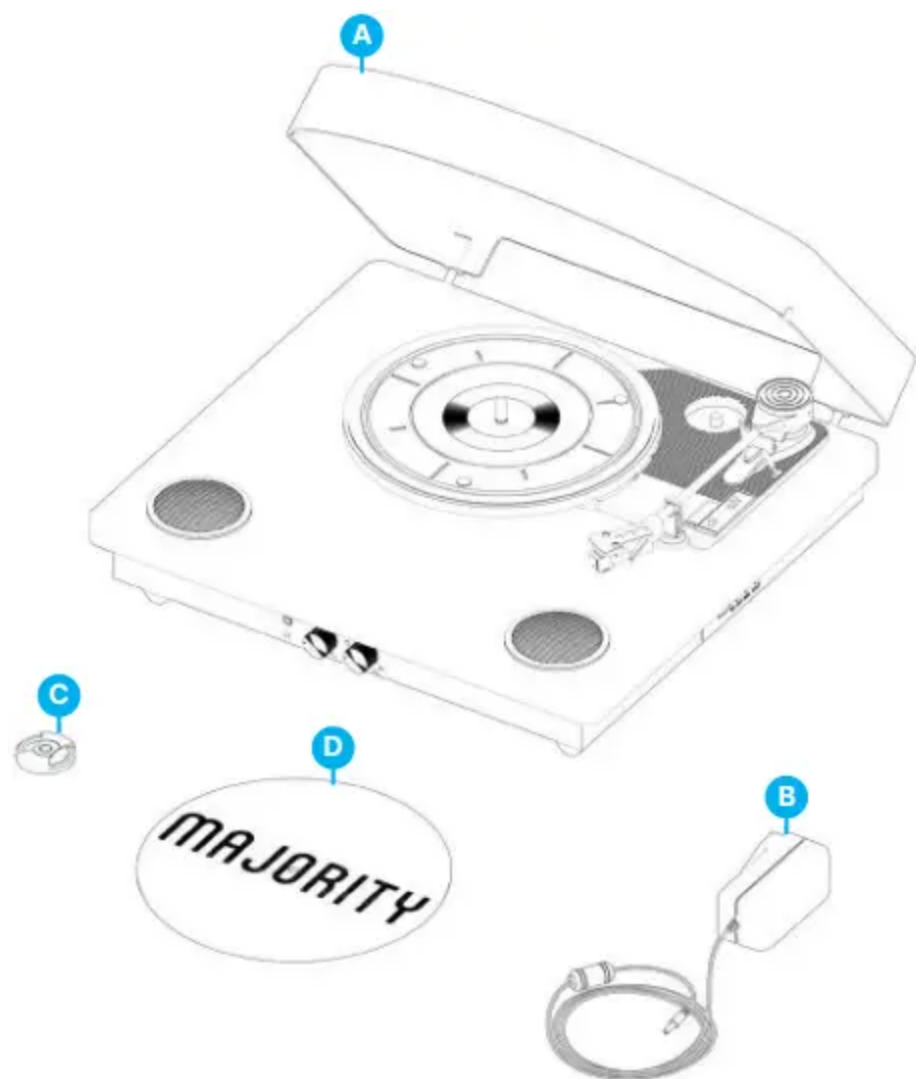

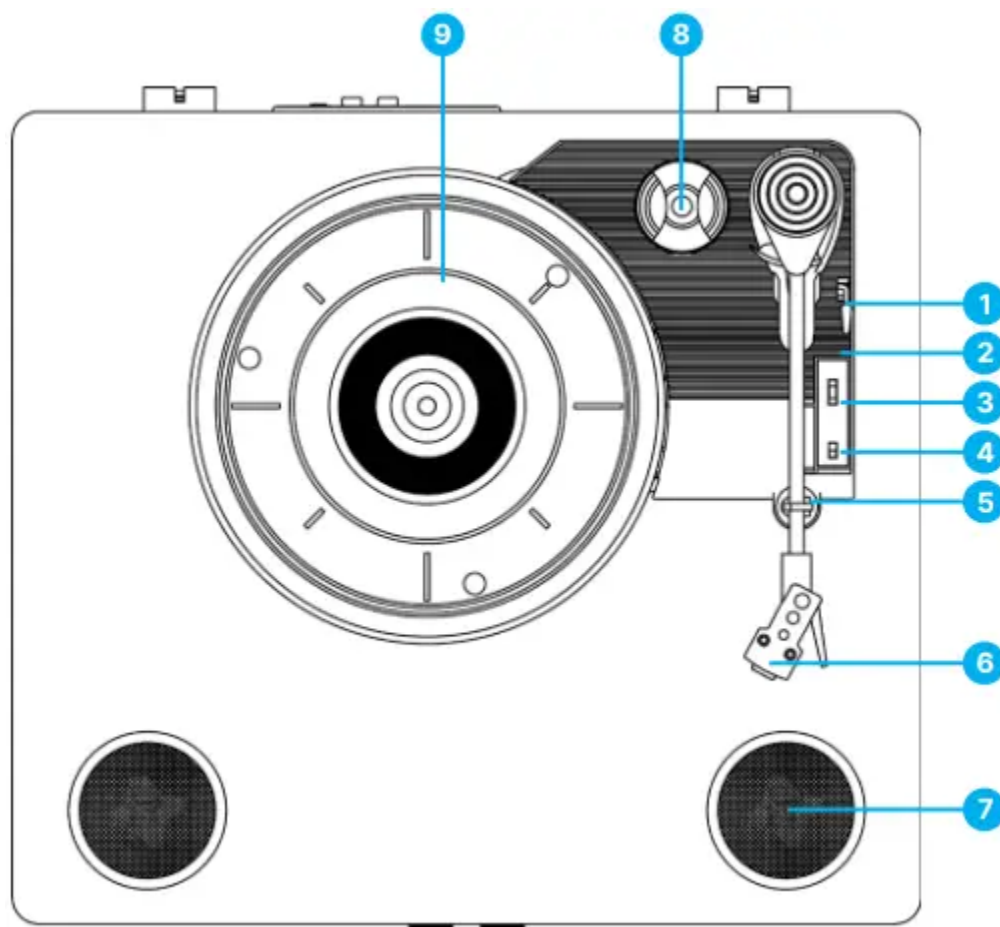


1. Dźwignia podnoszenia
2. Ramię gramofonu – Gramofon jest dostarczany z gotowym do użycia, wstępnie wyważonym ramieniem gramofonu i wkładką.
3. Przełącznik 33/45/78 RPM – Ten przełącznik kontroluje prędkość talerza gramofonu.
4. Przełącznik AUTO STOP ON/OFF
5. Klips ramienia gramofonu
6. Wkładka Audio-Technica
7. Głośnik
8. Adapter 45 RPM – Jest używany do płyt winylowych 45 RPM.
9. Talerz – Umieść tutaj swoją płytę.



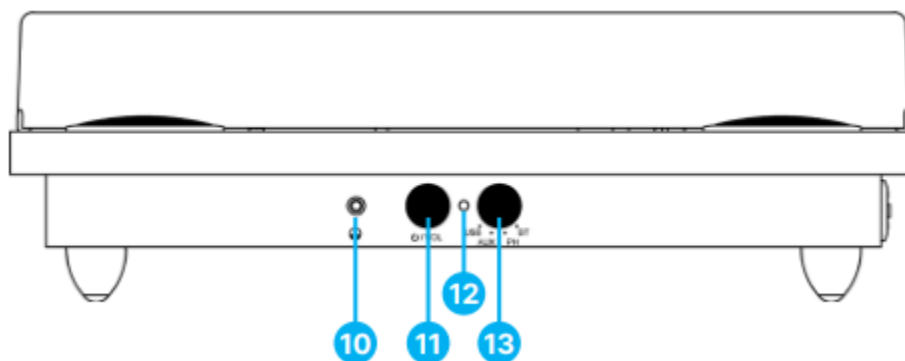


- 10. Gniazdo słuchawkowe – służy do podłączania słuchawek.
- 11. Pokrętko włączania/wyłączania zasilania i regulacji głośności
- 12. Wskaźnik LED
- 13. Pokrętko wyboru trybu (USB /AUX IN /PH /BT IN)

Widok z tyłu

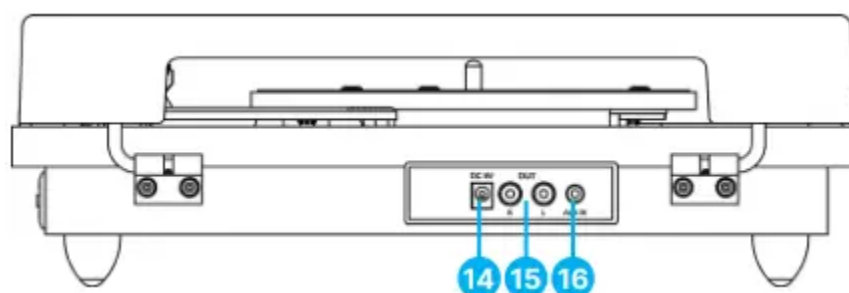

- 14. Port DC IN – służy do podłączania zasilacza.
- 15. Wyjście RCA – służy do podłączania zewnętrznego głośnika, nie wchodzi w skład zestawu.
- 16. Gniazdo AUX IN

Widok z boku

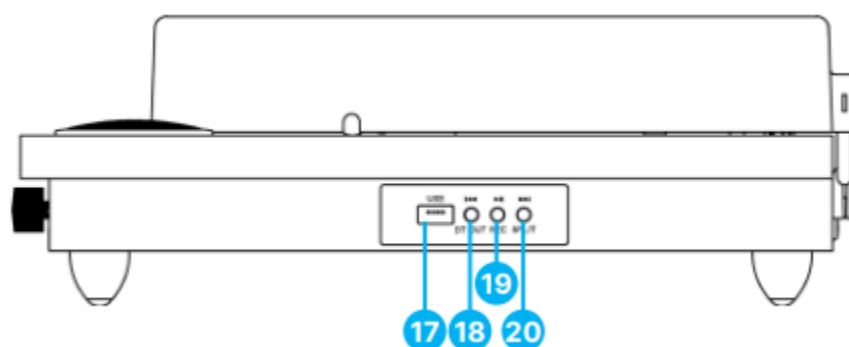

- 17. Port USB
- 18. Przycisk PREV i BT OUT
- 19. Przycisk PLAY/PAUSE/REC
- 20. Przycisk NEXT i SPLIT

Instrukcja obsługi

Podstawowa obsługa

Proszę zwrócić uwagę na wszystkie (Ref.) informacje zawarte w instrukcji mapowania elementów sterujących i funkcji na stronie 4-7.

Przed użyciem gramofonu Majority Moto wybierz bezpieczne miejsce, w którym urządzenie będzie chronione przed bezpośrednim działaniem promieni słonecznych i nie będzie znajdować się w pobliżu źródeł ciepła.

Umieść Majority Moto tak, aby z tyłu obudowy pozostało trochę miejsca na umieszczenie na talerzu płyty winylowej w pełnym rozmiarze. Unikaj powierzchni narażonej na wibracje, nadmierne zapylenie, zimno lub wilgoć.

Do czyszczenia urządzenia należy używać wyłącznie suchej ściereczki.

Nie otwieraj wewnętrznych części szafki, ponieważ może to spowodować porażenie prądem. Podczas wyjmowania wtyczki zasilania z gniazdka ściennego ciągnij bezpośrednio za wtyczkę, NIE za przewód.

Zachowaj tę instrukcję do wykorzystania w przyszłości.

Uruchamianie gramofonu

Założ przezroczystą osłonę przeciwpylową na gramofon.

Mocno i pewnie włóż wtyczkę DC adaptera do gniazda DC IN z tyłu urządzenia. Podłącz wtyczki AC adaptera do gniazda elektrycznego.

Tryb Phono – Odtwarzaj płytę winylową

1. Obróć pokrętkę wyboru trybu na PH **(Ref.13)**.
2. Obróć pokrętkę zasilania i regulacji głośności zgodnie z ruchem wskazówek zegara, aby włączyć i ustawić głośność. Wskaźnik LED zacznie migać na czerwono.
3. Umieść płytę na talerzu gramofonu i wybierz żądaną prędkość (33/45/78) zgodnie z płytą.

Uwaga: Podczas odtwarzania płyty 45RPM należy używać dołączonego adaptera 45RPM znajdującego się w uchwycie obok talerza (nr 8).

4. Zdejmij osłonę igły i gumkę (zachowaj ją, aby chronić igłę, gdy nie jest używana).
5. Otwórz zacisk ramienia gramofonu, aby zwolnić ramię gramofonu **(Ref.2)**. Podnieś dźwignię podnoszenia, aby podnieść ramię gramofonu i delikatnie przesunąć je do żądanej pozycji, nad płytą.
6. Gramofon zacznie się obracać, gdy ramię gramofonu zostanie przesunięte w kierunku płyty (gdy przełącznik AUTO STOP jest włączony). Przesuń dźwignię podnoszenia z powrotem do

pozycji 7. w dół, aby powoli opuścić ramię gramofonu do żądanej pozycji płyty, aby rozpocząć odtwarzanie.

8. Jeśli przełącznik sterowania Auto Stop jest włączony, płyta zatrzyma się automatycznie po zakończeniu. Jeśli przełącznik sterowania Auto Stop jest wyłączony, płyta NIE zatrzyma się automatycznie po zakończeniu.

Uwaga: Funkcja AUTO STOP dotyczy większości płyt winylowych 33RPM. Jednak w przypadku bardzo niewielu płyt winylowych z nietypowym wzorem rowków, zatrzyma się przed końcem. Jeśli tak się stanie, ustaw przełącznik AUTO STOP w pozycji `OFF', a następnie kontynuuj odtwarzanie.

Bluetooth – tryb wyjścia

Tryb Bluetooth-Out umożliwia sparowanie gramofonu z głośnikiem Bluetooth lub słuchawkami.

1. Ustaw funkcję trybu głównego na PH (phono), aby odtwarzać płyty winylowe.
2. Naciśnij przycisk BT OUT. Wskaźnik LED zacznie migać na czerwono.
3. Włącz funkcję BT głośnika lub słuchawek i rozpocznij parowanie z Majority Moto. Po pomyślnym nawiązaniu połączenia wskaźnik LED przestanie migać.

Po sparowaniu dźwięk z płyty winylowej będzie bezprzewodowo przesyłany do głośnika lub słuchawek.

Note: In this mode, the volume level can only be controlled from the speakers or headphones that you are pairing with the turntable.

USB Recording

Recording to USB stick is only available with Phono mode and AUX mode playback.

1. Plug your USB stick into the USB port. Start playing a vinyl record under Phono Mode playback or play via AUX playback from another device connected to the turntable.
2. Press the REC button to start a recording. The LED light indicator will flash red and blue to confirm the recording has begun.
3. To save different files on the recording, press the SPLIT button when recording. Press the SPLIT button again and it will generate another file.
4. Press the REC button to stop the recording. The LED light indicator will flash red to confirm recording has been ended, and it resumes to Phono mode playback or AUX mode playback.

Files recorded onto the USB are saved in MP3 file format, under folders titled `ALBUM\_01` and the files titled `REC\_0000, 0001, 0002` etc.

Note: The recording is made in a fixed-volume format. The volume level of the recorded file cannot be changed by any adjustments of the volume control on the turntable.

Note: Max size of USB stick supported is 128GB and needs to be set to FAT format.

AUX In Mode

Connect your iPod, MP3 player, mobile phones etc. to the AUX IN port using a 3.5mm3.5mm audio cable (not included).

1. Turn the MODE knob to AUX. The LED indicator will flash purple. You can now play music from an auxiliary device through the unit.
2. Turn the VOLUME CONTROL knob on the Majority Moto Turntable to adjust the volume. (The iPod, MP3 player and/or mobile phones' volume control may also impact the volume level, therefore, ensure this is also turned up).

Bluetooth – In Mode

1. Turn the MODE knob to BT. The LED light indicator will flash blue.
2. Switch on Bluetooth connectivity on your device and search for Majority Moto. Once successfully paired, the LED light indicator will stop flashing.
3. Use the VOLUME CONTROL knob to adjust the volume as per your preferences.

Note: The volume on your device paired with the turntable via Bluetooth can also impact the playback volume, therefore make sure the volume level is also turned up on your device while playing.

JSB Playback Mode

1. Turn the MODE knob to USB. The LED light indicator will flash red.
2. Plug in the USB drive and play your chosen audio. The LED light will now flash red.
3. Press PLAY/PAUSE/REC to play or pause. Press PREV button to play the previous track. Press NEXT button to play the next track.

Note: Max size of USB stick supported is 128GB, and it needs to be set to FAT format. USB playback supports MP3.

Connecting Speakers via RCA Connection

In PH (phono) Vinyl Playback mode, you can connect to your own speaker system using the RCA port on the turntable.

Note: This works using RCA to 3.5mm audio cable only (not included).

When using this type of connection with any speaker via RCA, it will supersede the in-built turntable speakers, therefore, you will only hear audio through your connected speakers. Use the volume control on your connected speakers to adjust the audio level as per your preferences.

Tips for Better Turntable Performance

1. When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip with a soft brush in a back-to-front motion only.
4. If you must use needle cleaning fluid, use it very sparingly.
5. Gently wipe the dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and dust cover.



Troubleshooting

Observation	Potential Cause/Solution
No power/function	Check whether the power is switched on or off at the wall. Check that the power adaptor is properly connected to the power outlet.
No sound	Check whether unit is set to MUTE. Check whether MODE is correctly selected. Turn up the volume on the speakers or on your external device. Check that cables are properly installed.
Function disturbance	Switch off and unplug the unit. Leave it for 2 minutes and switch it on again.
Bluetooth not connecting	Ensure that you are on Bluetooth mode on the speaker and the Bluetooth on your device is switched on. Select the Bluetooth device 'Majority Moto' and you should now be able to play audio.

Support

If you require further assistance with your Majority product, please contact our support team on the Majority website: www.majority.co.uk/support

Specification & Warranty

Specification

Power Supply	DC 5V 1A
Frequency Response	30Hz-20KHz
SNR	70dB
Separation	45dB
 Bluetooth	V5.3
Dimension (WxHxD)	38 × 12 × 34.6 cm

Warranty

All products come with a standard 12 month warranty. All items must be registered within 30 days of purchase on www.majority.co.uk for the warranty to be valid. Once on the web page, use the

menu to find 'Register Your Product'. You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

Warning & Safety Information

Safety and Usage Guidelines (All where applicable)

General Safety Information – Read and Retain: Review all safety and operating instructions before use; keep them for future reference.

Follow Instructions: Adhere strictly to all safety and operational guidelines. **Water**

Exposure: Keep the device away from water; avoid placing liquids near it. **Ventilation:** Ensure ventilation openings are unobstructed to prevent overheating. **Heat Sources:** Keep the device

away from heat-emitting appliances. **Wall Mounting – Installation Safety:** Follow the manufacturer's instructions and use approved mounting kits only. Avoid drilling into areas with

cables, gas, or water lines. Use proper tools and safety apparatus. **Regular Maintenance:**

Inspect regularly for wear or damage, especially if wall-mounted. **Relocation:** Detach from the wall mount before moving. **Child Safety:** Keep out of children's reach and ensure heavy items

are securely mounted. **Seismic Precautions:** Use specialized mounts in earthquake-prone

areas. **Electrical Safety – Power Source:** Use the specified power source; consult an

electrician if unsure. **Cable Management:** Protect the power cord from damage. **Power**

Disconnection: Keep the main plug accessible; unplug during storms or long periods of non-

use. **Battery Safety – Charging:** Use the manufacturer's charger; avoid extreme conditions.

Heat Exposure: Keep batteries away from heat to prevent explosion or leakage. **Battery**

Condition: Discontinue use if the battery is damaged; dispose of it properly. **Replacement:**

Only use recommended batteries; incorrect types can cause hazards. **External Batteries:** Use

only specified types, observing correct polarity. **Battery Removal:** Remove batteries if not used for an extended period. **Disposal:** Follow local regulations for battery disposal; do not incinerate.

Connectivity Safety – Cable Connections: Power off devices before connecting or

disconnecting cables. **Bluetooth Pairing:** Ensure a secure connection; avoid interference from other devices. **Volume Control:** Keep volume moderate to prevent hearing damage.

Connectivity and Data Security – Wireless Security: Review privacy policies and secure your network. **Software Updates:** Keep software updated for security and performance.

Children's Safety Warnings – Product Use: Intended for adults; keep away from children.

Battery Warning: Keep batteries and items containing batteries out of children's reach.

Volume Control: Maintain a safe volume level to protect children's hearing. **Fire Hazard –**

Flammable Materials: Do not place open flames near the product. **Overheating:** Avoid

covering the product to prevent overheating and fire risks. **Disposal and Recycling – Product**

Disposal: Dispose of at a recycling centre according to local laws. **Environmental**

Compliance: Follow regulations for battery and electronic waste disposal. **User Maintenance**

- Cleaning: Unplug before cleaning; use a dry cloth only. **Servicing:** Only qualified personnel

should perform repairs. **Data Protection:** Reset to factory settings before returning or disposing of the product. **Disclaimer:** Failure to follow these instructions may result in injury, death, or

property damage. The manufacturer is not liable for damage caused by improper use.

Declaration of Conformity:

I hereby declare that the product:

Product Name: Majority Moto Turntable **Model:** 1000002931/1000002932 **Brand Name:** Majority

Satisfies all the technical regulations applicable to the product within the scope of Council Directives 2014/35/EU and 2014/30/EU, 2023/826, 2012/19/EU, 2014/53/EU, 2011/65/EU&2015/863/EU, 1907/2006/EC

2014/35/EU(LVD Directive) EN IEC 62368-1:2020+A11:2020 **2014/30/EU(EMC Directive)** EN 55032:2015/A1:2020, EN 55035:2017/A11:2020, EN IEC 61000-3-2:2019/A1:2021, EN 61000-3-3:2013/A2:2021 **2023/826 (ERP Directive)** **2012/19/EU (WEEE Directive)** **2014/53/EU (RED Directive)** Draft ETSI EN 301 489-17 V3.2.6 (2023-06), EN 55032:2015/A1:2020, EN 55035:2017/A11:2020, ETSI EN 300 328 V2.2.2 (2019-07), EN 62479:2010, EN 50663:2017, EN IEC 62368-1:2020+A11:2020 **2011/65/EU&2015/863/EU (ROHS Directive)** **1907/2006/EC (REACH Directive)**

All essential test suites have been carried out. This declaration is issued under the sole responsibility of iZilla Ltd. Point of Contact: Eddie Latham | Founder

Signed:  Date: August 2024

Importer's Addresses:

UK iZilla Ltd, Newton House, 2 Pioneer Court, Histon, Cambridge, CB24 9PT

Email: techsupport@majority.co.uk

EU RP AR Experts, Po Box 5047, 3620 AA Breukelen, The Netherlands

Email: info@ar-experts.eu

US iZilla Ltd C/O A.N.Deringer Inc, 19520 Wilmington Ave, Rancho Dominguez, CA, 90220

Email: techsupport@majority.co.uk




ATTENTION
RISK OF ELECTRIC SHOCK DO NOT OPEN



WAŻNE: Przed użyciem należy uważnie przeczytać wszystkie instrukcje i zachować je na przyszłość.

MAJORITY

www.wiekszość.co.uk

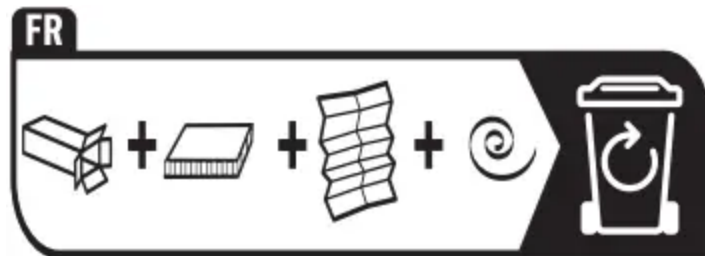

Dokumenty / Zasoby

	MAJORITY Moto Turntable [pdf] Instrukcja obsługi Moto Turntable, Moto, Gramofon
	MAJORITY MOTO Gramofon [pdf] Instrukcja obsługi 2BKRO-MOTO, 2BKROMOTO, MOTO Gramofon, MOTO, Gramofon

Odniesienia

- [Instrukcja obsługi](#)

[Manuals+](#) | [Prześlij](#) | [Głębokie wyszukiwanie](#) | [Polityka prywatności](#) | [@manuals.plus](#) | [YouTube](#)

Ta strona internetowa jest niezależną publikacją i nie jest ani powiązana, ani popierana przez żadnego z właścicieli znaków towarowych. Znak słowny „Bluetooth®” i logo są zarejestrowanymi znakami towarowymi należącymi do Bluetooth SIG, Inc. Znak słowny „Wi-Fi®” i logo są zarejestrowanymi znakami towarowymi należącymi do Wi-Fi Alliance. Jakiegolwiek użycie tych znaków na tej stronie internetowej nie oznacza żadnego powiązania ani poparcia.

