



INSTRUKCJA

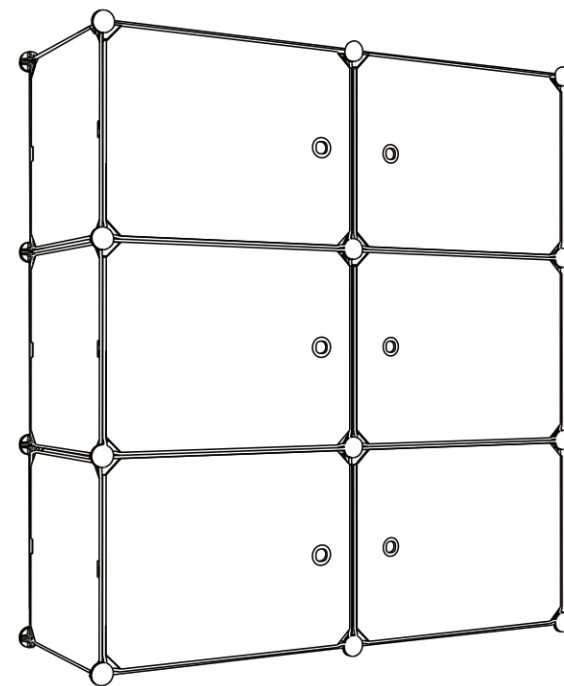


MONTAŻ


- ① Używając łączników panele poziome (A) z panelami pionowymi B, jak na poniższym rysunku, panele powinny być maksymalnie dociśnięte wewnątrz łączników. Wszystkie łączniki powinny być ułożone w tym samym kierunku.

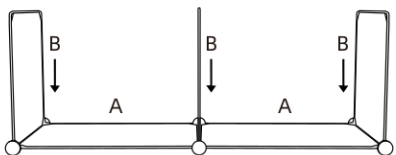


- ② Zamontuj 4 haczyki w przerwie materiału na panelu pionowym, tak jak na poniższym rysunku.

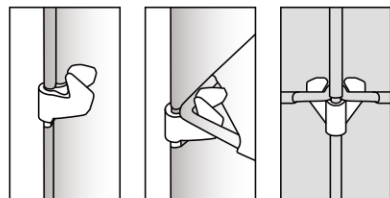


- ③ Zamontuj panele tylne (A) oraz łączniki tak jak pokazane na poniższym rysunku. Wszystkie łączniki powinny być ułożone w tym samym kierunku.

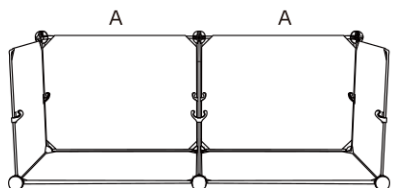


- ④ Zamontuj panele górne (A), wsuwając panel w łączniki, tak na zaprezentowano na poniższym rysunku.

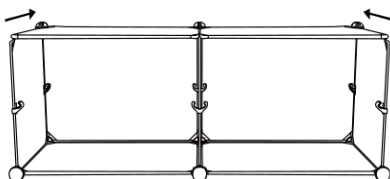


- ⑤ Zamontuj łączniki z drugiej strony panelu górnego, tak aby zablokować panel. Wszystkie łączniki powinny być ułożone w tym samym kierunku.

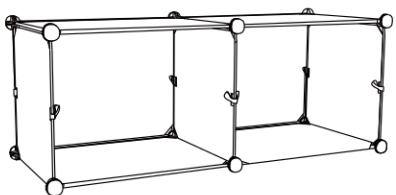


- ⑥ Umieść panele (A) na haczykach wewnątrz szafki, tak jak pokazano na rysunku.

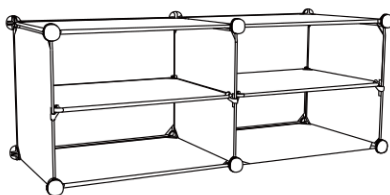

- ⑦ Wsuń drzwiczki w łączniki, upewnij się że poprawnie się otwierają.

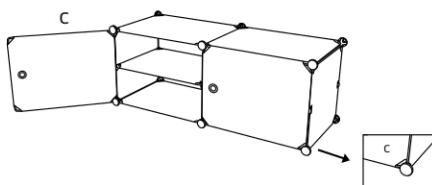

- ⑧ Powtórz kroki 1-7 dla każdego kolejnego poziomu szafki.

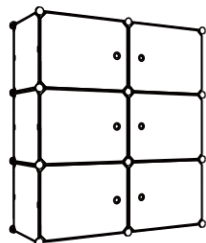

Uwagi

1. Przed rozpoczęciem montażu upewnij się, że w zestawie znajdują się wszystkie elementy potrzebne do złożenia szafki.
2. Użyj dołączonego młoteczka, aby upewnić się że półki są odpowiednio ciasno połączone z łącznikami, półki powinny być wsunięte jak najgłębiej wewnątrz łącznika.

Szafkę czyścić delikatnymi środkami czystości, nie szorować.

Unikać opierania się o szafkę.

Szafka nie jest zabawką, dzieci w pobliżu szafki powinny znajdować się pod nadzorem osoby dorosłej. Nie należy pozwalać dzieciom na wchodzenie na szafkę, przechylanie, bądź wyciąganie łączników.


OSTRZEŻENIE! Elementy produktu oraz jego opakowanie nie są zabawkami nie są zabawkami, trzymać z daleka od dzieci, małe elementy oraz opakowania foliowe mogą grozić uduszeniem.

A



x20

B

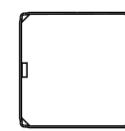

x9

C



x6

D




x20

E




x24

F



Instrukcja


G




Młotek

Instruction:


- ① Use the connectors to connect the bottom panels A and side panels B, and all sides need to be installed to the deepest end of the connectors. Besides, all the connectors need to be installed in the same direction. Note: Please do not install back or top panels at this step, or the installation of the white buckles will be affected.

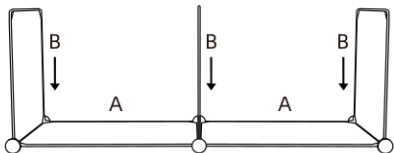


- ② Install the buckle in the middle of side panels' outer frame, where the pp panels do not cover, with the hook facing inwards. The buckle can fix the partition boards for stratifying.

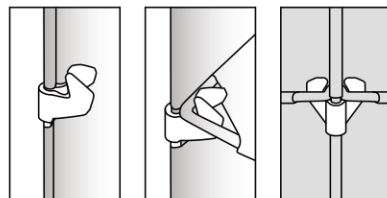


- ③ Install the back panels and connectors as shown, please make sure all connectors are in the same direction.

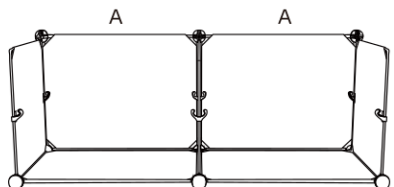


- ④ Install the top panels as shown, and the pp panels need to be installed to the deepest end of the connectors. Do not install the door panels at this step.

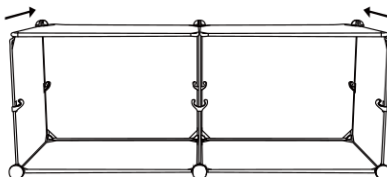


- ⑤ Install the white hook, along the side panels as shown, please complete it before installing front connector, otherwise the hook cannot be installed smoothly.

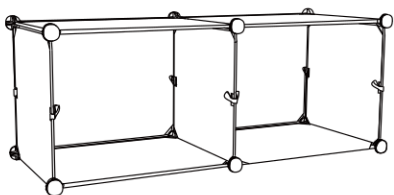


- ⑥ Install the connectors as shown, snap the top panels and side panels into it, then install the partition boards.

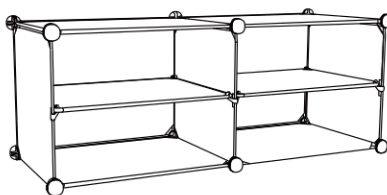

- ⑦ Tightly insert door panel in to lower notch of connect.

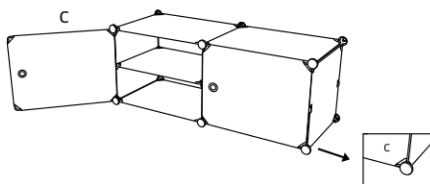

- ⑧ Do the same steps as 1-7 for the following layers.

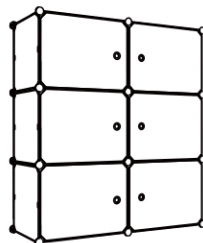

Note:

1:Please strictly follow the steps to assemble. Before assembling the top panels, you need to assemble the white buckle of the back panels first, otherwise the buckle cannot be installed smoothly.

2:The buckle comes with cross ripples inside. After the assembling, press toward each direction firmly to ensure that the partition boards and the buckle are closely inserted together, and note that the board is inserted into the deepest end of the buckle (the parcels are equipped with a wooden hammer, which can be completed with it). Do not use too much force when assembling the black buckles, otherwise they may be broken easily.


Package Instruction

A



PP panels A (30 x 40 cm) * 20

B

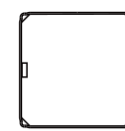

PP panels B (30 x 30 cm) * 9

C



Door panels C (30 x 40 cm) * 6

D




Two-sided buckle * 20
(2 spare parts included)

E




Connectors * 24
(4 spare parts included)

F



Manual * 1

G



Small wooden hammer * 1