





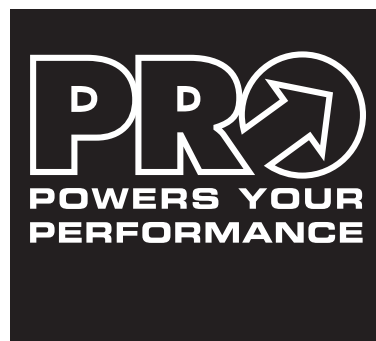


DROPPER SEATPOST
INSTALLATION


PRSI0058

PRO DROPPER POST LINE-UP

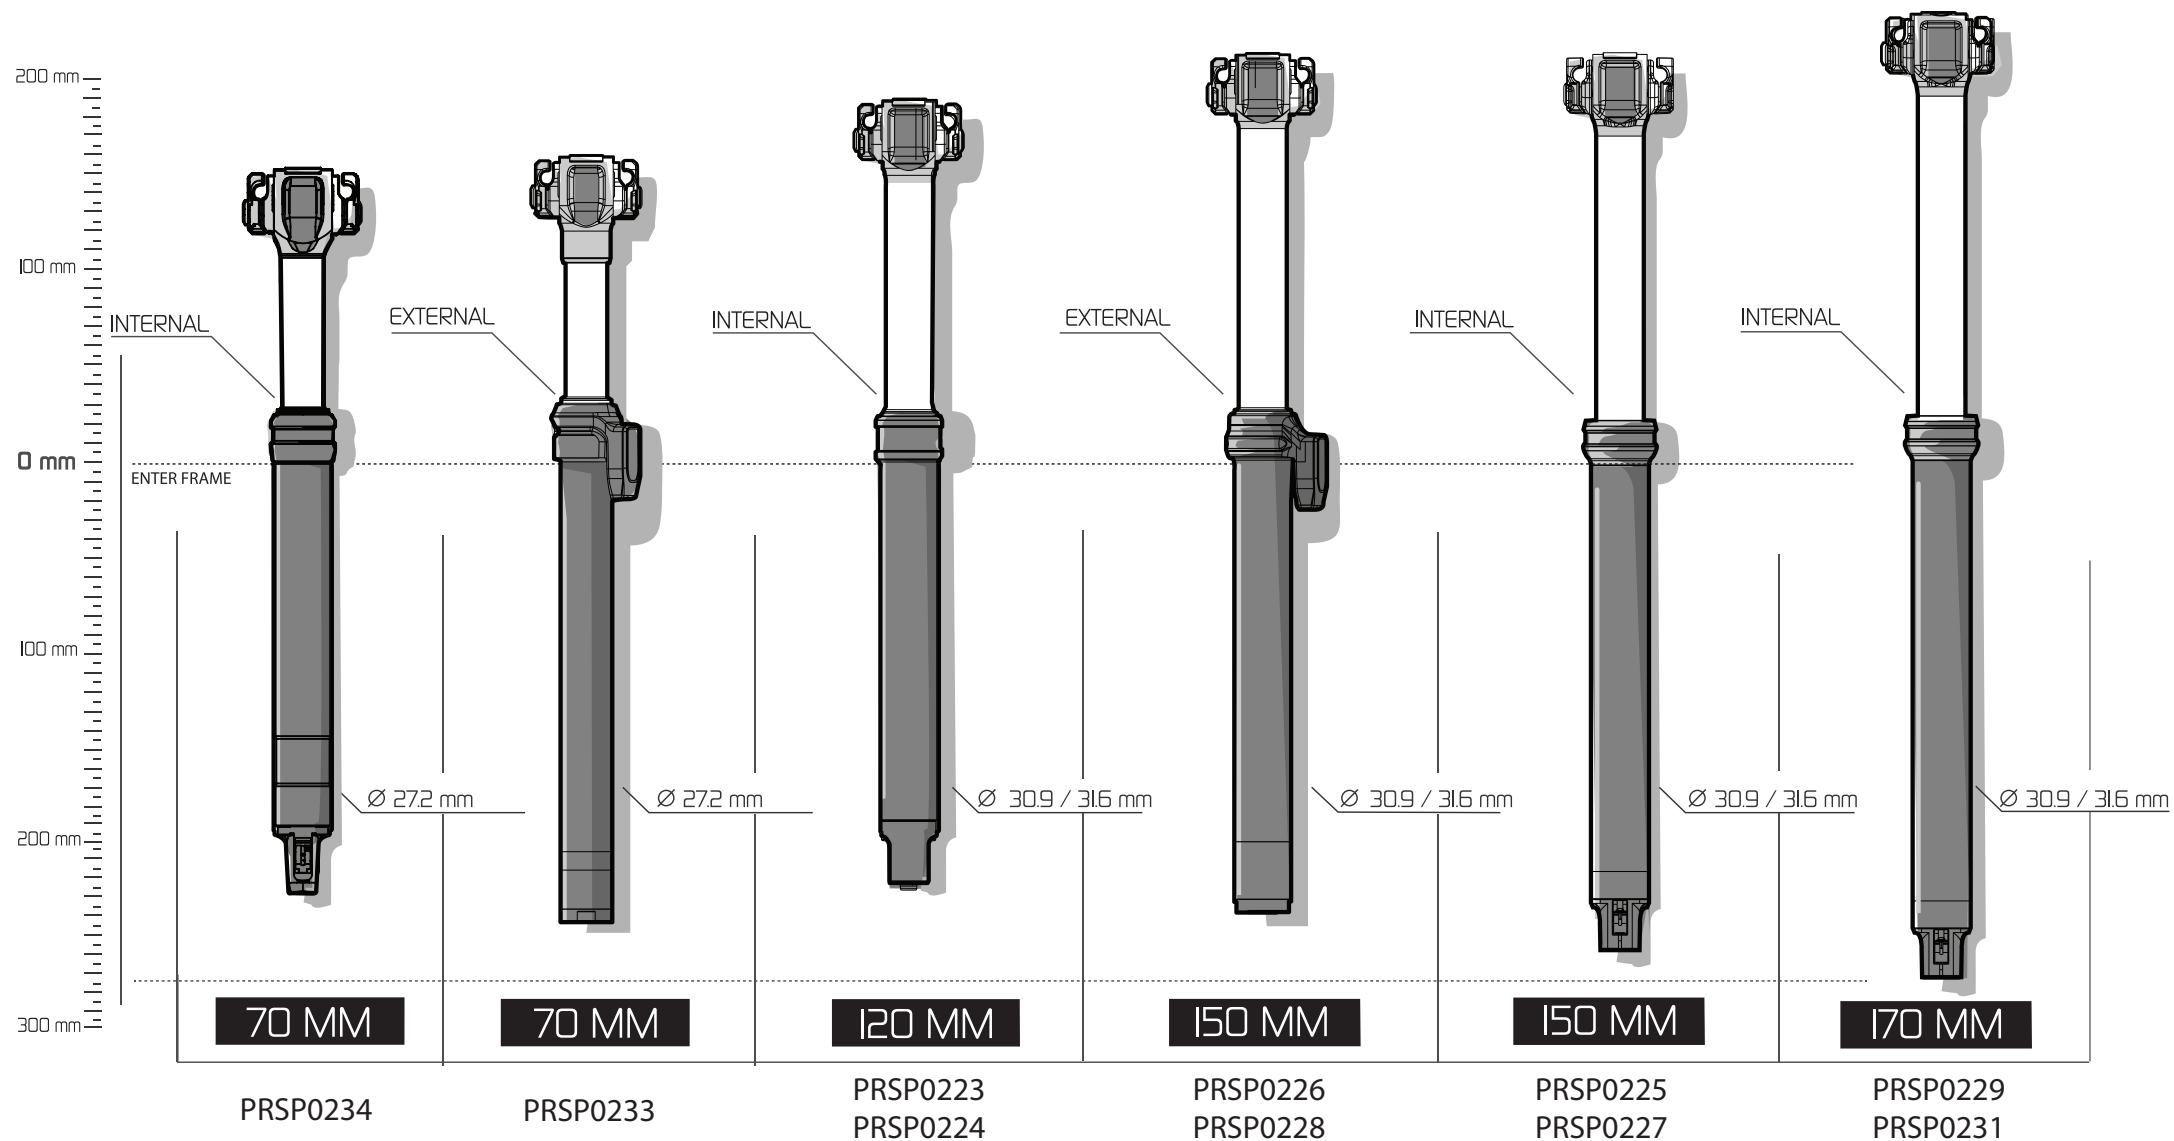


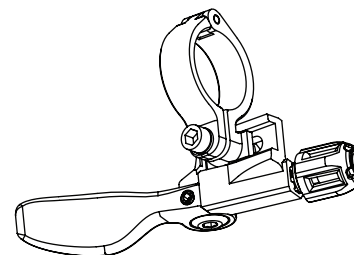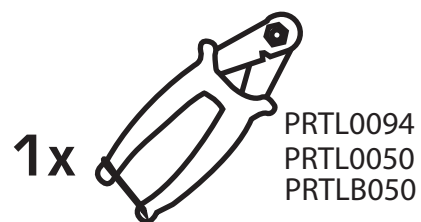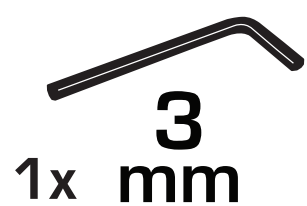





A1. PRAC0211






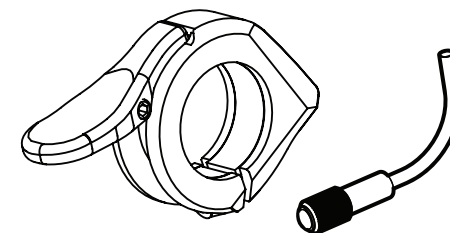


A2. PRAC0212

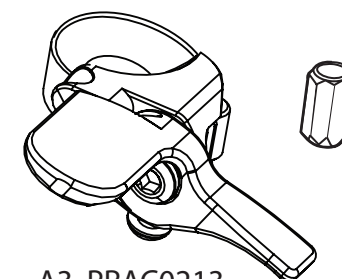


A3. PRAC0213

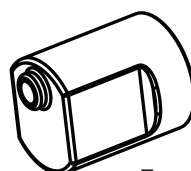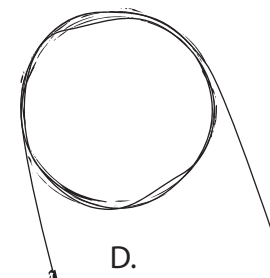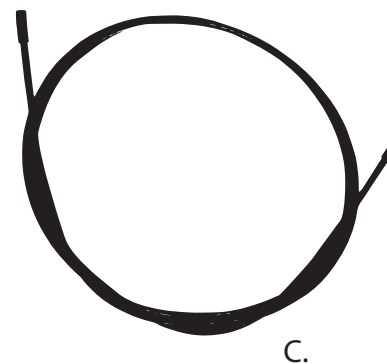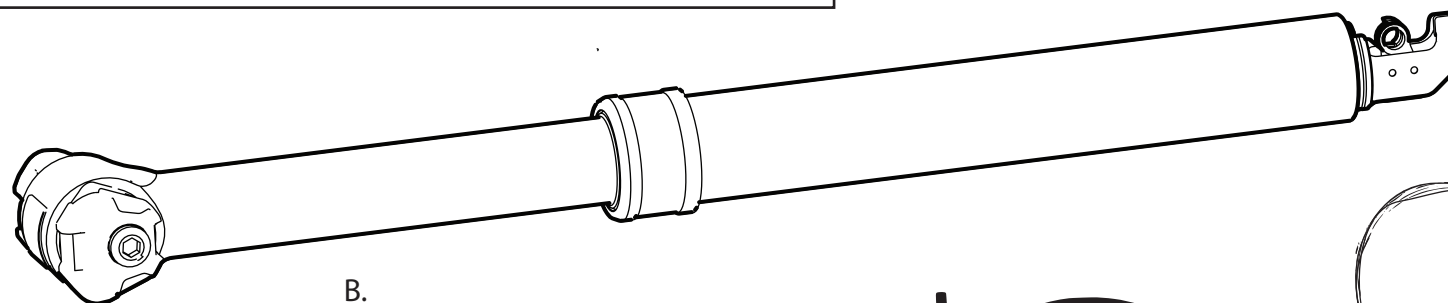

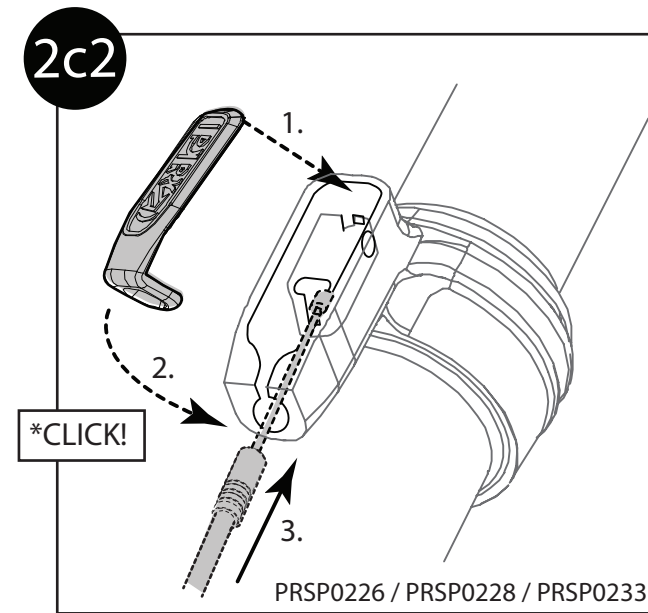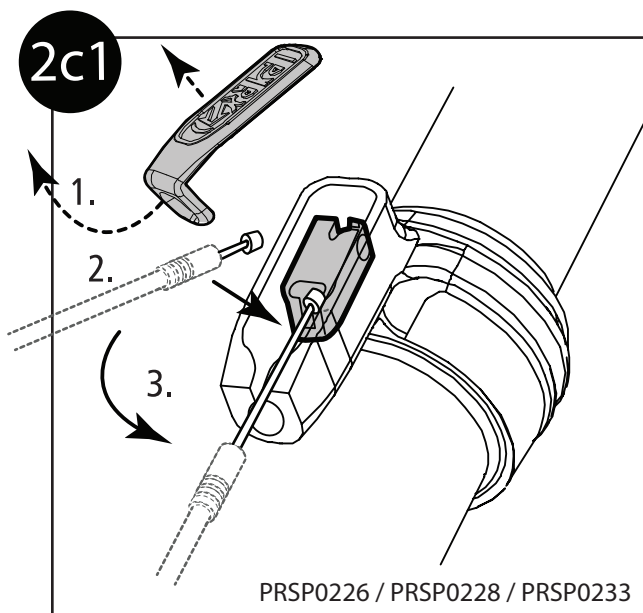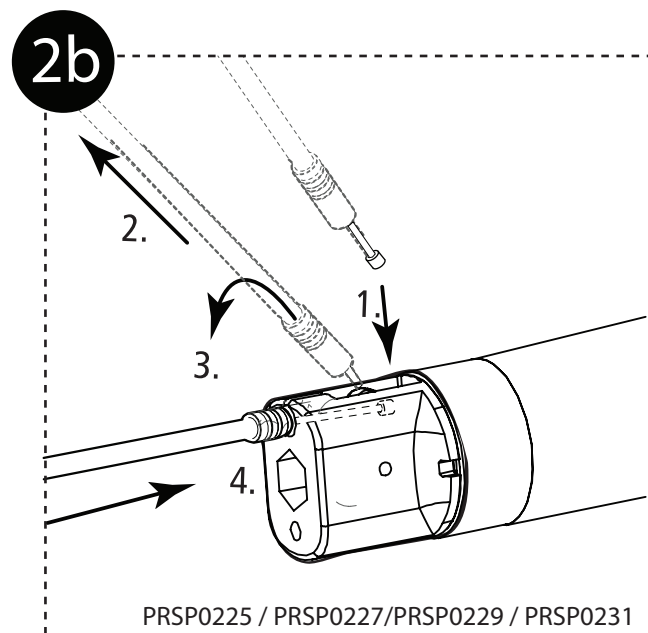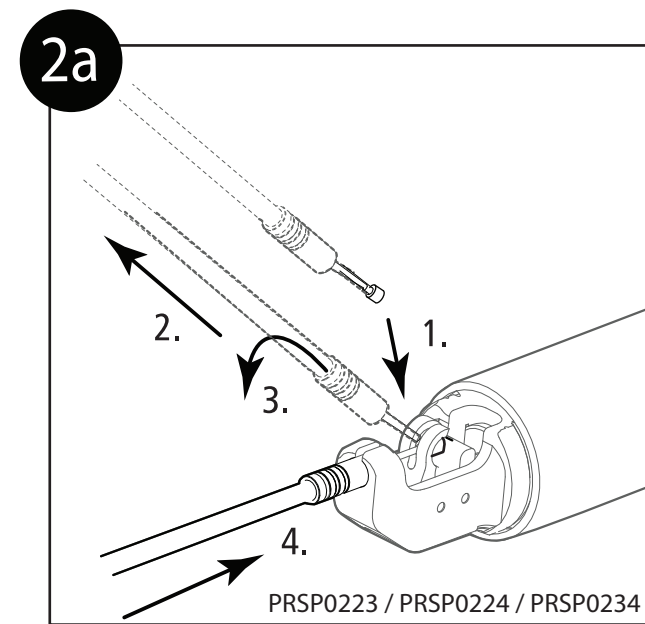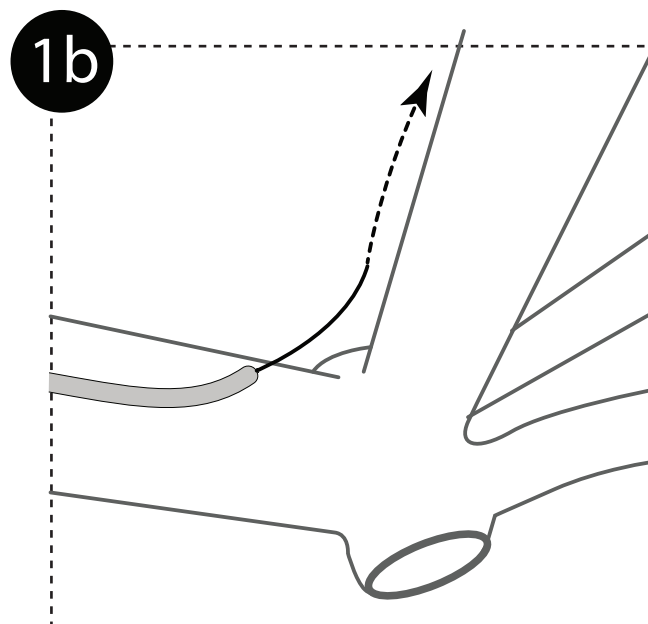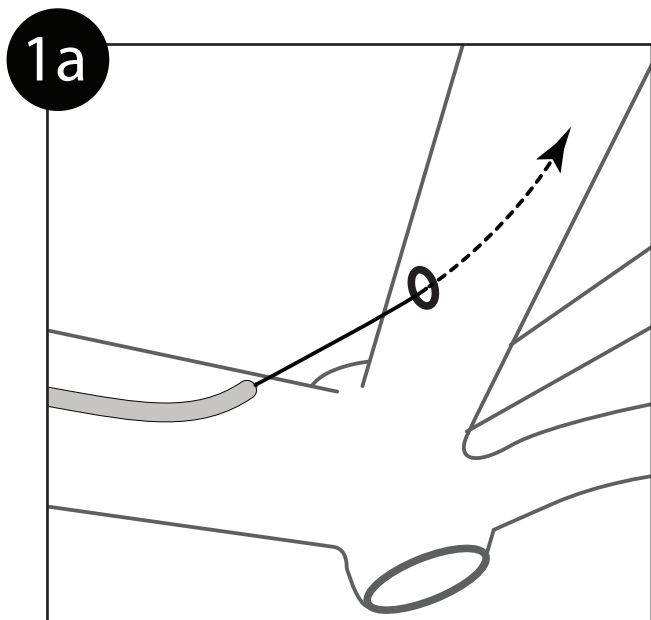


3a

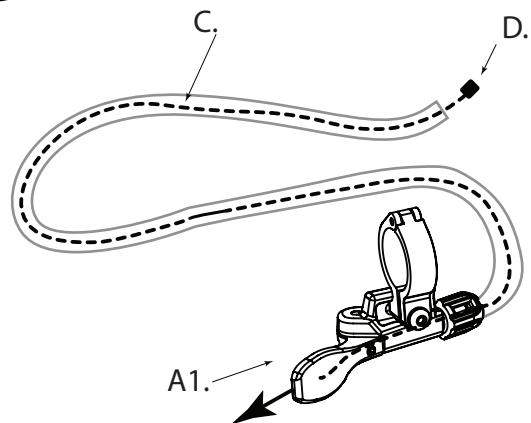


PRSP0225 / PRSP0227/PRSP0229 / PRSP0231

3b

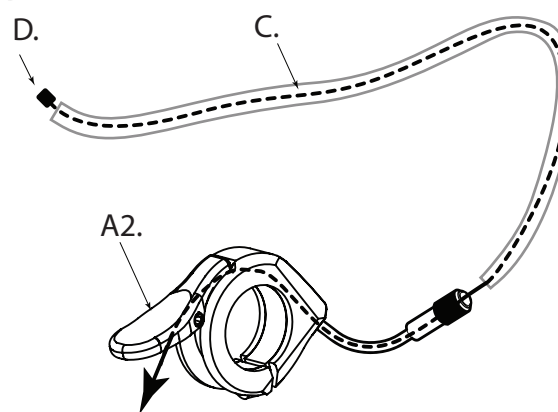


PRSP0226 / PRSP0228 / PRSP0233

3c






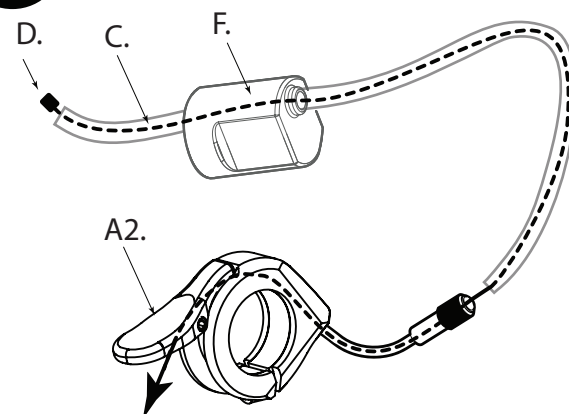


PRSP0223 / PRSP0224

3d

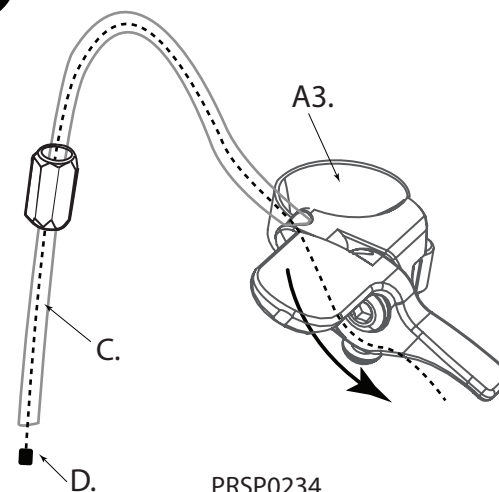


PRSP0234

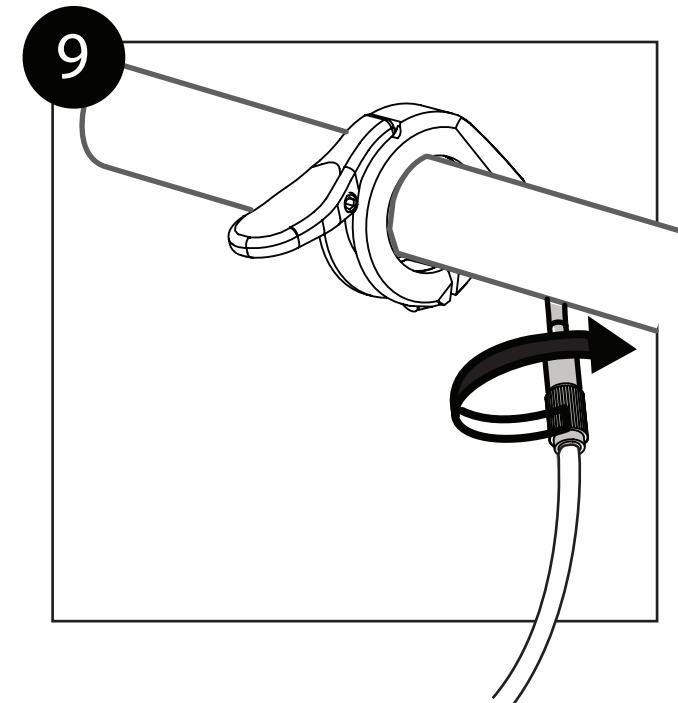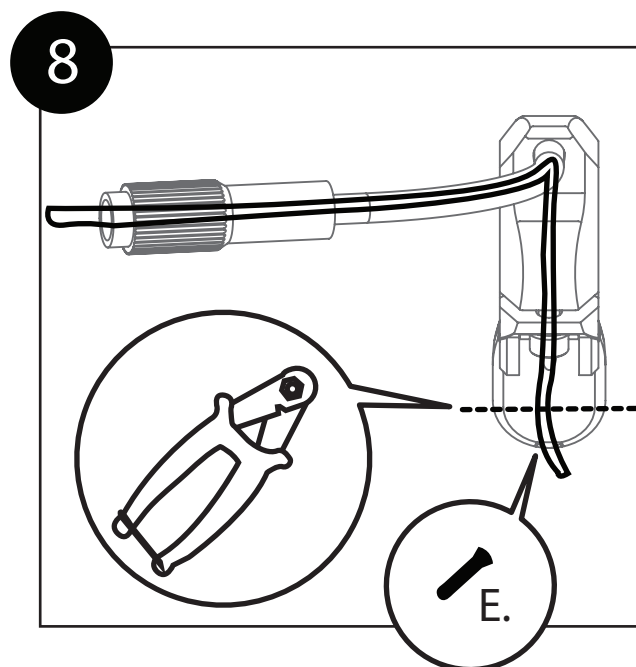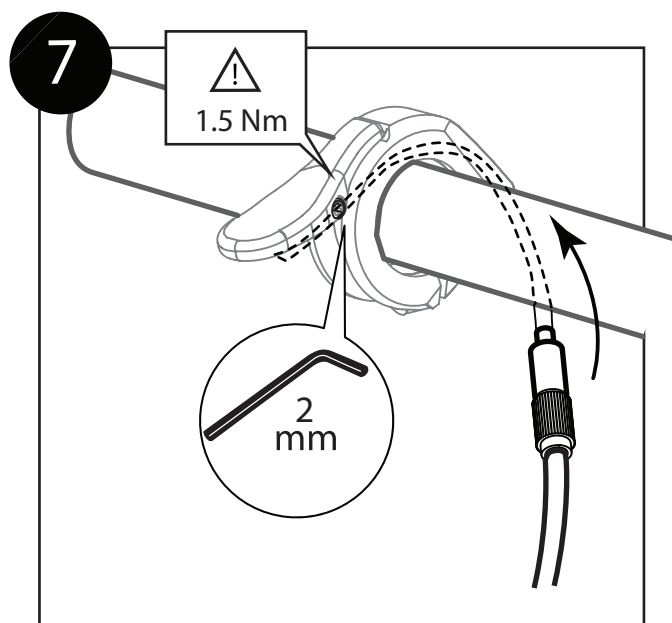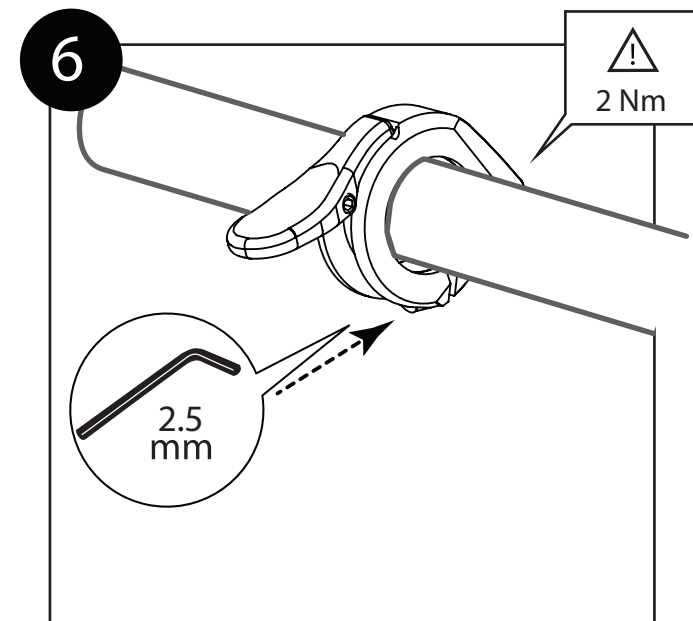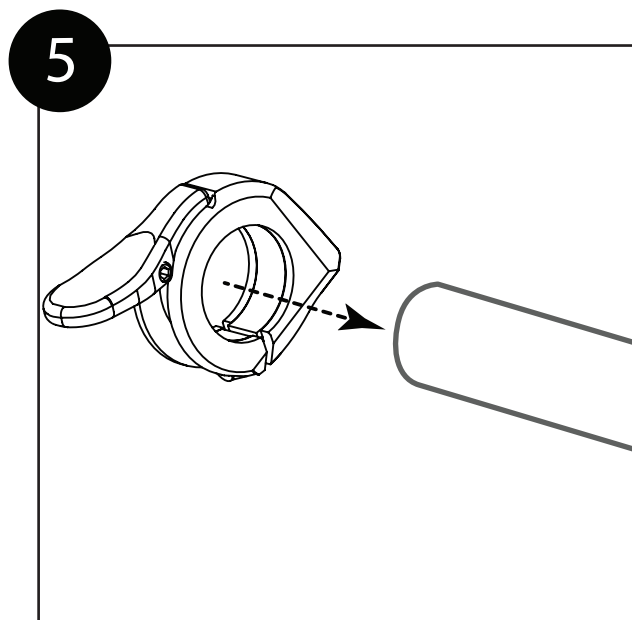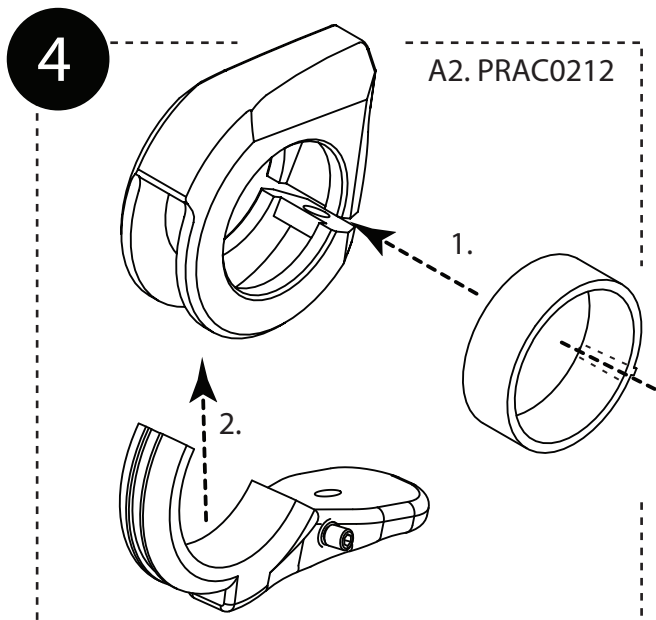


10


A1. PRAC0211

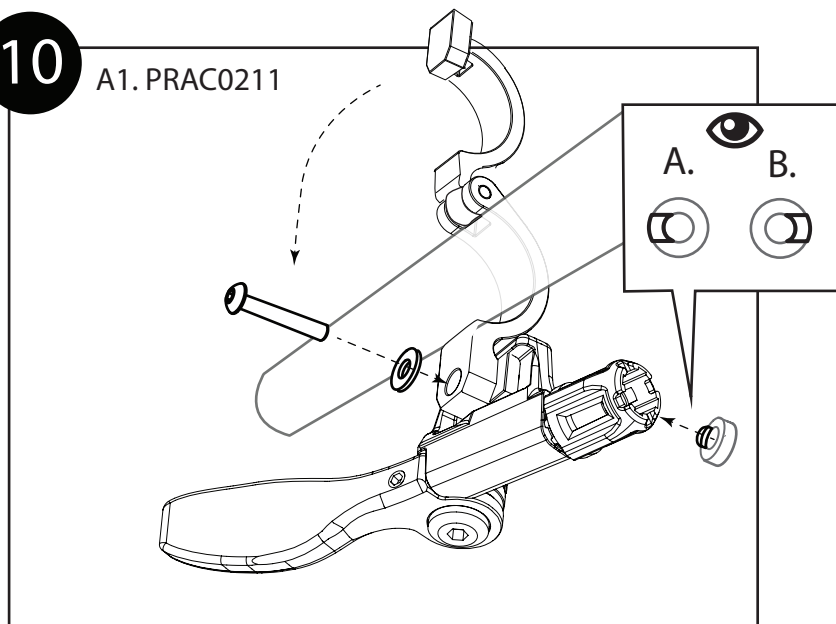


11

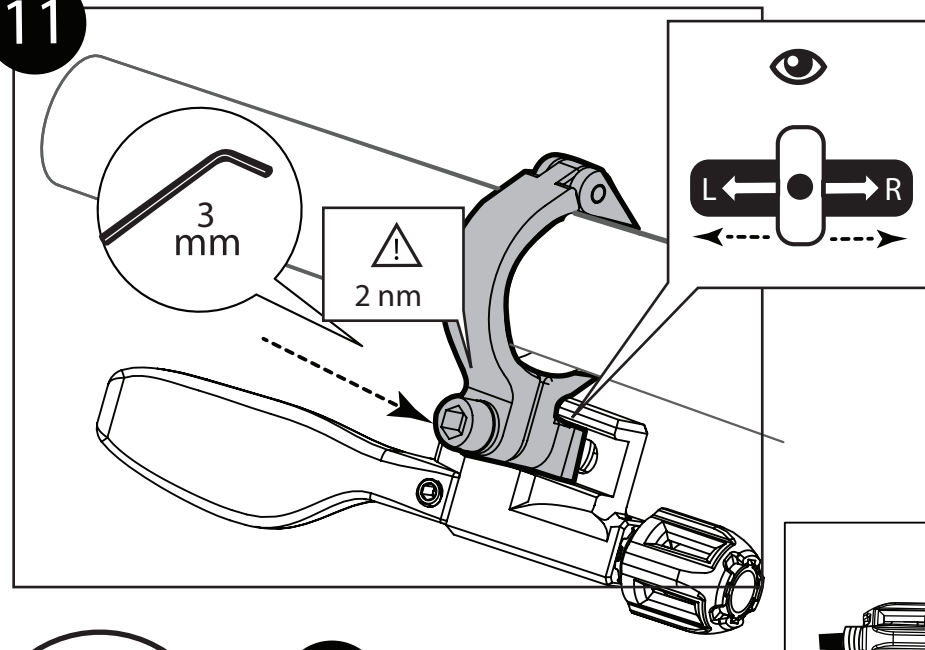


12






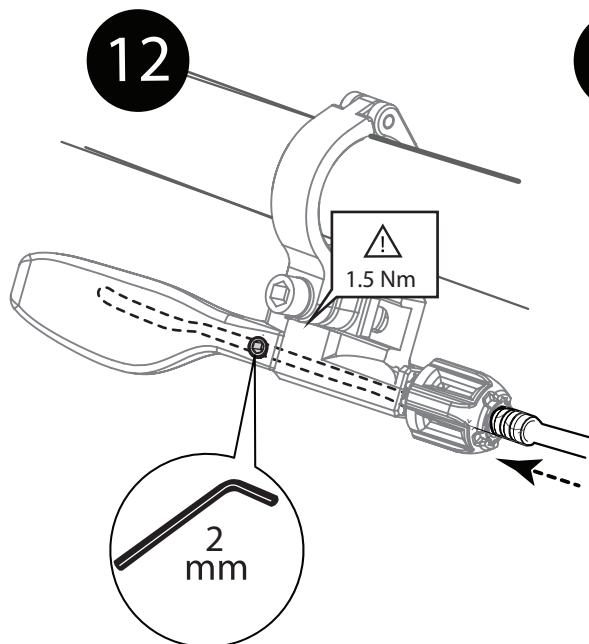


13

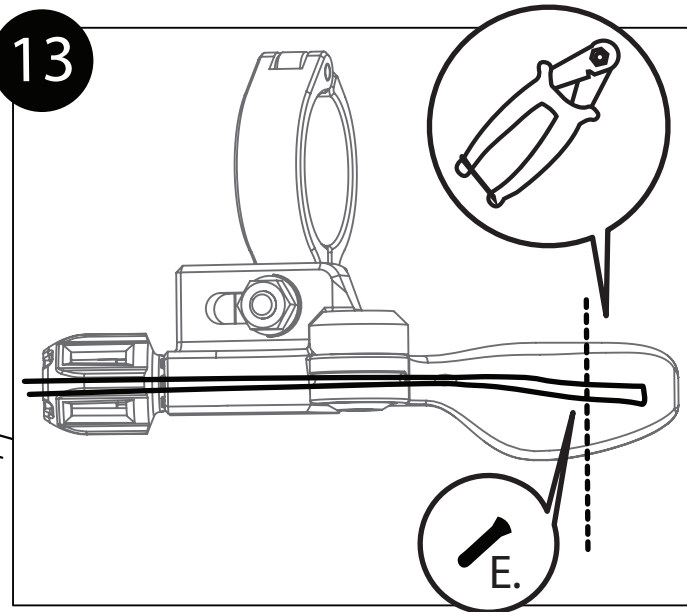

14

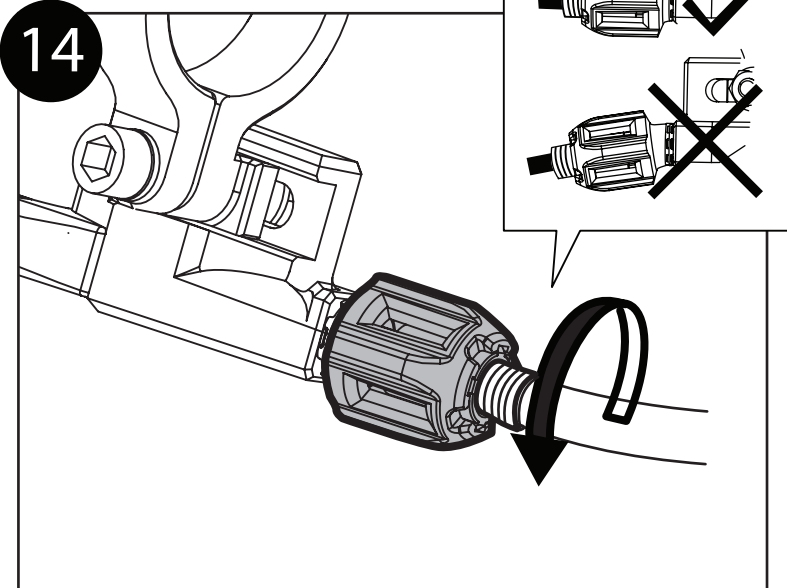

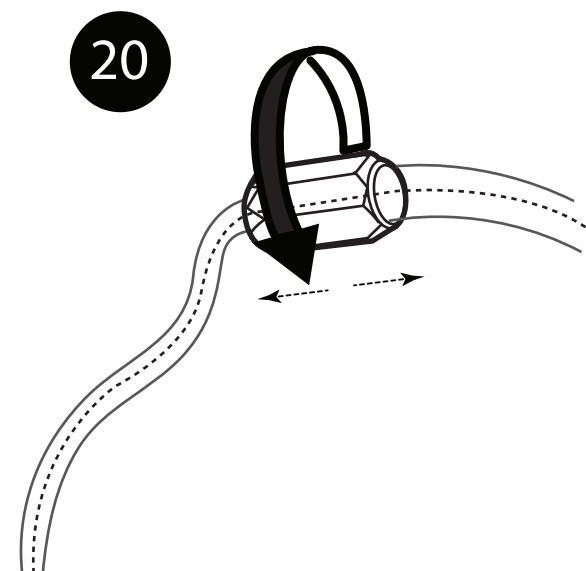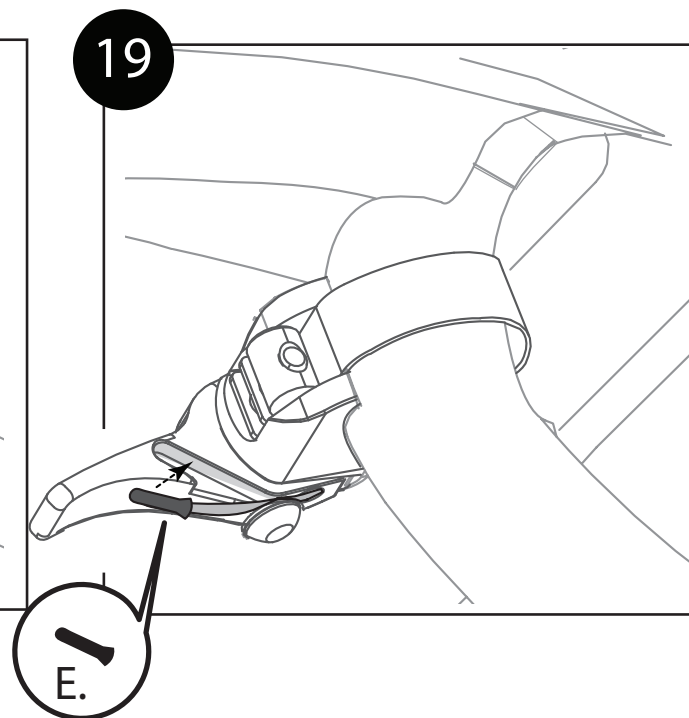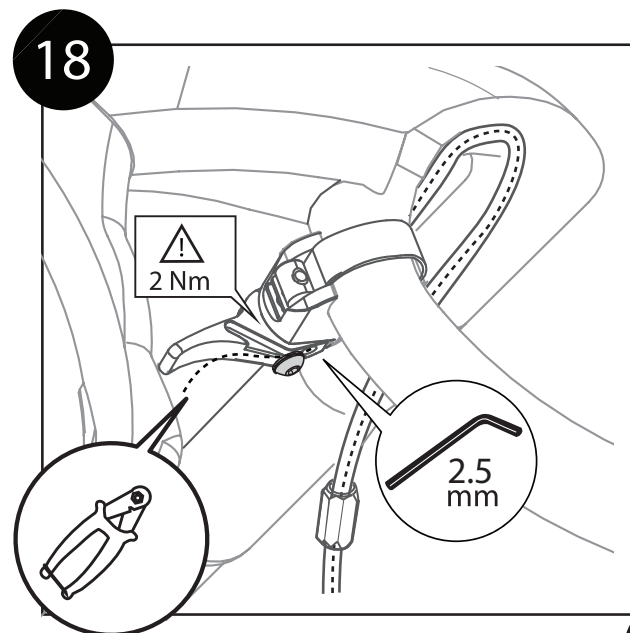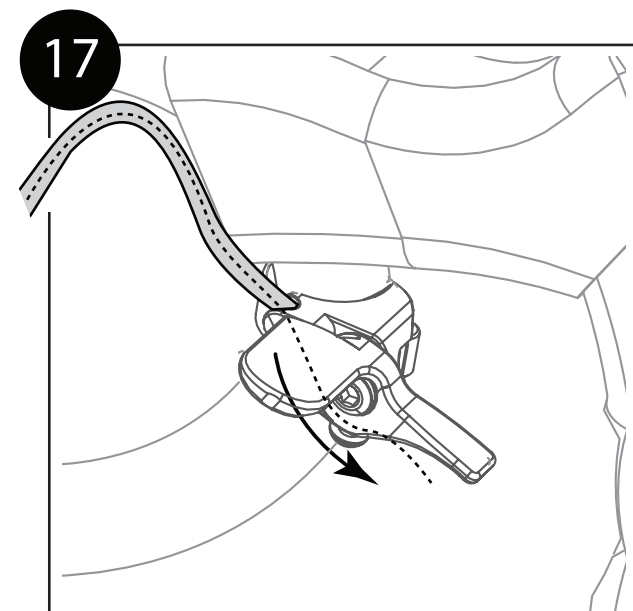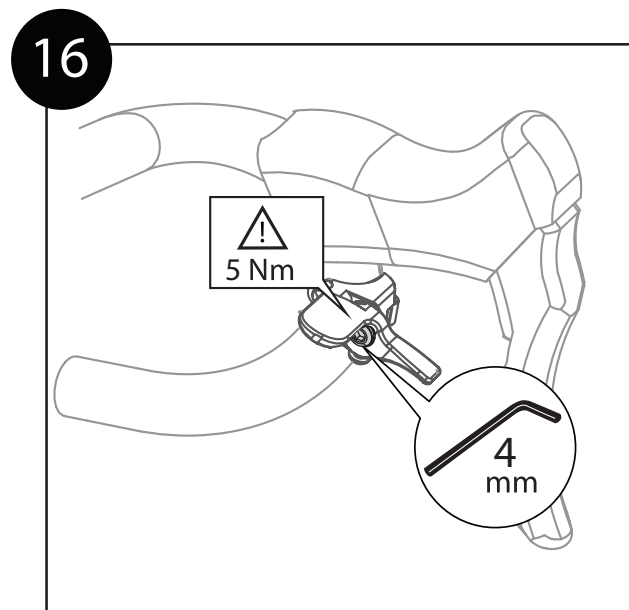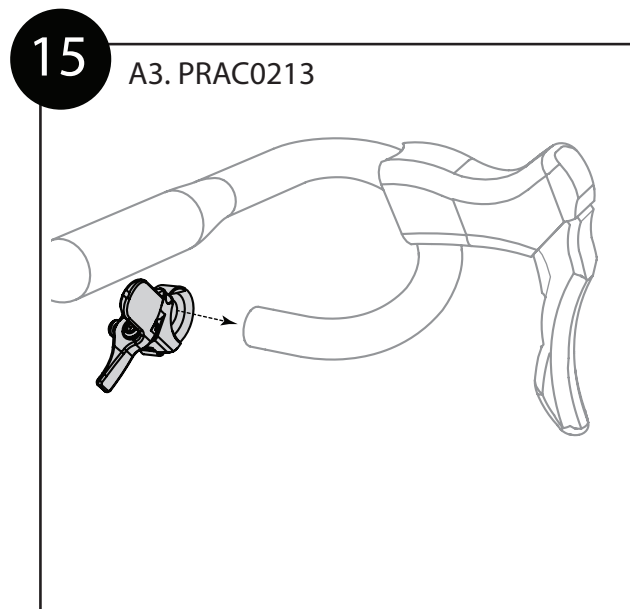



WWW.PRO-BIKEGEAR.COM